



Scan for full manual

602T/R Quick Start Guide

This guide helps you install and use your 602T/R for the first time.


Go to https://k.kramerav.com/support/product_downloads.asp to download the latest user manual and check if firmware upgrades are available.

Step 1: Capture the EDID

- Receiver
- ② 2 Power supplies (5V DC)
- 1 Quick start guide

Step 2: Get to know your 602T/R


Capture the EDID of the display device if the display has a resolution different than 1600x1200.

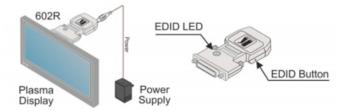

- 1. Connect the power to the display.
- 2. Connect the power to the 602T
- 3. Push the EDID button.
- 4. Connect the 602T directly to the display device (the LED flashes).
- 5. When the LED is off, disconnect the 602T from the display.

Step 3: Connect the transmitter/receiver pair

Always switch OFF the power on each device before connecting it to your 602T/R.

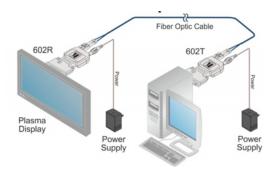

- 1. Connect the power to the 616R.
- 2. Connect the LC fiber cables to the 616T and 616R modules.
- 3. Plug the 616T DVI connector directly to the DVI connector of the PC.
- 4. Plug the 616R DVI connector directly to the DVI connector of the display.
- 5. Connect the power to the PC and the display.

To achieve specified extension distances, use the recommended Kramer cables available atwww.kramerav.com/product/602T/602R. Using third-party cables may cause damage!

616T/R Quick Start

Step 4: Technical Specifications

INPUTS:	DVI IN (602T), 2 LC optical connectors (602R)
OUTPUTS:	2 LC optical connectors (602T), DVI OUT (602R)
RESOLUTION:	Up to WUXGA @60Hz (1.65Gbps)
POWER SOURCE:	5V DC, 570mA max. (602T); 570mA max. (602R)
OPERATING TEMPERATURE:	0° to +40°C (32° to 104°F)
STORAGE TEMPERATURE:	-40° to +70°C (-40° to 158°F)
HUMIDITY:	10% to 85%, RHL non-condensing
DIMENSIONS:	3.9 cm x 6.9 cm x 1.5 cm (1.5" x 2.83" x 0.75") W, D, H
WEIGHT:	0.14kg (0.31lbs) approx.
ACCESSORIES:	2 power supplies
OPTIONS:	C-2LC/2LC 2 LC fiber optic cable
Specifications are subject to change without notice at http://www.kramerelectronics.com	

