KRAMER





DIP-31 Quick Start Guide

This guide helps you install and use your DIP-31 for the first time.

Go to www.kramerav.com/downloads/DIP-31 to download the latest user manual and check if firmware upgrades are available.

Step 1: Check what's in the box

- **DIP-31 Automatic Video Switcher**
- $\mathbf{\mathbf{V}}$ 1 Power supply (12V DC)

- 1 Set of rack ears 4 Rubber feet
- $\mathbf{\mathbf{V}}$ 1 Quick start guide

Step 2: Get to know your DIP-31



#	Feature		Function
1	SELECT Button HDMI™ IN 1		Press to select the HDMI In 1 input. When HDMI In 1 is selected, the button: Lights red when external audio is selected Lights green when HDMI In 1 is selected
2		HDMI 1 Connector	Connect to the first HDMI source
3	SELECT Button HDMI IN 2		Press to select the HDMI In 2 input. When HDMI In 2 is selected, the button: Lights red when external audio is selected Lights green when HDMI In 2 is selected
4		HDMI 2 Connector	Connect to the second HDMI source
5	SELECT Button		Press to select the PC graphics input. When PC graphics is selected, the button: Lights red when external audio is selected Lights green when the PC input selected
6		PC Graphics 15-pin HD Connector	Connect to the PC graphics source, (for example, a laptop)
7	AUDIO IN 3.5mm Mini Jack		Connect to the unbalanced, stereo audio source, (for example, the audio output of the laptop)
8	Step-In Button		Press to take control of the input that this device is connected to on a compatible switcher
9	ON LED		Lights green when the device is powered on





Rev:



#	Feature	Function	
10	AUDIO OUT 3.5mm Mini Jack	Connect to the unbalanced, stereo audio acceptor, (for example, active speakers)	
11	ETHERNET RJ-45 Connector	Connect to the LAN, (Ethernet traffic or PC controller)	
12	RS-232 CONTROL 3-pin Terminal Block	Connect to a serial controller or PC	
13	RS-232 DATA 3-pin Terminal Block	Connect to a serial data source or acceptor	
14	PC/HDMI Remote Toggle Switch Terminal Block	Connect to a remote switch to toggle between the PC graphics and HDMI inputs	
15	Remote Contact-closure 4-pin Terminal Block	Connect to remote momentary switches to control step-in and audio volume	
16	FACTORY RESET Button	Short press to reboot, long press to reset the device to factory default parameters	
17	SETUP 4-way DIP-switch	Switches for setting the device behavior (see Step 5)	
18	PROG Mini USB Connector	Connect to a PC to perform a firmware upgrade	
19	HDMI OUT Connector	Connect to a compatible HDMI display	
20	12V DC Connector	Connect to the supplied power adapter	
The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.			

Step 3: Mount DIP-31

Install DIP-31 using one of the following methods:

- Attach the rubber feet and place the unit on a flat surface.
- Fasten a bracket (included) on each side of the unit and attach it to a flat surface (see <u>www.kramerav.com/downloads/DIP-31</u>).
- Mount the unit in a rack using the recommended rack adapter (see <u>www.kramerav.com/product/DIP-31</u>).



- Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.
- Avoid uneven mechanical loading.
- Appropriate consideration of equipment nameplate ratings should be used for avoiding overloading of the circuits.
 Reliable earthing of rack-mounted equipment should be maintained.
 - Maximum mounting height for the device is 2 meters.

Step 4: Connect inputs and outputs

Always switch OFF the power on each device before connecting it to your **DIP-31**. For best results, we recommend that you always use Kramer high-performance cables to connect AV equipment to the **DIP-31**.



Step 5: Set DIP-switches

Video Switching Selection

DIP-Switch 2	Video Input Selection
Off (up)	Automatic—Last connected. Where more than one source is connected the last one connected has priority
On (down)	Automatic—Priority selection. HDMI 1 \rightarrow HDMI 2 \rightarrow PC IN (default, high to low priority)
Off (up)	Manual
On (down)	Manual
	Off (up) On (down) Off (up) On (down)

Γ			
1	2	3	4
ON			

Audio Switching Selection

DIP-switch 3	DIP-switch 4	Audio Input Selection	
Off (up)	Off (up)	Automatic—Priority selection.	
		Embedded HDMI \rightarrow analog Audio In (high to low priority)	
Off (up)	On (down)	Automatic—Priority selection.	
		Analog Audio In → embedded HDMI (high to low priority)	
On (down)	Off (up)	Embedded HDMI	
On (down)	On (down)	Analog Audio In	

Step 6: Connect power

Connect the 12V DC power adapter to the DIP-31 and plug it into the mains electricity.

Safety Instructions (See <u>www.kramerav.com</u> for updated safety information) Caution: • For products with relay terminals and GPI\O ports, please refer to the permitted rating for an external connection, located next to the terminal or in the User Manual. • There are no operator serviceable parts inside the unit. Warning:



- Use only the power cord that is supplied with the unit.
 Disconnect the power and unplug the unit from the wall before installing.

Step 7: Operate DIP-31

To operate and control the DIP-31 use:

Front Panel	Remote Control Switches		
HDMI 1 Select	PC/HDMI—input selection/VGA phase shift	Short press—Input toggle Long press—Adjusts the VGA phase shift)	
PC IN Select	adjustment STEP IN	Activates the step-in function if relevant	
STEP-IN	VOL UP—analog audio output volume increase control	Short press—Increases the volume one step Long press—Increases the volume from 0% to 100% in 10 seconds	
	VOL DN—analog audio output volume decrease control	Short press—Decreases the volume one step Long press—Decreases the volume from 100% to 0% in 10 seconds	
	GND	Connect to the common side of the switches	



Web Pages from IP 192.168.1.39

Kramer DIP-31 Contr	oller		
Switching			
Device Settings			
Remote Device Control			
Video & Audio Settings			
Authentication		Switching Manual Input Selection	Volume
EDID		1: HDMI 1 🔹	
About Us		2: HDMI 2	
		3: VGA	
			Muted
		Audio Source; Analog	
Upload/Save Configuration			
Upload Save			

Default RS-232 Communication Parameters

Parameter	Values
Baud Rate	115200
Data Bits	1
Stop Bits	1
Parity	None
Command Format	ASCII

Technical Specifications

Inputs	Video:	2 HDMI on HDMI connectors		
		1 VGA on a 15-pin HD (F) connector		
	Audio:	1 Unbalanced stereo audio 1V RMS (nominal) on a 3.5mm mini jack		
Outputs	Video:	1 HDMI on an HDMI connector		
	Audio:	1 Unbalanced stereo audio 1V RMS (nominal) on a 3.5mm mini jack		
Ports	1 Ethernet o	n an RJ-45 connector		
	1 RS-232 3-	1 RS-232 3-pin terminal block control port		
	1 RS-232 3-	1 RS-232 3-pin terminal block data port		
	1 USB on m	1 USB on mini USB connector		
Controls	Remote swit device reset	tches for input switching, step-in, volume control, and		
Standards	HDMI with D	Deep Color, x.v.Color™ and 3D		
	HDCP—wor	ks with sources that support HDCP repeater mode		
Maximum Analog Audio Levels	3.1V p-p			
THD	0.013%			
SNR	75dB			
Supported Web Browsers	Windows 7 a	and higher:		
	 Internet 	 Internet Explorer (32/64 bit) version 11 		
	Firefox	Firefox version 30		
	Chrom	Chrome version 35		
	MAC:	MAC:		
	Chrom	Chrome version 35		
	Firefox version 27			
	Safari version 7			
	Android OS:			
	Chrome version 35			
	Chrome version 35			
	Children	version 7		
Power Consumption	12V DC, 600mA			
	0° to +40°C (32° to 104°F)			
Storage Temperature	-40° to $+70^{\circ}$ C (-40° to 158° F)			
Humidity	10% to 90%, RHL non-condensing			
Dimensions	Aluminum 19.75cm x 11.5cm x 2.54cm (7.20" x 4.52" x 4.0"\\\\\ D. L			
Dimensions	$10.70000 \times 11.0000 \times 2.04000 (7.30 \times 4.35 \times 1.0) W, D, \Pi$			
Shipping Dimonsions	0.45 m x 16 Fem x 5 2 m (12 6" x 6 5" x 2 0") W. D. H			
Shipping Dimensions	34.00H X 10.00H X 0.20H (10.0 X 0.0 X 2.0) W, D, H			
Snipping weight	1.03Kg (2.3lbs) approx.			
Environmental Regulatory Compliance	Complies wi	in appropriate requirements of RoHs and WEEE		
Included Accessories	Power adapter			
Warranty	7 years parts and labor			

