



PS-34 Installation Sheet

This guide helps you install and use your PS-34 external PoE power supply for the first time.

Scan for full manual


PS-34 is a hot-swappable power supply for the VS-34FD modular matrix. This is a replacement or redundant power supply; the matrix is able to operate with one power supply installed.



All normal static discharge precaution measures must be observed to prevent damage to the equipment.

To install PS-34:

1. Remove the new power supply from its shipping box and anti-static bag. Reserve the original packaging including the anti-static bag for future use.
2. Remove the blank panel or the malfunctioning power supply by releasing the four thumbscrews.
3. Insert the new power supply and press firmly until the front panel of the power supply is flush with the front panel of the chassis.
4. Tighten the four thumbscrews.

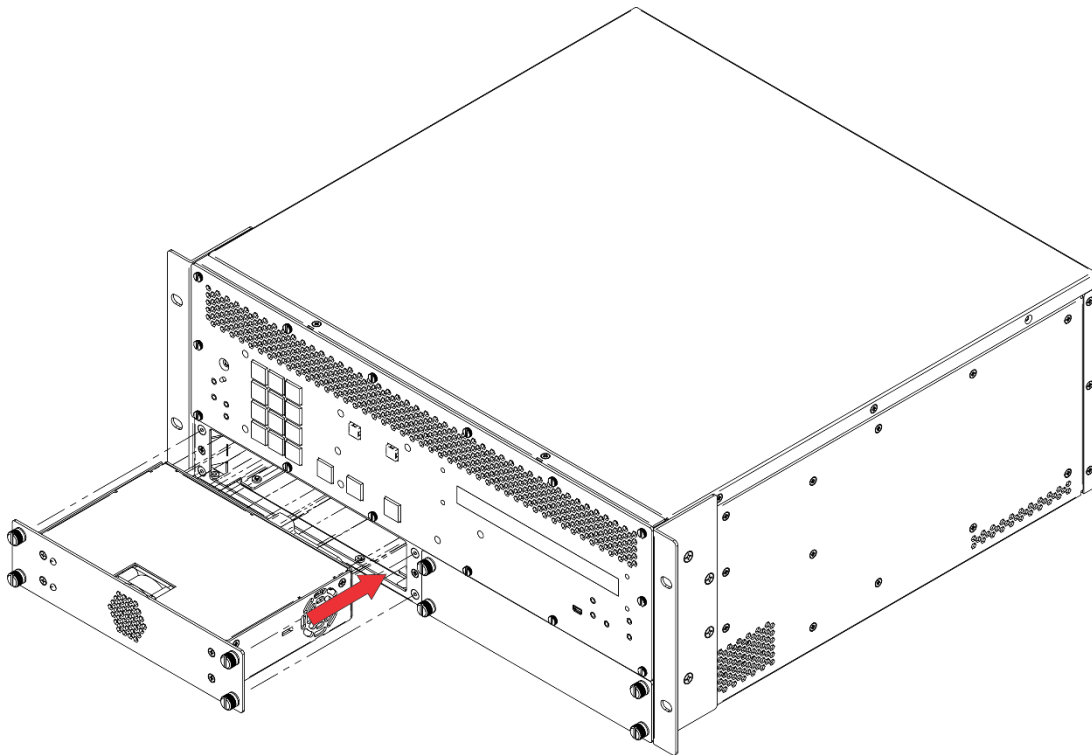

Safety Instructions



- Caution:** There are no operator serviceable parts inside the unit.
Warning: Use only the power cord that is supplied with the unit.
Warning: Do not open the unit. High voltages can cause electrical shock! Servicing by qualified personnel only.
Warning: Disconnect the power and unplug the unit from the wall before installing.

See www.kramerav.com for updated safety information.