



Scan to go to website

T-IN1-RND2 & T-IN2-RND2

Quick Start Guide

This guide helps you install and use your T-IN1-RND2, T-IN2-RND2 for the first time.

Go to www.kramerav.com/downloads/T-IN1-RND2 & <http://www.kramerav.com/downloads/T-IN2-RND2> to download the latest user manual and check if firmware upgrades are available.

Step 1: Check What's in the Box

Enclosure sheet metal Locking device Inner frame Cutout template

 Available in 2 colors: Black - RAL 9011 and White – RAL 9002



Step 2: Table Cutout Dimensions


- T-IN1-RND2 - Ø108mm (4-¼")
- T-IN2-RND2 - Ø139mm (5-½")



Kramer recommends using the cutout template (packed with device) and a hole saw for maximal accuracy.


Step 3: Place Enclosure – Fasten Screws

1. Slide the lid for open position.
2. Rotate the enclosure so that the locking line on the Inner frame is located in the final position. The module orientation will be according to the surface.
3. Keep screws until the 'dog ear' is fastened to the table.
4. Fit to standard table thickness between 10-50 mm (0.39" - 1.97").

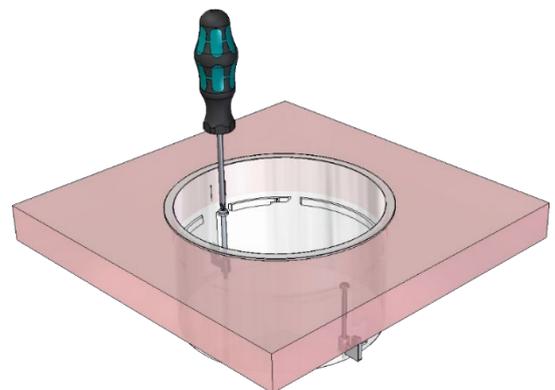

Step 4: Slide the Chosen Module(s) and Insert Cable into Pass-through Holes


1. Slide the chosen module(s) and use a screwdriver to lock the locking device.
2. Insert cable heads in the pass-through holes.

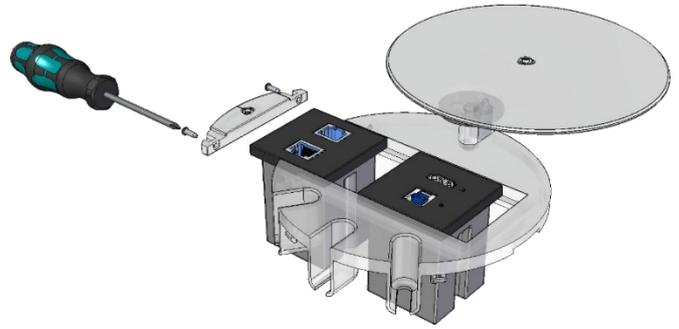

Modules listed in Modules List section


Step 5: Place Inner Frame

1. Place the inner frame into its position.

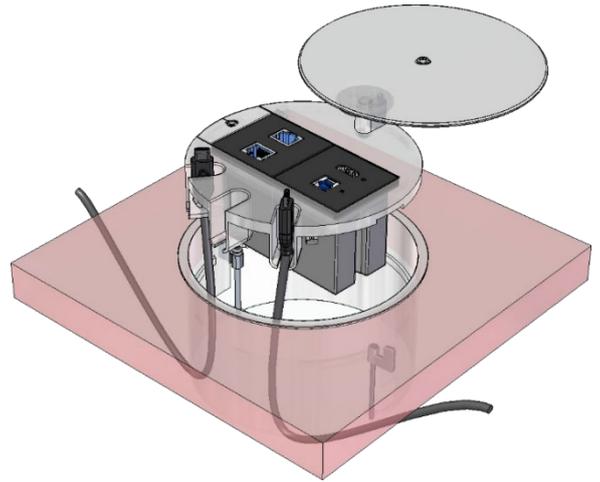


Step 6: Lock Inner frame

1. Place the insert marking line to be aligned with the right enclosure marking line.
2. Slightly rotate the inner frame counterclockwise so the other lines on the inner frame and the enclosure line are aligned.
3. To remove the inner frame, rotate the inner frame clockwise (see unlocked figure)
4. Slide the lid back to the closed position.

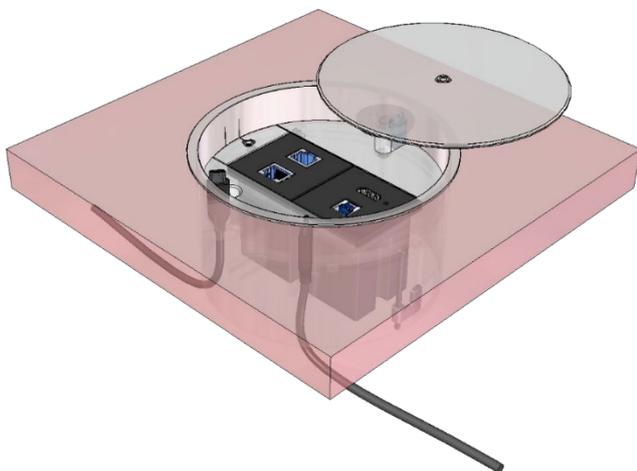

Unlocked

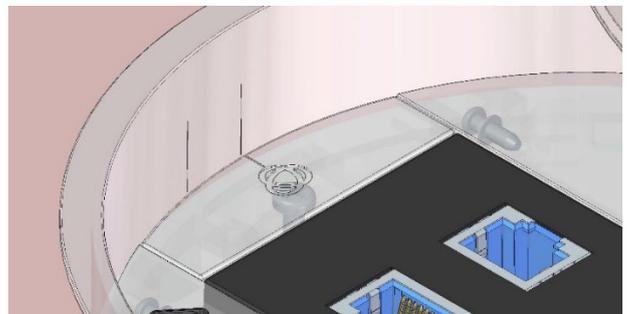

Locked

