



Scan for full manual

## UTBUS-1xl Quick Start Guide


This guide helps you install and use your **UTBUS-1xl** for the first time.

Go to [www.kramerav.com/downloads/UTBUS-1xl](http://www.kramerav.com/downloads/UTBUS-1xl) to download the latest user manual and check if firmware upgrades are available.

### Step 1: Check what's in the box

- ✓ **UTBUS-1xl Under the Table Connection Bus**
- ✓ **6 self-locking ties**
- ✓ **4 mounting wood screws**
- ✓ **1 Quick start guide**

### Step 2: Get to know your **UTBUS-1xl**

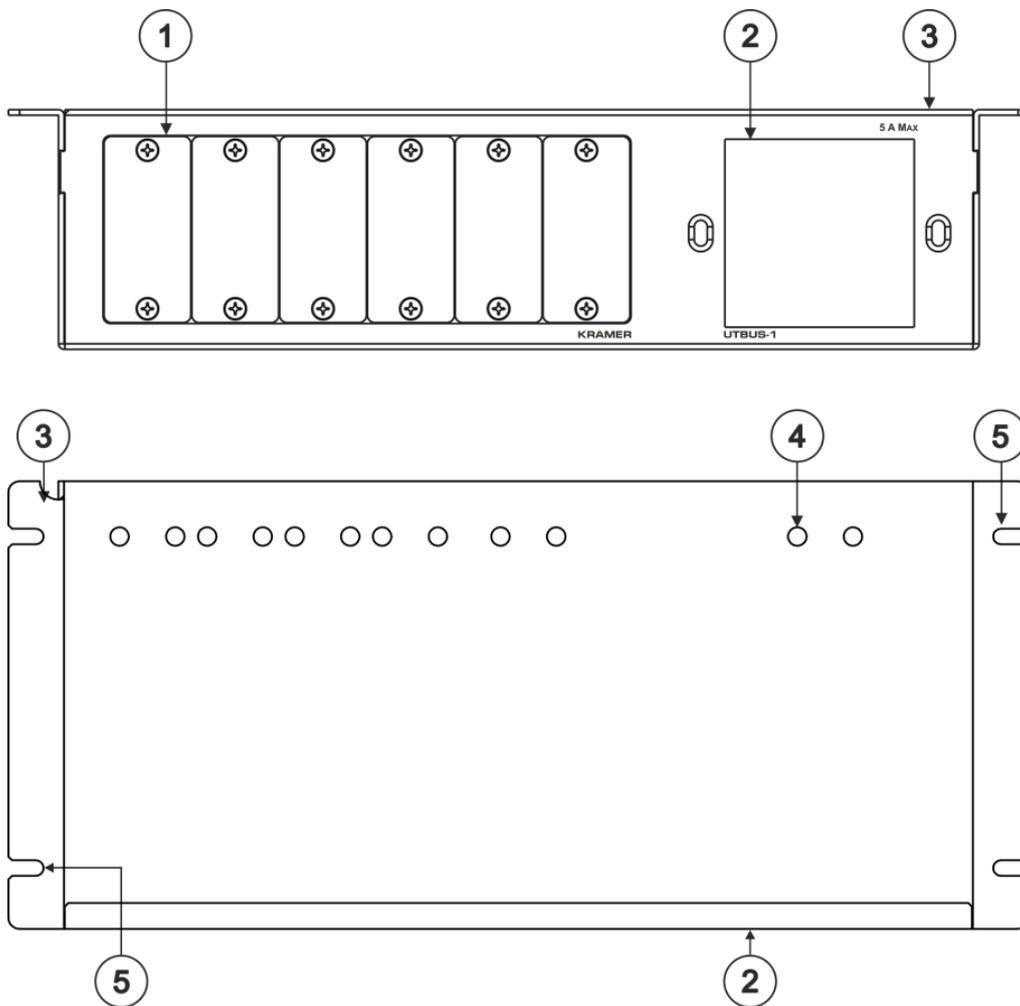




#	Feature	Function
1	Blank Plates	Six blank covers that can be replaced with wall plate inserts as required.
2	Power Socket Opening	Suitable for international power requirements (Suitable for international power requirements (available with different types of power sockets, ordered separately).
3	Outer Rim	For mounting under the table.
4	Tie Holes (12)	Insert self-locking ties through the holes to fix the pass-through cables to the inside walls of the <b>UTBUS-1xl</b> .
5	Rim Screw Openings (4)	For fixing the <b>UTBUS-1xl</b> under the table.

### Step 3: Connect the wall plate items


Unscrew the two screws that attach the blank plate to the connecting surface and remove the blank plate (save the two screws).

Place the required wall plate insert item over the opening.

Reinsert the two screws to affix the wall plate insert in position and tighten them.

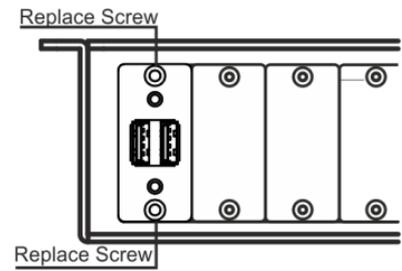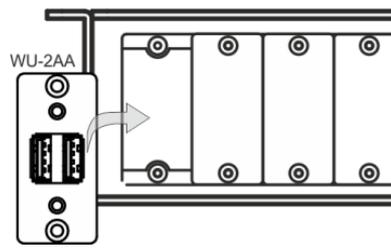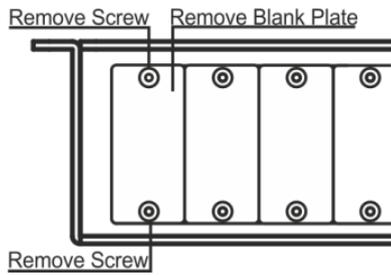

### Step 4: Connect the power socket

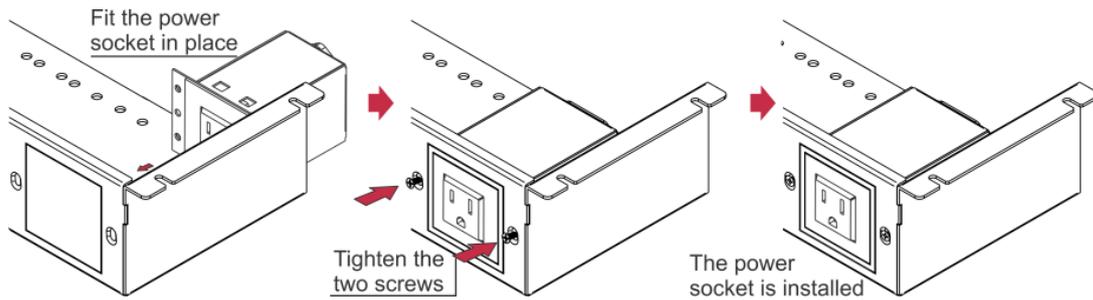

### Step 5: Connect the cables

Connect the cables to the inside of the unit. Use the self-locking ties to secure the cables via the tie holes.

### Step 6: Mount the device

To install the UTBUS-1xl underneath the table:

1. Place the unit to the underside of the table and mark the correct location.
2. Insert the four wood screws into the four rim screw holes and fix the **UTBUS-1xl** to the table.

