



Scan for full manual

## VIAcast Quick Start Guide

### For Installer/Administrator




This guide helps you install and configure your **VIAcast** for the first time.

Go to [www.kramerav.com/downloads/VIAcast](http://www.kramerav.com/downloads/VIAcast) to download the latest user manual and check if firmware upgrades are available.

### Step 1: Check what's in the box

- ✓ VIAcast dongle
- ✓ 1 Quick start guide

### Step 2: Get to know your VIAcast

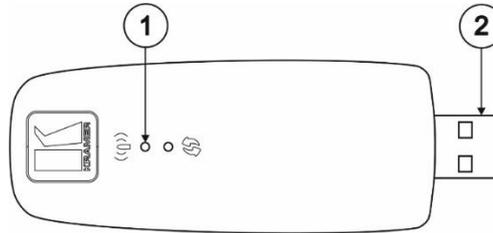

#	Feature	Function
1	Communication LED	Flashes slowly when enabled. Flashes quickly when a device is mirroring.
2	USB Connector	Connect to your VIA collaboration device.

This product complies with FCC Rule Part 47 CFR FCC Part 15 Subpart E § 15.407, FCC ID: Q87-WUSB6300.

Operating Frequency Range (Mhz)		Power (Watt)	Bandwidth (Khz)	Type of Modulation
Low Frequency (MHz)	High Frequency (MHz)			
2400	2483.5	0.1	40,000.00	OFDM
5150	5350	0.1	40,000.00	OFDM, DSSS

### Step 3: Install VIAcast

- Plug the **VIAcast** dongle into any of the USB ports on your VIA collaboration device.



VIAcast is compatible with the following devices: VIA GO, VIA Connect PRO and VIA Connect PLUS.



**Caution:** There are no operator serviceable parts inside the unit.  
See [www.KramerAV.com](http://www.KramerAV.com) for updated safety information.

### Step 4: Enable VIAcast

1. With the **VIAcast** dongle plugged into your VIA collaboration device, turn on or reboot your VIA collaboration device.
2. Log in to your VIA device embedded web pages with a Web Administrator username (default = su) and password (default = supass).  
The embedded web pages appear.
3. Click **VIA Management > VIA Settings** on the navigation pane.  
The VIA Settings page appears with the System & IOS tab open.
4. In the Miracast® Settings section, click **ON**.
5. Click **Reset VIA Session**  
**VIAcast** is enabled and the **VIAcast** communication LED flashes slowly.



Scan for full manual

## VIAcast Quick Start Guide

### For User

This guide helps you participate in a meeting using **VIAcast**.

Go to [www.kramerav.com/downloads/VIAcast](http://www.kramerav.com/downloads/VIAcast) to download the latest user manual.



## Mirror on VIA Main Display Using VIAcast

To mirror using **VIAcast** you need a Windows 10 laptop or an Android device that supports Miracast.




If the drivers of your Windows 10 laptop are up to date and the "Connect to a wireless display" option is not available, your device does not support Miracast.




Android operating system versions 4.2 and higher include built-in Miracast technology. However, some Android 4.2 and 4.3 devices do not support Miracast.

### For Windows laptop:

1. On your Windows laptop, press Windows + P. The Project options appear.

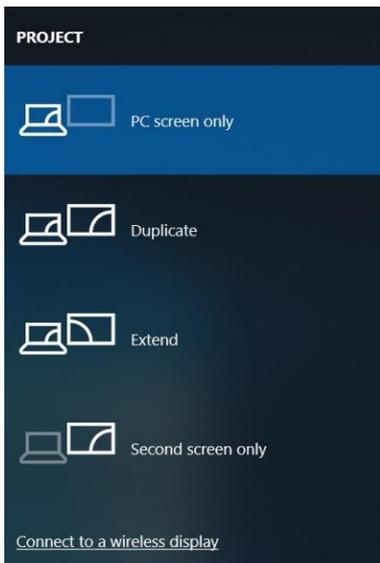


2. Click **Connect to a wireless display**. The Room Name of your VIA collaboration device appears in the Connect list.

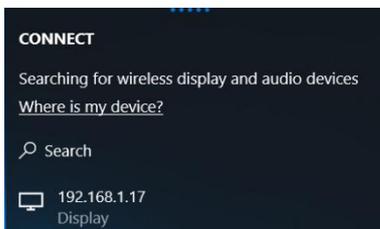


3. Click the Room Name of your VIA device. A PIN code field appears (if Code was activated on your VIA device).
4. Enter the Code that appears on the main display and click **Connect**. The name of your device appears on the main display and then your screen is mirrored on the main display.

### For Android:

1. In your Android device settings, open Wi-Fi Direct or Miracast. Device options appear on your screen.

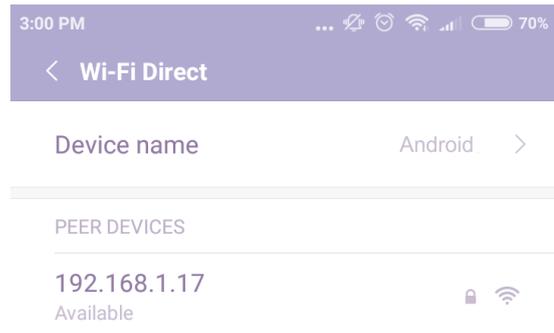

2. Click the Room Name of your VIA collaboration device. A PIN code field appears (if Code was activated on your VIA device).

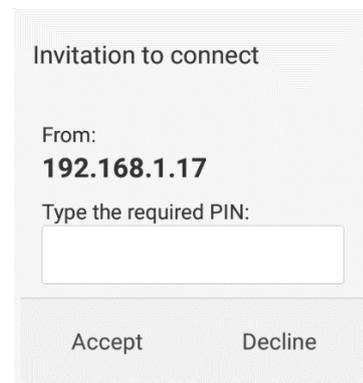

3. Enter the Code that appears on the main display and click **Accept/Connect**. The name of your device appears on the main display and then your screen is mirrored on the main display.