## PS-16DN Power Supply Installation

The **PS-16DN** is a redundant hot-swappable power supply for the **VS-1616DN** and **VS-1616DN-MD** Matrix Switchers. The switchers are able to operate with one power supply installed.

The **VS-1616DN** is shown as an example, the **VS-1616DN-MD** follows the same principle. To install a new power supply:

<u>WARNING:</u> All normal static discharge precaution measures must be observed to prevent damage to the equipment.

- 1. Remove the new power supply from its shipping box and anti-static bag. Reserve the original packaging including the anti-static bag for future use.
- 2. Remove the blank panel or the malfunctioning power supply by releasing the four thumbscrews.
- 3. Insert the new power supply and press firmly into place until the front panel of the power supply is flush with the front panel of the chassis.
- 4. Tighten the four thumbscrews.

**Note:** Each installed power supply requires a separate AC power connection and has a dedicated power switch. Verify that the redundant power supply is connected to AC power and is switched on.







