



External Remote IR Receiver

C-A35M/IRR-03

(C-A35M/IRR-50 – OPTIONAL)

Installation Instructions

For the latest information on our products and a list of Kramer distributors, visit our Web site: www.kramerelectronics.com



Kramer Electronics, Ltd.

Web site: www.kramerelectronics.com

E-mail: info@kramerelect.com

P/N: 2900-000287 REV 3



P/N: 2900-000287




Rev: 3

The External Remote IR Receiver

The External Remote IR receiver is used to remotely control the machine and includes a 0.9 meter (3 feet) External Remote IR Receiver cable (model **C-A35M/IRR-03**).

The distance between the remote controller and the machine can be extended by using a 15 meter external IR receiver (model **C-A35M/IRR-50**), or by using the optional Kramer Stereo cables, 15 meters (50 feet) each (model **C-A35M/A35F-50**).

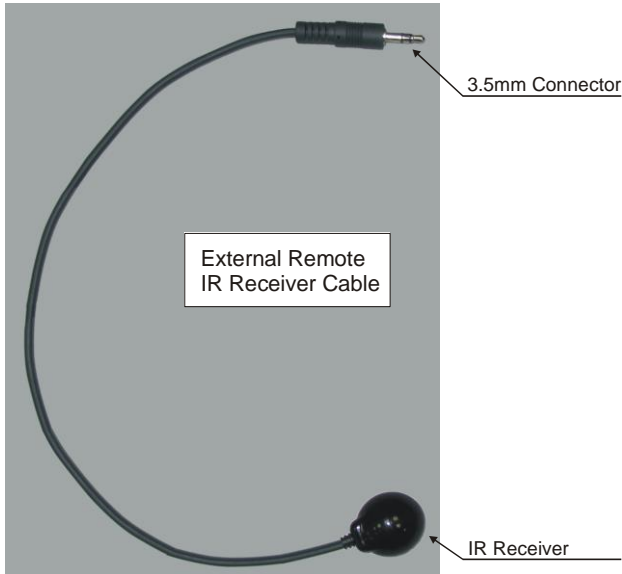

The External Remote IR Receiver connects to the EXT. 3.5mm jack on the side panel of the machine. Once connected, the Kramer machine can be controlled from a distance.

Installing the External Remote IR Receiver

To connect the External Remote IR Receiver, do the following:

1. Disconnect the power to the device.
2. Connect the 3.5mm plug of the External Remote IR Receiver cable to the EXT. 3.5mm jack.
3. Connect the power to the device.

Note, that once the external remote IR receiver is connected, the IR IN built-in receiver is disabled.