The Kramer RK-19 Under-the-table Brackets

Congratulations on purchasing your Kramer metal **RK-19** under-the-table brackets for installing 19" 1U machines underneath a wooden table or podium top. The **RK-19** is suitable for all types of Kramer 19" 1U machines, and is sturdy, cost-effective and easy to install. The **RK-19** consists of two metal brackets which are attached to a Kramer 19" 1U machine via the 12 machine screw holes and to the table via the six rim screw holes.

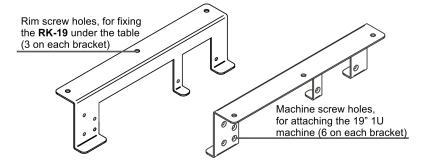


Figure 1: RK-19 Under-the-table Brackets

Installing RK-19

To install the RK-19:

- Attach the RK-19 brackets to the sides of the Kramer machine
- Fix the **RK-19** with the machine under the table

Attaching the Brackets

You can attach the **RK-19** brackets to all types of Kramer 19" 1U Kramer machines, as follows:

| 1U 19" Machine Size/Type | Screw locations (shown with an arrow) |
|---|--|
| 19-inch (W), 7-inch (D) 1U (H)/Aluminum | ~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~ |
| (four screws on each size) | |
| | |
| | Section of the sectio |
| | |

| 1U 19" Machine Size/Type | Screw locations (shown with an arrow) |
|--|---------------------------------------|
| 19-inch (W), 9-inch (D) 1U (H)/Aluminum | |
| (four screws on each size) | |
| 19-inch (W), 7-inch (D) 1U (H)/Metal (two screws on each size) | |
| 19-inch (W), 9-inch (D) 1U (H)/Metal (two screws on each size) | |

Fixing the RK-19 with the machine under the table

- 1. Place the unit to the underside of the table and mark the correct location.
- Insert the six 4.2X16 wood screws into the six rim screw holes (three on each side) and fix the RK-19 to the table.

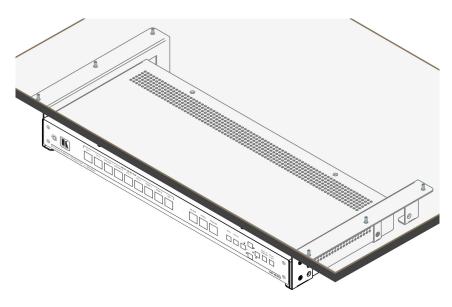


Figure 2: RK-19 Installed under a Table

Specifications

| DIMENSIONS: | Each bracket: 4.4cm x 22cm x 5.7cm (1.7" x 8.7" x 2.2") W, D, H |
|--------------|--|
| | Space between rim holes: 10cm (3.9") |
| WEIGHT: | 0.35kg (0.8lbs) approx. (for the pair) |
| ACCESSORIES: | 8 M3x8 screws; six 4.2X16 screws |



KRAMER ELECTRONICS LTD.

Installation Instructions

MODEL:

RK-19 Under-the-table Brackets

For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this user manual may be found.

We welcome your questions, comments, and feedback.

Web site: www.kramerelectronics.com

E-mail: info@kramerel.com







Disconnect the unit from the power supply before opening and servicing

P/N: 2900-300077 Rev 1