

USER MANUAL

MODELS:

TP-600TRxr

TP-600TR

4K60 HDMI/USB Extender



Contents

Introduction	1
Getting Started	1
Overview	2
Typical Applications	3
Defining TP-600TRxr 4K60 HDMI/USB Extender	4
Mounting TP-600TRxr	6
Connecting the 4K60 HDMI/USB Extender	7
Connecting TP-600TRxr	7
Connecting TP-600TR	9
Connecting to TP-600TRxr via RS-232	11
Setting the DIP-Switches	11
Technical Specifications	12
TP-600TRxr Specifications	12
TP-600TR Specifications	13

Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront the video, audio, presentation, and broadcasting professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better!

Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment.
- Review the contents of this user manual.



Go to www.kramerav.com/downloads/TP-600TRxr or www.kramerav.com/downloads/TP-600TR to check for up-to-date user manuals, application programs, and to check if firmware upgrades are available (where appropriate).

Achieving Best Performance

- Use only good quality connection cables (we recommend Kramer high-performance, high-resolution cables) to avoid interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables).
- Do not secure the cables in tight bundles or roll the slack into tight coils.
- Avoid interference from neighboring electrical appliances that may adversely influence signal quality.
- Position your Kramer TP-600TRxr / TP-600TR away from moisture, excessive sunlight and dust.

Safety Instructions



Caution:

- This equipment is to be used only inside a building. It may only be connected to other equipment that is installed inside a building.
- For products with relay terminals and GPIO ports, please refer to the permitted rating for an external connection, located next to the terminal or in the User Manual.
- There are no operator serviceable parts inside the unit.



Warning:

- Use only the power cord that is supplied with the unit.
- To ensure continuous risk protection, replace fuses only according to the rating specified on the product label which is located on the bottom of the unit.

Recycling Kramer Products

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at www.kramerav.com/il/quality/environment.

Overview

Congratulations on purchasing your Kramer **TP-600TRxr/TP-600TR 4K60 HDMI/USB Extender**.



TP-600TR is identical to **TP-600TRxr** except for ETH extension. **TP-600TRxr**, in this User Manual, refers to both devices, unless specified otherwise.

TP-600TRxr is a high-performance, long-reach HDBaseT 3.0 extender for 4K60Hz (4:4:4) HDMI, USB, Ethernet (**TP-600TRxr** only), RS-232, and IR signals over twisted pair, flexibly set as transmitter-side or receiver-side device. **TP-600TRxr** transmitter-side converts all input signals into the transmitted HDBaseT 3.0 signal. **TP-600TRxr** receiver-side receives the HDBaseT 3.0 signal and converts it back into the original input signals.

TP-600TRxr extends video signals up to 100m (330ft) over CAT copper cables at 4K@60Hz (4:4:4) video resolution.

TP-600TR extends video signals up to 40m (130ft) over CAT copper cables at 4K@60Hz (4:4:4) video resolution and up to 70m (230ft) at 4K@30Hz (4:4:4).

TP-600TRxr provides exceptional quality, advanced and user-friendly operation, and flexible control.

Exceptional Quality

- High Performance Standard Extender – Professional HDBaseT extender for providing extended-reach signals over twisted-pair copper infrastructures. **TP-600TRxr** is a standard extender that can be connected to any market-available HDBaseT-compliant extension product. For optimum extension reach and performance, use recommended Kramer cables.
- HDMI Signal Extension – HDCP 2.3, EDID and CEC signals are passed through from the source to the display. Supports HDR10, deep color, x.v.Color™, lip sync, HDMI uncompressed audio channels, Dolby TrueHD, DTS-HD, 2K, 4K, and 3D as specified in HDMI 2.0.
- HDMI extension – Uncompressed 4K@60Hz (4:4:4).
- I-EDIDPro™ Kramer Intelligent EDID Processing™ – Intelligent EDID handling, processing, and pass-through algorithm that ensures Plug and Play operation for HDMI source and display systems.

Advanced and User-friendly Operation

- HDMI Mirroring – Transmitter-side extender mirrors input HDMI signal to loop output port for connecting a local monitor or an additional unit in a daisy chain.
- Flexible USB 2.0 Extension – An active USB host is connected to the extender at either the transmitter or receiver sides. USB 2.0 signals are extended between the extender transmitter and receiver sides, enabling connection of the active USB host to both local and remote USB devices, such as camera and audio devices, or HID (Human Interface Devices) mouse or keyboard devices.
- Cost-effective Maintenance – Status LED indicators for HDMI, Loop, HDBT, and USB active host ports, facilitate easy local maintenance and troubleshooting.
- Easy and Elegant Installation – MegaTOOLS™ fan-less enclosure for dropped-ceiling mounting, or side-by-side mounting of 2 units in a 1U rack space with the recommended rack adapter.

Flexible Connectivity

- Multi-channel Audio Transmission – Up to 32 channels of digital stereo uncompressed signals for supporting studio-grade surround sound.
- Flexible USB 2.0 host and devices extension.
- Ethernet Extension (TP-600TRxr only) – Ethernet interface data flows in both directions, allowing extension of up to 1 Gbps Ethernet connectivity for LAN communication and device control.
- Bidirectional RS-232 Extension – Serial interface data flows in both directions, allowing data transmission and device control.
- Bidirectional Infrared Extension – IR interface data flows in both directions, allowing remote control of peripheral devices located at either end of the extended line.

Typical Applications

TP-600TRxr is ideal for the following typical applications:

- Corporate – Hybrid and online meetings.
- Education – Hybrid and online learning and training.
- Any AV, Ethernet (TP-600TRxr only) and USB room extension applications such as conference rooms, boardrooms, and training facilities.

Defining TP-600TRxr 4K60 HDMI/USB Extender

This section defines TP-600TRxr and TP-600TR.

 The extender device functions as a transmitter or receiver as defined by the SETUP DIP-switch 1 setting on the rear panel (see [Setting the DIP-Switches](#) on page 11).

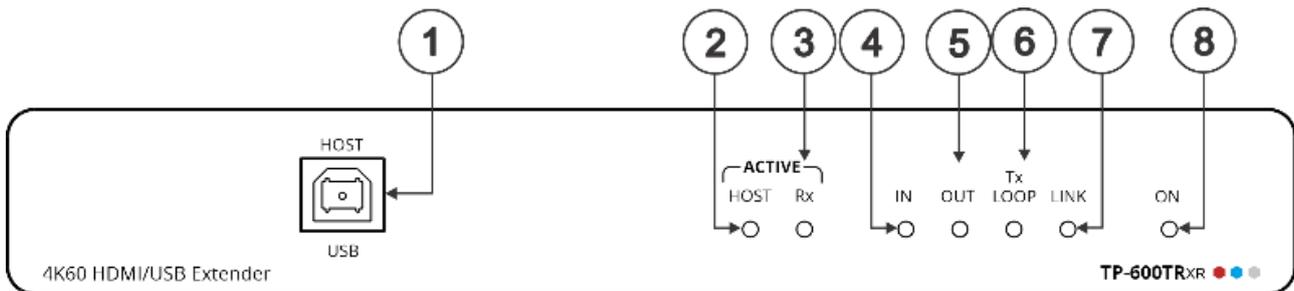


Figure 1: TP-600TRxr 4K60 HDMI/USB Extender Front Panel

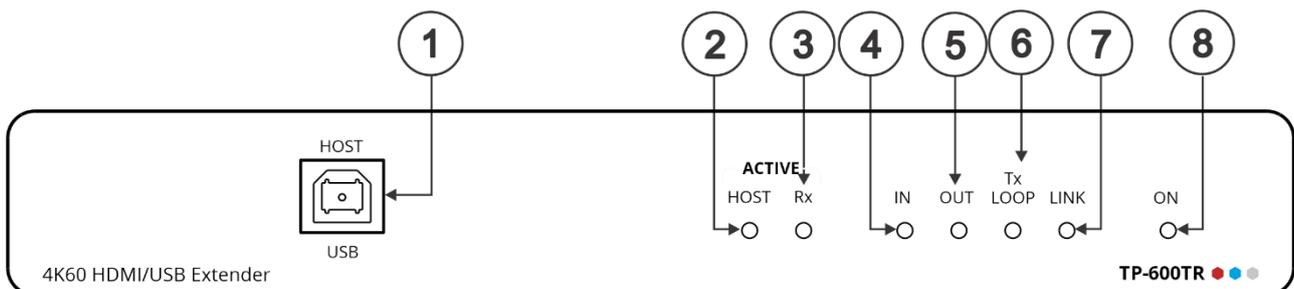


Figure 2: TP-600TR 4K60 HDMI/USB Extender Front Panel

#	Feature	Function	
①	HOST USB B 2.0 Connector	Connect to the USB host (for example, a laptop) to communicate with the USB peripheral devices (for example, a smart board) connected to USB device ports on either the transmitter or the receiver sides of the extender (see Connecting the 4K60 HDMI/USB Extender on page 7).	
②	ACTIVE HOST LED	Lights orange when the USB host side is active	
③	ACTIVE Rx LED	Lights green when the extender receiver function is active	
④	IN LED	Lights blue when an active HDMI input signal is detected on HDMI IN.	
⑤	OUT LED	Lights blue when an output acceptor device is connected.	
⑥	TX LOOP	Transmitter mode	Lights blue an active signal is transmitted on the Tx LOOP port.
		Receiver mode	N/A
⑦	LINK LED	Lights green when the HDBT active link connection is established.	
⑧	ON LED	Lights green when the device receives power.	

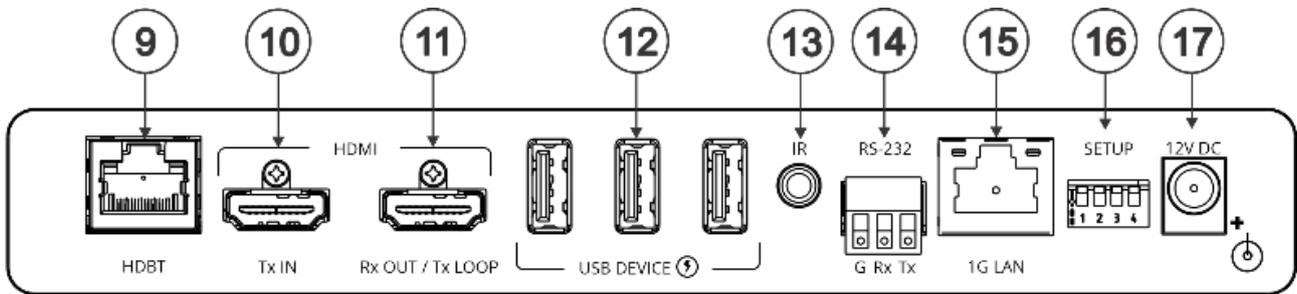


Figure 3: TP-600TRxr 4K60 HDMI/USB Extender Rear Panel

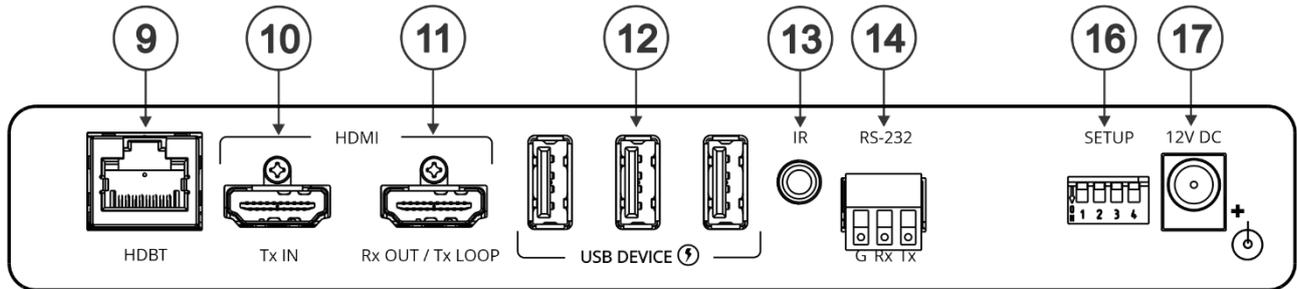


Figure 4: TP-600TR 4K60 HDMI/USB Extender Rear Panel

#	Feature	Function	
⑨	ENTER Button	Press to move to the next level in the OSD screen or to accept a new parameter.	
⑩	HDMI TX IN Connector	Transmitter mode	Connect to an HDMI source.
		Receiver Mode	N/A
⑪	HDMI Rx OUT/Tx LOOP Connector	Transmitter mode	Connect to a local acceptor.
		Receiver mode	Connect to an HDMI acceptor.
⑫	USB A 2.0 Fast-Charging Connectors (3)	Connect to the USB local peripheral devices (for example, a USB camera, a soundbar, microphone and so on).	
⑬	IR 3.5mm Mini Jack Connector	Connect to an external IR emitter to control a local IR-controlled device from the remote extender (for example, TP-600TRxr). Connect to an IR sensor to control a remote IR-controlled device connected to the remote extender side (for example, TP-600TRxr).	
⑭	RS-232 3-pin Terminal Block	Connect to a controller device (for example, SL240C) to control a remote device via serial connection (for example, the remotely connected PTZ USB camera).	
⑮	ETHERNET RJ-45 Connector	Connect to LAN.	
⑯	SETUP 4-way DIP-switch	Sets the device behavior (see Setting the DIP-Switches on page 11).	
⑰	12V DC Power Connector	Connect to the power supply.	

Mounting TP-600TRxr

This section provides instructions for mounting **TP-600TRxr**. Before installing, verify that the environment is within the recommended range:



- Operation temperature – 0° to 40°C (32 to 104°F).
- Storage temperature – -40° to +70°C (-40 to +158°F).
- Humidity – 10% to 90%, RHL non-condensing.

**Caution:**

- Mount **TP-600TRxr** before connecting any cables or power.

**Warning:**


- Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.
- Avoid uneven mechanical loading.
- Appropriate consideration of equipment nameplate ratings should be used for avoiding overloading of the circuits.
- Reliable earthing of rack-mounted equipment should be maintained.
- Maximum mounting height for the device is 2 meters.

Mount TP-600TRxr in a rack:

- Use the recommended rack adapter
(see www.kramerav.com/product/TP-600TRxr).

Mount TP-600TRxr on a surface using one of the following methods:

- Attach the rubber feet and place the unit on a flat surface.
- Fasten a bracket (included) on each side of the unit and attach it to a flat surface. For more information go to www.kramerav.com/downloads/TP-600TRxr.

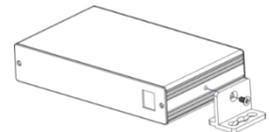

Connecting the 4K60 HDMI/USB Extender

You can use two **TP-600TRxr** units, define them as transmitter and receiver and then connect the transmitter to the receiver (as described in this section). You can also connect the device to a different unit. For example:

- Connecting **TP-600TRxr** that is set as a transmitter to the Kramer **TP-590R** receiver.
- Connecting a transmitter (for example, the Kramer **TP-590T** transmitter) to a **TP-600TRxr** that is set as a receiver.
- Connecting the **TP-600TRxr** (defined as a transmitter or receiver to a switcher or other system, for example, the **VS-84UT**).

This section describes the following actions:

- [Connecting TP-600TRxr](#) on page [7](#).
- [Connecting TP-600TR](#) on page [9](#).
- [Connecting to TP-600TRxr via RS-232](#) on page [11](#).
- **Error! Reference source not found.** on page **Error! Bookmark not defined.**
- [Setting the DIP-Switches](#) on page [11](#).



Always switch off the power to each device before connecting it to your **TP-600TRxr**. After connecting your **TP-600TRxr**, connect its power and then switch on the power to each device.

Connecting TP-600TRxr

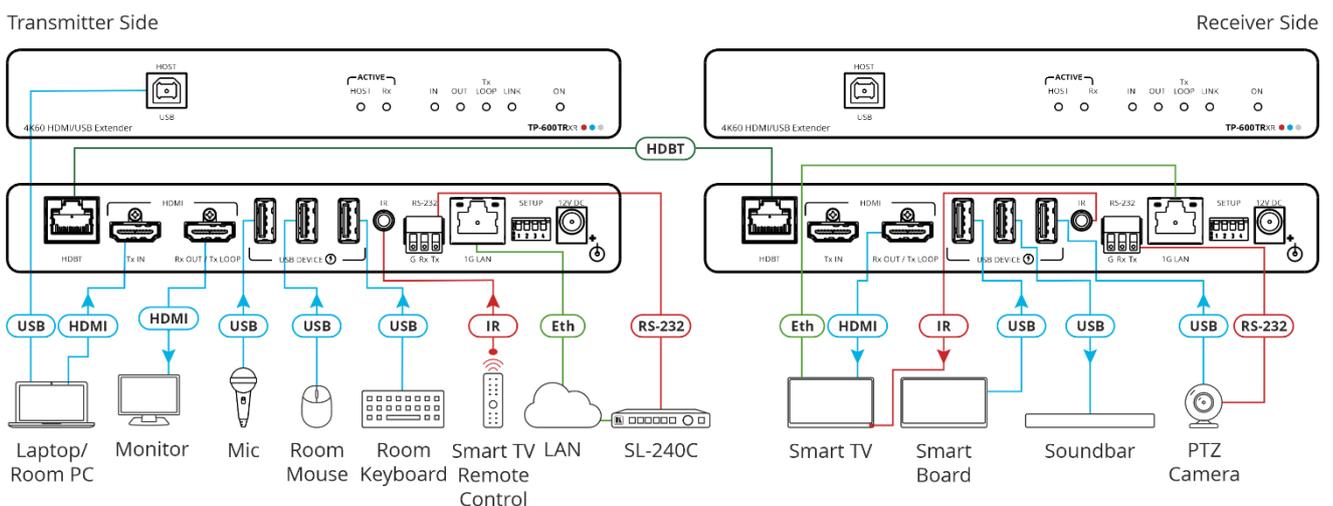


Figure 5: Connecting to TP-600TRxr

To connect TP-600TRxr as illustrated in the example in [Figure 5](#):

1. Use the DIP-switches (14) to define one device as a transmitter and the other as a receiver (see [Setting the DIP-Switches](#) on page 11).
2. Connect the HDBT port (9) on the **TP-600TRxr** transmitter side to the HDBT port (9) on the **TP-600TRxr** receiver side.
3. On the **TP-600TRxr** transmitter side, connect an HDMI source (for example, a laptop) to the HDMI Tx IN connector (10).
4. On the **TP-600TRxr** transmitter side, connect the HDMI Rx OUT/Tx LOOP connector (11) to an HDMI acceptor.
5. On the **TP-600TRxr** receiver side, connect the HDMI Rx OUT/Tx LOOP connector (11) to an HDMI acceptor (for example, a smart TV).
6. Connect the USB ports:

- Connect the HOST USB port to a laptop or room PC.



The HOST USB port can be connected to either the transmitter or the receiver side, as necessary.

- Connect the USB DEVICE ports on the transmitter side to USB devices (for example, the room microphone, mouse, and keyboard).
- Connect the USB DEVICE ports on the receiver side to USB devices (for example, a smart board, soundbar and camera).



USB devices can be connected to both the transmitter and receiver sides, as necessary.

7. To control the smart TV via IR, connect the following:
 - On the **TP-600TRxr** transmitter side, connect an IR sensor cable to the IR 3.5mm mini jack (13).
 - On the **TP-600TRxr** receiver side, connect the IR 3.5mm mini jack (13) to an emitter cable and attach the emitter side to the IR sensor of the smart TV.

Point the smart TV IR remote controller to the IR sensor to pass an IR command via HDBT to the smart TV.

8. To Control the smart TV via Ethernet, connect the following:
 - On the **TP-600TRxr** transmitter side, connect a room controller (for example, the Kramer **SL-240C** with Kramer Control) to the Ethernet RJ-45 port (15).
 - On the **TP-600TRxr** receiver side, connect the Ethernet RJ-45 port (15) to the smart TV.

Send IP commands via the room controller to the smart TV via LAN.

9. To control the PTZ camera, connect the following:
 - On **TP-600TRxr** transmitter side connect a controller (for example, **SL-240C** room controller) to the RS-232 port (14) (and also to the ETHERNET RJ-45 port (15)).
 - On **TP-600TRxr** receiver side connect the RS-232 port (14) to a PTZ camera.

Send serial commands from **SL-240C** to the camera via RS-232.

10. Connect the power adapter to **TP-600TRxr** and to the mains electricity (not shown in [Figure 5](#)).

TP-600TRxr is connected.

Connecting TP-600TR

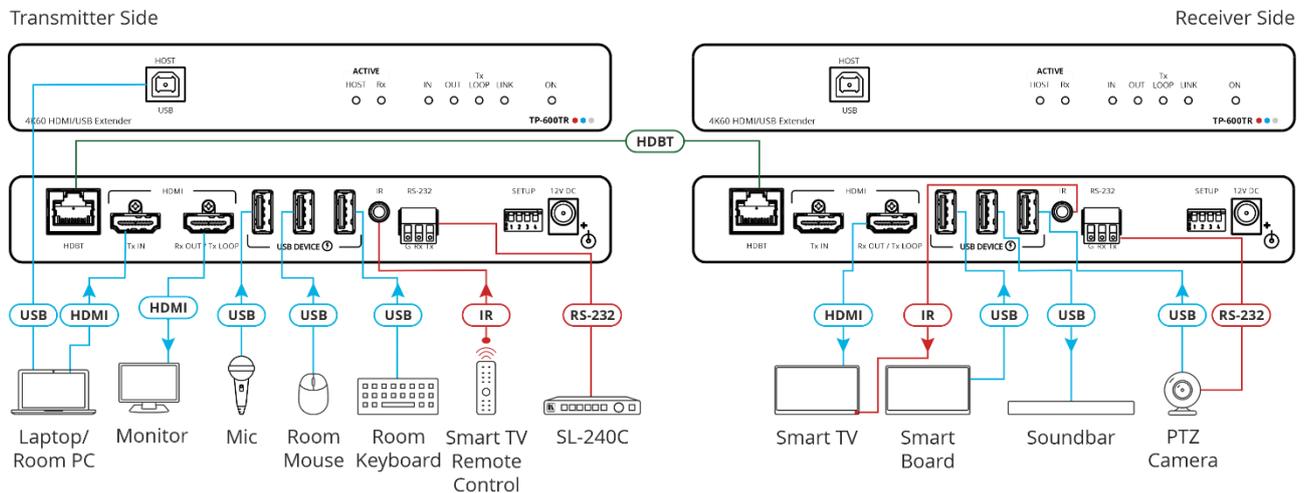


Figure 6: Connecting to TP-600TR

To connect TP-600TR as illustrated in the example in [Figure 5](#):

1. Use the DIP-switches (14) to define one device as a transmitter and the other as a receiver (see [Setting the DIP-Switches](#) on page 11).
2. Connect the HDBT port (9) on the TP-600TR transmitter side to the HDBT port (9) on the TP-600TR receiver side.
3. On the TP-600TR transmitter side, connect an HDMI source (for example, a laptop) to the HDMI Tx IN connector (10).
4. On the TP-600TR transmitter side, connect the HDMI Rx OUT/Tx LOOP connector (11) to an HDMI acceptor.
5. On the TP-600TR receiver side, connect the HDMI Rx OUT/Tx LOOP connector (11) to an HDMI acceptor (for example, a smart TV).
6. Connect the USB ports:
 - Connect the HOST USB port to a laptop or room PC.



The HOST USB port can be connected to either the transmitter or the receiver side, as necessary.

- Connect the USB DEVICE ports on the transmitter side to USB devices (for example, the room microphone, mouse, and keyboard).
- Connect the USB DEVICE ports on the receiver side to USB devices (for example, a smart board, soundbar and camera).



USB devices can be connected to both the transmitter and receiver sides, as necessary.

7. To control the smart TV via IR, connect the following:

- On the **TP-600TR** transmitter side, connect an IR sensor cable to the IR 3.5mm mini jack (13).
- On the **TP-600TR** receiver side, connect the IR 3.5mm mini jack (13) to an emitter cable and attach the emitter side to the IR sensor of the smart TV.

Point the smart TV IR remote controller to the IR sensor to pass an IR command via HDBT to the smart TV.

8. To control the PTZ camera, connect the following:

- On **TP-600TR** transmitter side connect a controller (for example, **SL-240C** room controller) to the RS-232 port (14) (and also to the ETHERNET RJ-45 port (15)).
- On **TP-600TR** receiver side connect the RS-232 port (14) to a PTZ camera.

Send serial commands from **SL-240C** to the camera via RS-232.

9. Connect the power adapter to **TP-600TR** and to the mains electricity (not shown in [Figure 5](#)).

TP-600TR is connected.

Connecting to TP-600TRxr via RS-232

You can connect to TP-600TRxr via an RS-232 connection  using, for example, a PC.


TP-600TRxr features an RS-232 3-pin terminal block connector to extend RS-232 signals via TP-600TRxr transmitter and receiver.

Connect the RS-232 terminal block on the rear panel of TP-600TRxr to a device, as follows:


From the RS-232 9-pin D-sub serial port connect:

- Pin 2 to the TX pin on the TP-600TRxr RS-232 terminal block
- Pin 3 to the RX pin on the TP-600TRxr RS-232 terminal block
- Pin 5 to the G pin on the TP-600TRxr RS-232 terminal block


RS-232 Device

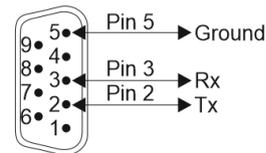

TP-600TRxr

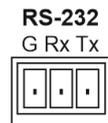

EIA /TIA 568B	
PIN	Wire Color
1	Orange / White
2	Orange
3	Green / White
4	Blue
5	Blue / White
6	Green
7	Brown / White
8	Brown

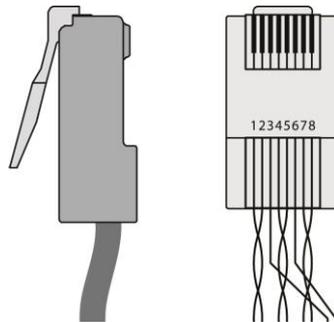


Setting the DIP-Switches

All changes in DIP-Switches apply immediately, on-the-fly (no need to power cycle the device), except for DIP-switches 1 and 2.



All DIP-switches are set to OFF (up) by default.
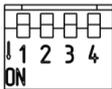
#	Feature	DIP-switch Settings	SETUP
1	Device Operation Mode	OFF (up) – Receiver mode is active. ON (down) – Transmitter mode is active.	
2	Active USB Host port	OFF (up) – Host is active. ON (down) – Host is inactive (active on remote paired device).	
3	Define IR Pass-through	OFF (up) – Pass-through the IR signal to or from the IR cable. ON (down) – Add IR modulation (38kHz) to the IR output signal (applies only when the IR port is connected to an IR emitter cable).	
4	Programing RS-232	Off (up) – Normal operation mode is enabled (FW programming RS-232 is inactive). On (down) – FW programming RS-232 is active.	

Technical Specifications

TP-600TRxr Specifications

Inputs	Transmitter Side	
	1 HDMI	On a female HDMI connector
	Receiver Side	
	1 HDBT	On a female RJ-45 connector
Outputs	Transmitter Side	
	1 HDBT	On a female RJ-45 connector
	1 LOOP	On a female HDMI connector
	Receiver Side	
	1 HDMI	On a female HDMI connector
Ports	1 USB 2.0 Host	On a USB-B female connector
	3 USB 2.0 Device	On USB type-A female connectors
	1 1000BaseT Ethernet	On an RJ-45 female connector for LAN extension
	1 IR	On a 3.5mm mini jack for IR link extension
	1 RS-232	On a 3-pin terminal block for serial link extension
Extension Line	Reach	Up to 100m (330ft), when using Kramer HDBaseT cables
	Standards Compliance	HDBaseT 3.0
Video	Max Data Rate	18Gbps bandwidth (6Gbps per graphic channel)
	Max Resolution	4K@60Hz (4:4:4) 24bpp resolution
	Content Protection	HDCP 2.3
	HDMI Support	4K as specified in HDMI 2.0b
Extended USB	Data Rate	Up to 480Mbps
	Transmitted Data Bandwidth	Up to 300Mbps
	Standards Compliance	1.1 and 2.0 USB
Extended Ethernet	Max Data Rate	1Gbps
Extended RS-232	Baud Rate	300 to 115200
Power	Consumption	12V DC, 3200mA
	Source	12V DC, 5A
Environmental Conditions	Operating Temperature	0° to +40°C (32° to 104°F)
	Storage Temperature	-40° to +70°C (-40° to 158°F)
	Humidity	10% to 90%, RHL non-condensing
Regulatory Compliance	Safety	CE
	Environmental	RoHs, WEEE
Enclosure	Size	Mega Tool
	Material	Aluminum
	Cooling	Convection Ventilation
General	Net Dimensions (W, D, H)	19cm x 11.6cm x 2.7cm (7.5" x 4.6" x 1.1")
	Shipping Dimensions (W, D, H)	34.5cm x 16.5cm x 5.2cm (13.6" x 6.5" x 2")
	Net Weight	0.56kg (1.2lbs)
	Shipping Weight	1.15kg (2.5lbs) approx.
Accessories	Included	Power adapter and cord
Specifications are subject to change without notice at www.kramerav.com		

TP-600TR Specifications

Inputs	Transmitter Side	
	1 HDMI	On a female HDMI connector
	Receiver Side	
	1 HDBT	On a female RJ-45 connector
Outputs	Transmitter Side	
	1 HDBT	On a female RJ-45 connector
	1 LOOP	On a female HDMI connector
	Receiver Side	
	1 HDMI	On a female HDMI connector
Ports	1 USB 2.0 Host	On a USB-B female connector
	3 USB 2.0 Device	On USB type-A female connectors
	1 IR	On a 3.5mm mini jack for IR link extension
	1 RS-232	On a 3-pin terminal block for serial link extension
Extension Line	Reach	Up to 40m (130ft) at 4K@60Hz (4:4:4), when using Kramer HDBaseT cables
		Up to 70m (230ft) at up to 4K@30Hz (4:4:4), when using Kramer HDBaseT cables
	Standards Compliance	HDBaseT 3.0
Video	Max Data Rate	18Gbps bandwidth (6Gbps per graphic channel)
	Max Resolution	4K@60Hz (4:4:4) 24bpp resolution
	Content Protection	HDCP 2.3
	HDMI Support	4K as specified in HDMI 2.0b
Extended USB	Data Rate	Up to 480Mbps
	Transmitted Data Bandwidth	Up to 300Mbps
	Standards Compliance	1.1 and 2.0 USB
Extended Ethernet	Max Data Rate	1Gbps
Extended RS-232	Baud Rate	300 to 115200
Power	Consumption	12V DC, 600mA
	Source	12V DC, 2A
Environmental Conditions	Operating Temperature	0° to +40°C (32° to 104°F)
	Storage Temperature	-40° to +70°C (-40° to 158°F)
	Humidity	10% to 90%, RHL non-condensing
Regulatory Compliance	Safety	CE
	Environmental	RoHs, WEEE
Enclosure	Size	Mega Tool
	Material	Aluminum
	Cooling	Convection Ventilation
General	Net Dimensions (W, D, H)	19cm x 11.6cm x 2.7cm (7.5" x 4.6" x 1.1")
	Shipping Dimensions (W, D, H)	34.5cm x 16.5cm x 5.2cm (13.6" x 6.5" x 2")
	Net Weight	0.55kg (1.2lbs)
	Shipping Weight	1.12kg (2.5lbs) approx.
Accessories	Included	Power adapter and cord
Specifications are subject to change without notice at www.kramerav.com		

The warranty obligations of Kramer Electronics Inc. ("Kramer Electronics") for this product are limited to the terms set forth below:

What is Covered

This limited warranty covers defects in materials and workmanship in this product.

What is Not Covered

This limited warranty does not cover any damage, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Kramer Electronics to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment enclosures, cables or accessories used in conjunction with this product.

Without limiting any other exclusion herein, Kramer Electronics does not warrant that the product covered hereby, including, without limitation, the technology and/or integrated circuit(s) included in the product, will not become obsolete or that such items are or will remain compatible with any other product or technology with which the product may be used.

How Long this Coverage Lasts

The standard limited warranty for Kramer products is seven (7) years from the date of original purchase, with the following exceptions:

1. All Kramer VIA hardware products are covered by a standard three (3) year warranty for the VIA hardware and a standard three (3) year warranty for firmware and software updates; all Kramer VIA accessories, adapters, tags, and dongles are covered by a standard one (1) year warranty.
2. Kramer fiber optic cables, adapter-size fiber optic extenders, pluggable optical modules, active cables, cable retractors, ring mounted adapters, portable power chargers, Kramer speakers, and Kramer touch panels are covered by a standard one (1) year warranty. Kramer 7-inch touch panels purchased on or after April 1st, 2020 are covered by a standard two (2) year warranty.
3. All Kramer Calibre products, all Kramer Minicom digital signage products, all HighSecLabs products, all streaming, and all wireless products are covered by a standard three (3) year warranty.
4. All Sierra Video MultiViewers are covered by a standard five (5) year warranty.
5. Sierra switchers & control panels are covered by a standard seven (7) year warranty (excluding power supplies and fans that are covered for three (3) years).
6. K-Touch software is covered by a standard one (1) year warranty for software updates.
7. All Kramer passive cables are covered by a lifetime warranty.

Who is Covered

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

What Kramer Electronics Will Do

Kramer Electronics will, at its sole option, provide one of the following three remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of any charge for the necessary parts and labor to complete the repair and restore this product to its proper operating condition. Kramer Electronics will also pay the shipping costs necessary to return this product once the repair is complete.
2. Replace this product with a direct replacement or with a similar product deemed by Kramer Electronics to perform substantially the same function as the original product. If a direct or similar replacement product is supplied, the original product's end warranty date remains unchanged and is transferred to the replacement product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

What Kramer Electronics Will Not Do Under This Limited Warranty

If this product is returned to Kramer Electronics or the authorized dealer from which it was purchased or any other party authorized to repair Kramer Electronics products, this product must be insured during shipment, with the insurance and shipping charges prepaid by you. If this product is returned uninsured, you assume all risks of loss or damage during shipment. Kramer Electronics will not be responsible for any costs related to the removal or re-installation of this product from or into any installation. Kramer Electronics will not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product.

How to Obtain a Remedy Under This Limited Warranty

To obtain a remedy under this limited warranty, you must contact either the authorized Kramer Electronics reseller from whom you purchased this product or the Kramer Electronics office nearest you. For a list of authorized Kramer Electronics resellers and/or Kramer Electronics authorized service providers, visit our web site at www.kramerav.com or contact the Kramer Electronics office nearest you.

In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized Kramer Electronics reseller. If this product is returned under this limited warranty, a return authorization number, obtained from Kramer Electronics, will be required (RMA number). You may also be directed to an authorized reseller or a person authorized by Kramer Electronics to repair the product.

If it is decided that this product should be returned directly to Kramer Electronics, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused.

Limitation of Liability

THE MAXIMUM LIABILITY OF KRAMER ELECTRONICS UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Exclusive Remedy

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF KRAMER ELECTRONICS CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPLICABLE LAW. IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A "CONSUMER PRODUCT" UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPLICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.

Other Conditions

This limited warranty gives you specific legal rights, and you may have other rights which vary from country to country or state to state.

This limited warranty is void if (i) the label bearing the serial number of this product has been removed or defaced, (ii) the product is not distributed by Kramer Electronics or (iii) this product is not purchased from an authorized Kramer Electronics reseller. If you are unsure whether a reseller is an authorized Kramer Electronics reseller, visit our web site at www.kramerav.com or contact a Kramer Electronics office from the list at the end of this document.

Your rights under this limited warranty are not diminished if you do not complete and return the product registration form or complete and submit the online product registration form. Kramer Electronics thanks you for purchasing a Kramer Electronics product. We hope it will give you years of satisfaction.



P/N:



2900-301503

Rev:



1



SAFETY WARNING

Disconnect the unit from the power supply before opening and servicing

For the latest information on our products and a list of Kramer distributors, visit our website where updates to this user manual may be found.

We welcome your questions, comments, and feedback.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. All brand names, product names, and trademarks are the property of their respective owners.