




Black Front Panel Replacement kit for SID-X1 : **SID-X1BP**

Congratulations on purchasing your Kramer **SID-X1BP** Black Front Panel Replacement kit which is used to replace the gray colored front panel with a black one so it can blend into the **T10-22M** inner frame of the **TBUS-10XL**.

The kit includes a black **SID-X1** front panel and an Allen L shaped key.

To replace the front panel of the **SID-X1**:

1. Remove the two front panel screws on the **SID-X1** with the Allen L-shaped key (supplied).
2. Remove all the hexagonal spacers using a 5mm socket spanner wrench (not supplied).
3. Remove the original front panel and replace with the new **SID-X1BP** black front panel.
4. Replace the hexagonal spacers and tighten with the socket spanner wrench.
5. Replace the two front panel screws and tighten with the Allen L shaped key.
6. Keep the original **SID-X1** gray front panel (for future use) in case you choose not to use with the **TBUS-10XL**.

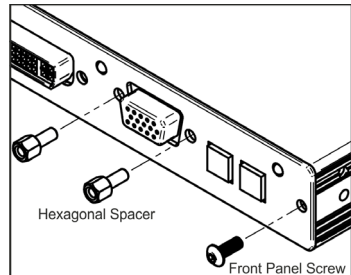

For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this sheet may be found.

We welcome your questions, comments, and feedback.

Web site: www.kramerelectronics.com

E-mail: info@kramereel.com



KRAMER ELECTRONICS LTD.

P/N: 2900-300227 REV 1



P/N: 2900-300227



Rev: 1