



Scan for full manual

RK-10MT Quick Start Guide


This guide helps you install and use your RK-10MT for the first time.

Go to www.kramerav.com/downloads/RK-10MT to download the latest user manual and check if firmware upgrades are available.

Step 1: Check what's in the box

- RK-10MT Rack Mount
- 2 Blank Panels
- 50 Screws
- 1 Quick start guide

Step 2: Get to know your RK-10MT

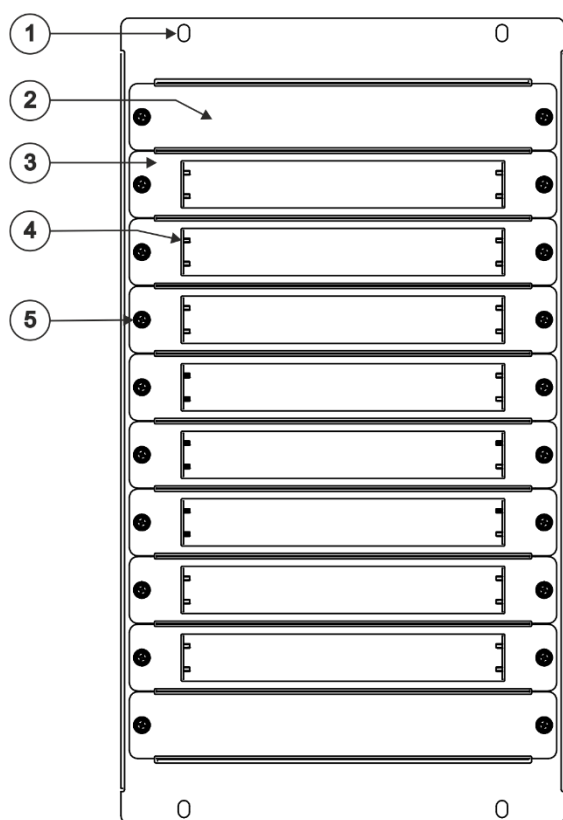

#	Feature	Function
1	Rack Adapter Screw Holes	Connect to a Rack adapter shelf.
2	Blank Panel	Blank panel to cover open slot.
3	Open Panel	Rack-mount panel with opening for inserting the device.
4	Inside Screw Holes	Insert screws (supplied) to attach the device to the open panel.
5	Knob	Turn to attach a panel to the rack.


Step 3: Mount RK-10MT




- Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.
- Avoid uneven mechanical loading.

To mount a device onto the rack:


1. Unfasten the knobs to remove the open panel.

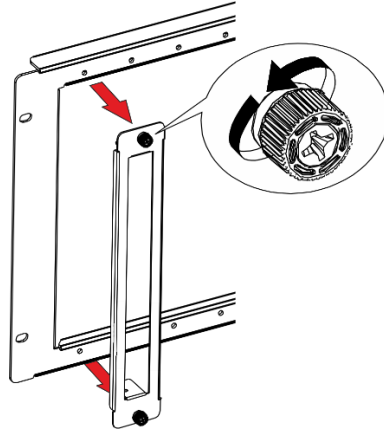

2. Slide the device into the panel opening.
3. Attach the device to the panel using 4 screws (2 on each side to secure the device to the panel).

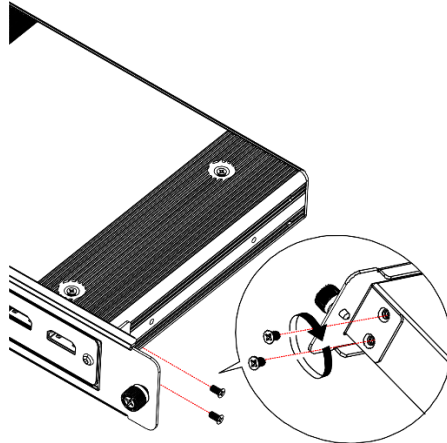

4. Slide the open panel with the device into the rack opening.
5. Turn the knob to secure panel to rack.

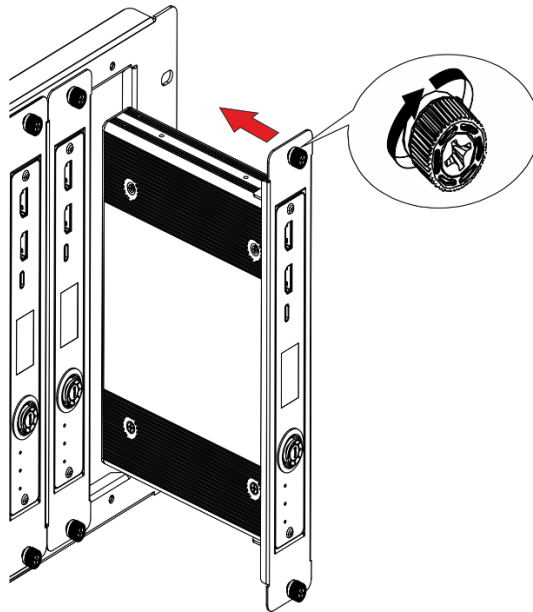

Technical Specifications

Environmental Conditions	Operating Temperature	0° to +40°C (32° to 104°F)
	Storage Temperature	-40° to +70°C (-40° to 158°F)
	Humidity	10% to 90%, RHL non-condensing
Regulatory Compliance	Safety	CE
	Environmental	RoHs, WEEE
Enclosure	Type	SGCC
General	Net Dimensions (W, D, H)	48.2cm x 26.5cm x 3.1cm (19" x 10.4" x 1.2")
	Shipping Dimensions (W, D, H)	52.5cm x 40cm x 8.5cm (20.7" x 15.7" x 3.3")
	Net Weight	1.7kg (3.7lbs) approx.
	Shipping Weight	2.5kg (5.5lbs) approx.

Specifications are subject to change without notice at www.kramerav.com