



Scan for full manual

614T/R Quick Start Guide

This guide helps you install and use your 614T/R for the first time.


Go to https://k.kramerav.com/support/product_downloads.asp to download the latest user manual and check if firmware upgrades are available.

Step 1: Capture the EDID

- 614T/R Two Fiber Detachable Optical DVI Transmitter Receiver
- ✓ 2 Power supplies (5V DC)
- 1 Quick start guide

Step 2: Get to know your 614T/R

Capture the EDID of the display device if the display has a resolution different than 2560x1600.

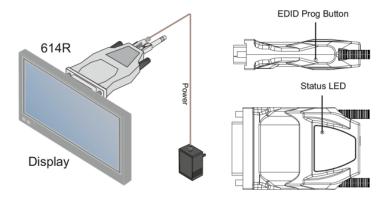


- 1. Connect the power to the display.
- 2. Connect the power to the 614T.
- 3. Push the EDID button.
- 4. Connect the 614T directly to the display device (the LED flashes and turns off after about 7-8 seconds).
- 5. When the LED is off, disconnect the 614T from the display.





Step 3: Connect the transmitter/receiver pair

Always switch OFF the power on each device before connecting it to your 616T/R.

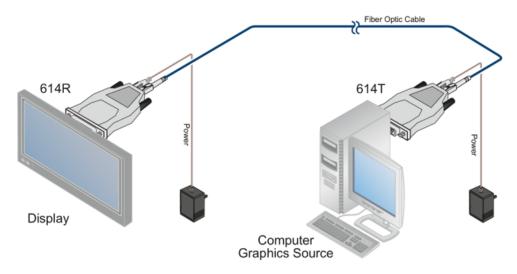

- 1. Connect the power to the 616R.
- 2. Connect the LC fiber cables to the 616T and 616R modules.
- 3. Plug the 616T DVI connector directly to the DVI connector of the PC.
- 4. Plug the 616R DVI connector directly to the DVI connector of the display.
- 5. Connect the power to the PC and the display.



To achieve specified extension distances, use the recommended Kramer cables available at www.kramerav.com/product/616T/616R. Using third-party cables may cause damage!

Step 4: Connecting Power

Connect the power cord to 616T/R and plug it into the mains electricity.



Safety Instructions (See $\underline{www.kramerav.com} \text{ for updated safety information)}$

Caution:

- For products with relay terminals and GPI\O ports, please refer to the permitted rating for an external connection, located next to the terminal or in the User Manual.
- There are no operator serviceable parts inside the unit.

Warning:

- Use only the power cord that is supplied with the unit.
- Disconnect the power and unplug the unit from the wall before installing.



