



Scan for full manual

## Corona Tag Kit Quick Start Guide

This guide helps you use your Corona Tag Kit for the first time.

Go to [www.kramerav.com/downloads/Corona\\_Tag\\_Kit](http://www.kramerav.com/downloads/Corona_Tag_Kit) to download the latest user manual and check if firmware upgrades are available.


### Step 1: Check what's in the box


- ✓ 2 Corona Tags
- ✓ 2 Neck Lanyards
- ✓ 1 USB Micro Type B Cable 1.8M
- ✓ Quick start guides for Corona Tag and Corona Tag Management System

### Step 2: Get to know your Corona Tag Kit

Corona Tag is designed to keep your privacy:

- It records only if you are near another person's Corona Tag.
- It does not collect your location.
- It collects only the minimum and relevant data.
- Corona Tag contains anonymous data.
- You have full control of your data:
  - The collected data is stored in the Corona Tag itself.
  - Only the Administrator has access to the stored data in your Corona Tag after transferring it to him/her.
  - The data is located on premises and under its supervision and security practices.
- Using the Corona Tag and Corona Tag Management System software is subject to your local privacy laws, the EU GDPR and the organization's privacy and security policies and practices.
- Administrator has full control of the data, including deleting it.

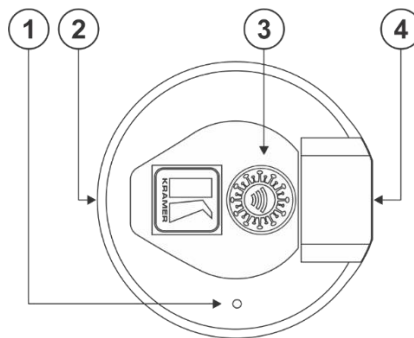

#	Feature	Function
1	LED	In normal operation mode, LED flashes briefly every 10 seconds. Flashes RED when there is another Corona Tag Kit nearby. Flashes GREEN when there are no identifiable tags nearby.
2	Lanyard Buckle	To attach to lanyard.
3	Activation Button	To initially activate Corona Tags out-of-the-box.
4	Micro USB Type B Connector	To connect to a PC with Corona Tag Management System installed.
		 For administrative purposes only. Only a System Administrator has the required cable to connect to the Corona Tag Management System to identify contact with other tags.

Kramer Electronics, LTD. Corona Tags are not designed nor intended to prevent, mitigate, eliminate, treat, diagnose or cure any disease or health condition including COVID-19/Coronavirus. Corona Tags are intended for public use only to monitor social distancing and provide for contract tracing in the workplace, school and public venues. Kramer Electronics, LTD. specifically disclaims that Corona Tags will prevent infection or the transmission of virus(es) or infectious disease(s), including but not limited to, COVID-19/Coronavirus.



## Step 3: Using Corona Tag Management System



Corona Tags require activation by the Corona Tag Management System software before use.

- **Corona Tag** eliminates the need for a company-wide shut down in case of infections.
- For the most accurate social distance monitoring, wear **Corona Tag** uncovered on the chest.
- **Corona Tag** hibernates after 30 minutes of inactivity and powers up immediately upon sensing motion.
- No charging or interaction required.



- Keep **Corona Tag** away from water.
- When **Corona Tag** battery falls below 5%, the LED flashes red continuously.
- If you test positive for Covid-19, contact your company's Corona Tag Administrator immediately.



- To assure safety and health, **Corona Tag** is based on low power scanning, equivalent to 10% of the radiation produced by a standard Bluetooth headset.
- **Corona Tag** does not contain any broadcasting or receiving devices other than Bluetooth.
- No employee information or location is stored (only encountered tag ID, tag distance, and date/time).
- It is advised to use **Corona Tag** in conjunction with local health authorities' recommendations and guidelines.
- If an employee tests positive for Covid-19, only his/her **Corona Tag** is investigated to retrieve a list of encounters with other Corona-Tags.
- The **Corona Tag** battery lasts approximately 4 to 6 months (based on usage), and must be replaced by a technician.

### To install the Corona Tag Management System on a Windows 10 OS:

1. Download the **Corona Tag Management System** software from [www.kramerav.com/downloads/Corona\\_Tag\\_Kit](http://www.kramerav.com/downloads/Corona_Tag_Kit).
2. Follow the on-screen instructions to install the software and activate the license.

### To activate a new Corona Tag:

- Press and hold the **Corona Tag** button for 5 seconds.

The LED flashes green 3 times and then flashes green every 10 seconds (or flashes red every 10 seconds when there is another **Corona Tag** nearby).

### To manage Corona Tag holder data:

- Select **Holder** and click **Show All**.

A list of holder's names, contact information, and **Corona Tag** ID is displayed.

- Click **Add Holder** to add a holder and enter details of a **Corona Tag** holder.
- Click **Edit Holder** to edit an existing holder.
- Click **Import Holders** to import a tab delimited text file.

### To assign a Corona Tag to a holder:

1. Using the USB Micro Type B cable provided, connect one end of the cable to the **Corona Tag** and the other end of the cable to your computer.
2. Select **Provisioning** and follow on-screen instructions.



**Corona Tag** date and time automatically synchronizes with your computer's date and time.

### To display all assigned tags and holder names:

- Select **Tags** and click **Search**.

### To inspect Corona Tag interactions:

1. Using the USB Micro Type B cable provided, connect one end of the cable to the **Corona Tag** and the other end of the cable to your computer.
2. Select **Audit**.
3. Click **Detect Tags**.
4. Select a date range and click **Search**.

A list of holder and duration of encounters is displayed.