KRAMER



Installation Instructions

MODEL:

T1AF-114
Inner Frame













Æ

SAFETY WARNING

Disconnect the unit from the power supply before opening and servicing

P/N:


For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to these installation instructions may be found. We welcome your questions, comments, and feedback.

T1AF-114 Inner Frame

Congratulations on purchasing your Kramer Kramer T1AF-114 Inner Frame for TBUS-1AXL, TBUS-1-KWC and TBUS-1N.

T1AF-114 includes:

- 2 openings for 2 single power sockets.
- 1 opening with 2 blank inserts and 2 cable pass-through inserts.

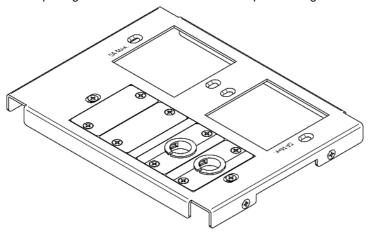

Power Socket and Power Cord Options

Various power sockets and power cords are available to use with the T1AF-114, as described in the "TBUS Modular Power Socket Installation and Power Cord" Installation Instructions (see www.kramerav.com/downloads/T1AF-114), supplied with the power socket.



Each power socket comes with detailed assembly instructions.

Mounting Inserts



Go to <u>www.kramerav.com/downloads/T1AF-114</u> to download the latest user manual and the complete list of Kramer wall plates and module connectors.

You can rearrange or remove any of the plates mounted on the inner frame and replace them with Kramer passive wall plates or connector modules for interfacing A/V type signals.

To mount a Kramer insert or connector module:

- 1. Unscrew the two screws that fasten the blank plate to the inner frame and remove the blank plate.
- 2. Place the required Kramer insert over the opening, insert the two screws to fix the Kramer insert in place, and tighten them.

Installing the Assembled Inner Frame

To install the T1AF-114 inner frame:

- 1. Place the assembled inner frame inside the TBUS enclosure.
- 2. Set the required height using your fingers to bring the inner frame to the desired position, screw and tighten it in place using the height adjustment screws supplied with the inner frame.

Connecting the Cables

To connect the cables when replacing blank inserts with connector inserts (for example, VGA, audio, HDMI and so on):

- 1. Insert the cables to their appropriate connectors from underneath.
- Secure the cables to the tie holes on the TBUS. Do not secure the cables too tightly or too loosely. Leave a small amount of slack.

Inserting Pass-through Cables

To insert the pass-through cables (for example, to connect a laptop) do the following:

- 1. Remove the two screws attaching the split pass-through bracket.
- 2. Remove the split grommet(s).
- 3. Insert the cable(s) through the rectangular opening.
- 4. Open the split grommet slightly and insert the required cables.
- 5. Place the split bracket around the grommet and position this assembly over the inner frame.
- 6. Place the two screws appropriately and tighten the split bracket together with the grommet and inserted cables to the inner frame.
- 7. Insert the self-locking ties through the tie holes to secure the cables to the inside walls of the enclosure.