

User's and Administrator's Manual

KAC-CU-200 MTR on Android™ Compute with KAC-SCD-10 Meeting Room Controller

Version 2.2.311



In this Manual, the following marketing names are interchangeable:

KAC-TCH-10	RX-PAD
KAC-CU-200	RXV-200
KAC-BAR-81	RXV-81
KAC-CAM-50M	RXVCam50M
KAC-CAM-CC-10	RXVCam10CC
KAC-SPK-15	RX-15
KAC-SPK-40	RX-40
KAC-SCD-10	RX-PANEL

Table of Contents

1	Introduction	7
1.1	Highlights	7
1.2	Benefits	7
1.3	Bundles	8
1.3.1	RXV200-B40 Bundle.....	9
1.3.2	RXV200-B20 Bundle.....	9
1.4	Hardware.....	10
1.5	Management	10
1.6	Specifications	10
1.6.1	RXV200.....	11
1.6.2	RX15.....	13
1.6.3	RXVCAM50M	14
2	Getting Started	15
2.1	Before Getting Started.....	15
2.2	Positioning.....	15
2.3	Mounting	15
2.4	Cabling	15
2.5	Powering up	15
3	Connecting to RXV200.....	17
3.1	Signing in	17
3.1.1	Multi-Cloud Sign-in	17
3.1.2	Remote Provisioning and Sign in from Teams Admin Center.....	17
4	Using General RXV200 Functions.....	23
4.1	Modifying RXV200 Camera Settings	23
4.2	Starting a New Meeting	26
4.3	Dialing a Number.....	29
4.4	Enabling Proximity Join	30
4.5	Sharing a Whiteboard.....	31
4.6	About Microsoft Teams.....	33
4.7	Signing out	35
5	Getting Familiar with RXV200 Settings	37
5.1	Device Admin Settings	40
5.1.1	Configuring Display.....	40
5.1.2	Configuring Date & Time	42
5.1.3	Configuring Wi-Fi.....	43
5.1.3.1	Connecting to an Available Wi-Fi Network.....	43
5.1.3.2	Manually Connecting to a Wi-Fi Network.....	44
5.1.4	Configuring Camera Settings	47
5.1.4.1	Configuring Camera Frequency	48
5.1.5	Configuring UI Language & Input	49
5.1.6	Modifying IP Network Settings.....	50
5.1.7	Configuring Call Settings	53
5.2	User Settings.....	55
5.2.1	Setting the Volume	55
5.2.2	Configuring Accessibility Settings.....	55
5.2.3	Setting Live Captions.....	55

5.2.4	Enabling Display of Meeting Name using Exchange Online PowerShell.....	56
5.2.5	Hiding Names and Meeting Titles.....	57
5.2.6	Rebooting RXV200.....	57
5.2.7	Viewing About RXV200.....	57
6	Debugging.....	59
6.1.1.1	Log Settings Collecting Logs.....	60
6.1.1.2	Remote Logging.....	62
6.1.1.3	Diagnostic Data.....	63
6.1.1.4	Reset configuration.....	64
6.1.1.5	Restart Teams app.....	64
6.1.1.6	Company Portal Login.....	64
6.1.1.7	Getting Company Portal Logs.....	64
6.1.1.8	Launch Mobile Teams.....	65
6.1.1.9	Debug Recording.....	65
6.1.1.10	Erase all data (factory reset).....	66
6.1.1.11	Screen Capture.....	66
6.2	Performing Recovery Operations using Power Button.....	67
6.3	Restoring RXV200 Firmware via USB Disk.....	68

List of Tables

Table 1-1:	RXV200 Bundles.....	8
Table 1-2:	RXV200 Specifications.....	11
Table 1-3:	RX15 Specifications.....	13
Table 5-1:	Configuration File Wi-Fi Parameters.....	45
Table 6-1:	Recovery Operation Options using the RXV200's Power Button.....	67

Notice

Information contained in this document is believed to be accurate and reliable at the time of printing. However, due to ongoing product improvements and revisions, AudioCodes cannot guarantee accuracy of printed material after the Date Published nor can it accept responsibility for errors or omissions. Updates to this document can be downloaded from <https://www.audiocodes.com/library/technical-documents>.

This document is subject to change without notice.

Date Published: Oct-12-2023

WEEE EU Directive

Pursuant to the WEEE EU Directive, electronic and electrical waste must not be disposed of with unsorted waste. Please contact your local recycling authority for disposal of this product.

Customer Support

Customer technical support and services are provided by AudioCodes or by an authorized AudioCodes Service Partner. For more information on how to buy technical support for AudioCodes products and for contact information, please visit our website at <https://www.audiocodes.com/services-support/maintenance-and-support>.

Stay in the Loop with AudioCodes



Abbreviations and Conventions

Each abbreviation, unless widely used, is spelled out in full when first used.

Related Documentation

Document Name
RXV200 Microsoft Teams Rooms Bundles
Pairing RX-PAD with Teams Rooms on Android AudioCodes Devices
RX-PAD Meeting Room Controller Quick Guide
One Voice Operation Center (OVOC) Release Notes
One Voice Operation Center (OVOC) User's Manual
Device Manager Administrator's Manual

Documentation Feedback

AudioCodes continually strives to produce high quality documentation. If you have any comments (suggestions or errors) regarding this document, please fill out the Documentation Feedback form on our website at <https://online.audiocodes.com/documentation-feedback>.

This page is intentionally left blank.

1 Introduction

The enterprise workspace and meeting space have changed dramatically over the past decade. Virtually all our communication today is hybrid, involving both on-site participants gathered in one or more meeting rooms and online participants located in their home offices or on the go. Modern meeting devices must be adaptable enough to accommodate any room size or shape, while minimizing the number of table-mounted accessories and devices apart from a microphone and a meeting room controller like the AudioCodes RX-PAD.

To meet this specific need, AudioCodes has created a range of RXV200 bundles which function as Microsoft Teams Rooms on Android devices.

The AudioCodes RXV200 MTR on Android Compute is a robust, dependable and adaptable solution that enables an easy upgrade of any component within the meeting room, thereby facilitating the adoption of new and advanced devices to keep up with latest technology trends without excessive expenditure. Together with the RX-PAD Meeting Room Controller, it provides an easy meeting room experience that significantly boosts productivity.

This Android compute MTR unit serves as the meeting room's nerve center and sits at the heart of the RXV200-B20 and RXV200-B40 bundles. It can be connected to a variety of cameras, audio sources and advanced AI applications.

Controlled by AudioCodes' RX-PAD Meeting Room Controller, the RXV200 offers innovative features such as one-click-to-join with an integrated calendar for easy collaboration initiation, smooth content sharing and simple camera adjustments for a complete hybrid experience.

See also AudioCodes website [here](#) for additional information.

1.1 Highlights

RXV200 feature highlights are:

- Multiple device support for mix-and-match adaptability
- Reliable Android compute unit for every room configuration
- Simple deployment and management
- Cost-effective and value for money
- Allows future addition and upgrade of peripherals (mix-and-match of video and audio devices) such as adding a content camera
- Comprehensive support for Microsoft Teams features is provided for a complete hybrid collaboration
- Intuitive meeting experience with calendar integration and click-to-join or proximity-join experience

1.2 Benefits

- Superb video quality provided by AudioCodes's RXVCam50 AI camera (HD, 4K, auto framing, EPTZ)
- Hear and be heard with crystal-clear sound
- Human sensor for activating the system and welcoming the user upon proximity
- An optimal solution for small to large meeting spaces
- Optional centralized management with AudioCodes' OVOC
- Fully controllable by the RX-PAD Meeting Room Controller center-of-room intelligent touch controller



1.3 Bundles

The RXV200 supports multiple devices for mix-and-match adaptability and simplified deployment and management.

RXV200 bundles provide a reliable solution for every room layout and allow easy meeting room component upgrades.

The RXV200 is available in three main bundles.

Table 1-1: RXV200 Bundles

Name of Bundle	Details	Peripherals
RXV200-B05	<ul style="list-style-type: none"> ▪ Connects to an existing audio-video conference system; enables the integration of existing conference room AV systems with Microsoft Teams by leveraging the functionality of RX-PAD Room Controller ▪ Any room size ▪ Any number of users 	-
RXV200-B20	<ul style="list-style-type: none"> ▪ With its HD wide-angle camera and table-mounted speaker, this bundle is ideal for small rooms of up to 10 users ▪ RX-PAD Room Controller ▪ RXVCam50M (4K Camera, x10 digital zoom, Auto Framing, 100° field of view) ▪ RX15 (2.5m pick-up radius) ▪ See schematic diagram below 	
RXV200-B40	<ul style="list-style-type: none"> ▪ With its HD wide-angle camera and a powerful Audio Bar with two satellite microphones, this bundle is targeted at large rooms of up to 16 users ▪ RX-PAD Room Controller ▪ RXVCam50M (4K Camera, x10 digital zoom, Auto Framing, 100° field of view) ▪ RX40 audio bar (with 2 satellite mics covering a pickup radius of up to 8m pickup) ▪ See schematic diagram below 	

1.4 Hardware

The RXV200's plug-and-play simplicity makes it easy to connect a screen, sound system, AI camera with auto-framing and the RXVCam10-CC Content Camera to simplify Microsoft Teams physical whiteboard sharing, all controlled by a meeting room controller.

- HDMI-In enables participants to share their desktop during a meeting via a simple cable connection
- 1x USB C and 2x USB A to connect camera and audio peripherals

1.5 Management

RXV200 bundles are managed using AudioCodes' One Voice Operations Center (OVOC) Device Manager or Microsoft's Teams admin center (TAC), enabling IT admins to monitor and upgrade the devices from anywhere. Using OVOC, IT admins can easily monitor and manage all bundled devices from a centralized location. Management includes:

- Firmware management / upgrade
- Alarm management
- Upgrade the MTR APK

1.6 Specifications

The powerful RXV200 Android compute unit is suited to every room configuration. The device supports:

- Multiple cameras
 - Modular design allows connecting any current and future peripherals such as the RXVCAM10-CC content camera
 - Superb video quality provided by AudioCodes's RXVCam50M camera (HD, 4K, auto framing, EPTZ)
- Dual screen support
- Any sort of audio
 - Hear and be heard with crystal-clear sound using the RX40 sound bar or RX15 speakerphone
- Advanced AI capabilities
- Fully controllable by RX-PAD center-of-room intelligent touch controller
- RX-PAD includes proximity sensor for activating the system and welcoming users
- HDMI-In enables participants to share their desktop content during a meeting via a simple cable connection

1.6.1 RXV200

The table shows RXV200 specifications.

Table 1-2: RXV200 Specifications

Feature	Description
Camera inputs	<ul style="list-style-type: none"> 2 X 4K simultaneous camera inputs
Content camera	<ul style="list-style-type: none"> 1 content camera input (USB based)
HDMI outputs	<ul style="list-style-type: none"> 2 X HDMI1.4 output to external screens
HDMI input types	<ul style="list-style-type: none"> HDMI 2.0 Ingest (including audio)
Network provisioning	<ul style="list-style-type: none"> TCP/IP (IPv4), DHCP/ static IP; Time and date synchronization via SNTP; VLAN support; QoS support: IEEE 802.1p/Q tagging (VLAN) Layer 3 TOS and DSCP RTCP support: (RFC 1889) IP address configuration: TCP/IP (IPv4), DHCP/static IP; Time and date synchronization: SNTP QoS support: IEEE 802.1p/Q tagging (VLAN), Layer 3 TOS and DSCP RTCP support: (RFC 1889)
Performance	<ul style="list-style-type: none"> PROCESSOR Snapdragon™ QCS8250 MEMORY LPDDR5, 8G STORAGE UFS3.1, 128G GRAPHICS Adreno™ 650
Device interfaces	<ul style="list-style-type: none"> Ethernet: 10/100/1000 Mbps (RJ-45) network interface Wi-Fi (dual band support) Support 802.11 a/b/g/n/ac/ax Bluetooth 5.1 Proximity join and casting via Bluetooth 3 x USB interfaces – 2 USB3 Type A, 1 USB-C 2 x HDMI out interfaces 1 x HDMI in 12V/3A DC power input
Wi-Fi type	<ul style="list-style-type: none"> Dual band Wi-Fi
USB port types	<ul style="list-style-type: none"> One USBC connector and two USBA connectors for audio peripherals
Android version	<ul style="list-style-type: none"> Android 10 (Android 13 in H2/2023)
Chipset type	<ul style="list-style-type: none"> Latest chipset from QUALCOMM for video/conf applications
OS	<ul style="list-style-type: none"> Android 12
UC platform support highlights	<p>Microsoft Teams Room for Android application with:</p> <ul style="list-style-type: none"> Intuitive meeting experience with calendar integration and click-to-join or proximity-join experience Ad hoc USB A/V peripheral for any UC client
Security	<ul style="list-style-type: none"> Encryption: TLS (Transport Layer Security), SRTP encryption for media, AES256 Network Access Control: IEEE 802.1x Built-in certificate Kensington Lock for security measures

Feature	Description
Design	<ul style="list-style-type: none"> ▪ DIMENSIONS (W X D X H) 170 x 170 x 41.3 mm ▪ WEIGHT 0.75 kg
Manageability	<ul style="list-style-type: none"> ▪ AudioCodes One Voice Operation Center (OVOC)

1.6.2 RX15

Following are the RX15 specifications.

Table 1-3: RX15 Specifications

Feature	Description
Connectivity	
USB	USB 2.0
Microphone	
Pickup distance	2.5 meters radius
Microphone	6 element microphone array
Frequency	150Hz~8kHz
Sensitivity	38dBV
Signal-to-noise ratio	65dB
Speaker	
Maximum sound pressure level	80dB SPL at 1m
Distortion	$\leq 4\%$ @150Hz~16kHz
Signal-to-noise ratio	≥ 75 dB at 1m
Frequency response	150Hz~16kHz
Interfaces	
Buttons	6 (Power, Answer/Hang Up, Mute, Bluetooth, Volume +, Volume -)
Indicator light	Power, Volume, Bluetooth, Mute, Answer/Hang Up
Other parameters	
Device weight	395gr
Dimensions	120mm x 35.2mm
Storage temperature	-20°C to 65°C

1.6.3 RXVCAM50M

Following are the RXVCAM50M specifications.

Feature	Description
Camera	
Image Sensor	1/2.5 inch high quality 4K CMOS sensor
Effective Pixels	8.28MP, 16:9
Video Output	USB3.0, Type B.
Video Resolution	3840×2160 @30fps, 1920×1080P @30fps/25fps, 1280×720P@30fps/25fps Sub stream: 1280×720P @30fps/25fps, 640×480P @30fps/25fps, 320×172P @30fps/25fps
Angle of View	102°(D) / 100°(H) / 64°(V)
Focal Length	f=2.26mm
Aperture	F1.8
Minimum Illumination	0.1Lux (F1.8, AGC ON)
Digital Zoom	10x
DNR	2D & 3D DNR
PTZ Control	Supports ePTZ
Input Voltage	DC 5V
Input Current	1A (Max)
Power Consumption	5W (Max)
Store Temperature	-10°C~+60°C
Store Humidity	20%~90%
Working Temperature	-10°C~+50°C
Working Humidity	20%~80%
Dimensions	220mm x 93.75mm x 56.5mm

2 Getting Started

TBD from QG

2.1 Before Getting Started

2.2 Positioning

2.3 Mounting

2.4 Cabling

XXX



2.5 Powering up

XX

This page is intentionally left blank.

3 Connecting to RXV200




Note: See the *RXV200 Microsoft Teams Rooms Bundles* shipped with the product or available from AudioCodes for information about the hardware of the RXV200, including:

- Package contents
- Mounting
- Cabling

After mounting and cabling the RXV200 device as shown in the *Deployment Guide*, pair it with RX-PAD (see the guide *Pairing RX-PAD with Teams Rooms on Android AudioCodes Devices*)


3.1 Signing in

Users are provided by default with the option to sign in from any browser or smartphone with a prominent device code. If you choose to sign in from the device, you can enter your username and password on-screen via the device keyboard.

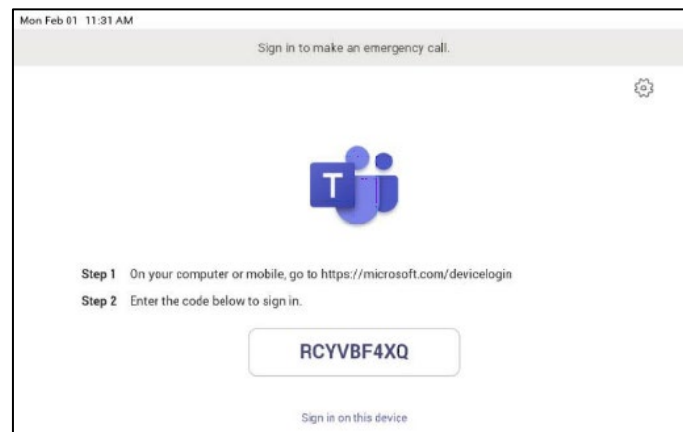

3.1.1 Multi-Cloud Sign-in

For authentication into specialized clouds, the network administrator can choose the Settings gear on the sign-in page to see the options that are applicable to their tenant.

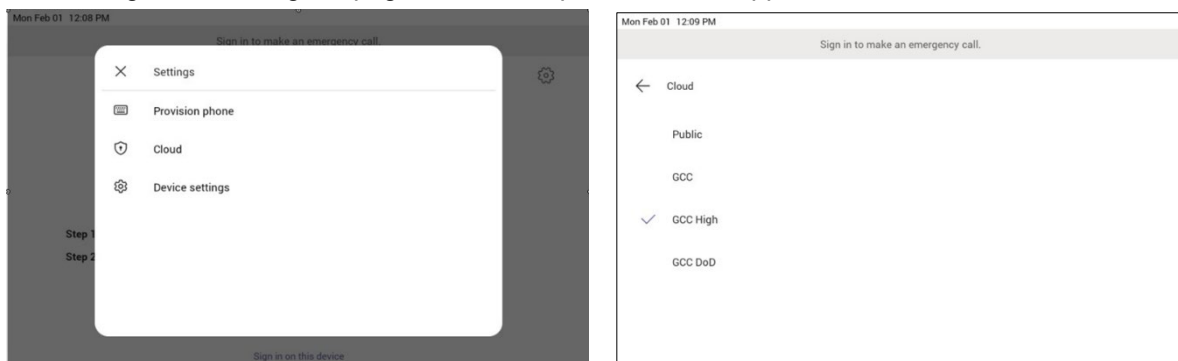

3.1.2 Remote Provisioning and Sign in from Teams Admin Center

See [Remote provisioning and sign in for Teams Android devices - Microsoft Teams | Microsoft Docs](#) for more information.


IT admins can remotely provision and sign in to a Teams device.

To provision a device remotely, the network administrator needs to upload the MAC IDs of the devices being provisioned and create a verification code. The entire process can be completed remotely from the Teams admin center.

Step 1: Add a device MAC address

Provision the device by imprinting a MAC address on it.

1. Sign in to the Teams admin center.
2. Expand **Devices**.
3. Select **Provision new device** from the **Actions** tab.

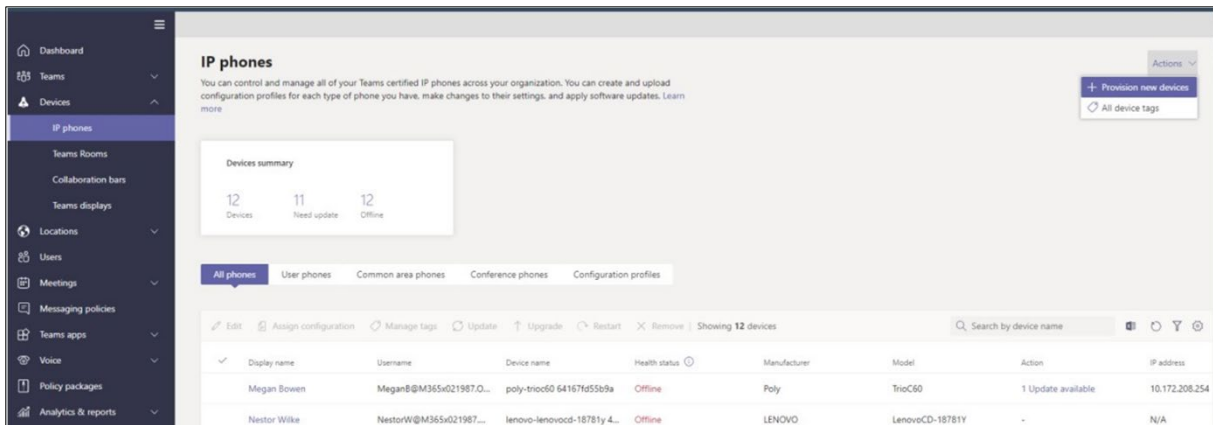

In the 'Provision new devices' window, you can either add the MAC address manually or upload a file.

Manually add a device MAC address

1. From the **Awaiting Activation** tab, select **Add MAC ID**.
2. Enter the MAC ID.
3. Enter a location, which helps technicians identify where to install the devices.
4. Select **Apply** when finished.


Upload a file to add a device MAC address

1. From the **Awaiting Activation** tab, select **Upload MAC IDs**.
2. Download the file template.
3. Enter the MAC ID and location, and then save the file.
4. Select the file, and then select **Upload**.

Step 2: Generate a verification code

You need to generate a verification code for the devices. The verification code is generated in bulk or at the device level and is valid for 24 hours.


- From the **Awaiting Activation** tab, select an existing MAC ID. A password is created for the MAC address and is shown in the **Verification Code** column.

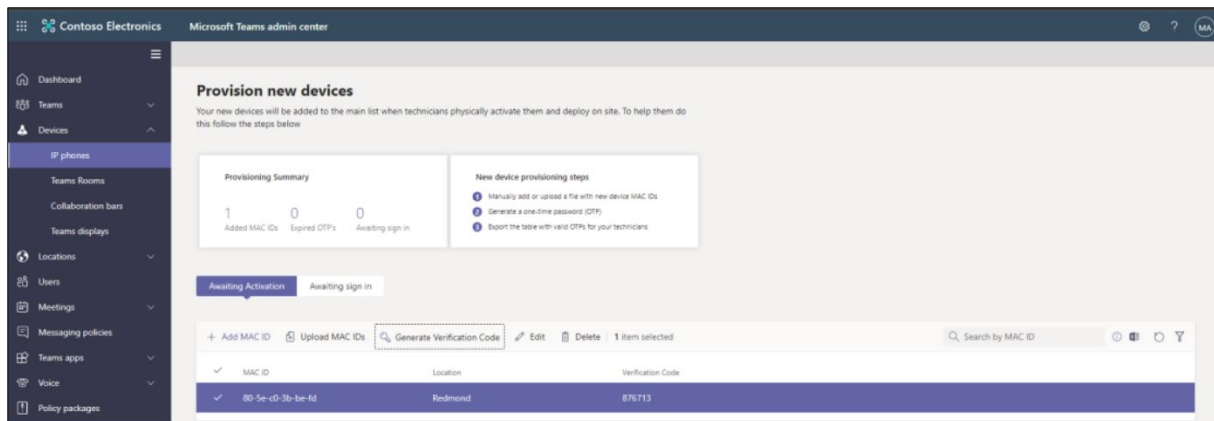


You'll need to provide the list of MAC IDs and verification codes to the field technicians. You can export the detail directly in a file and share the file with the technician who is doing the actual installation work.

Step 3: Provisioning on the device

Once the device is powered up and connected to the network, the technician provisions the device by choosing the 'Settings' gear on the top right of the new 'Sign in' page and selecting **Provision phone**.

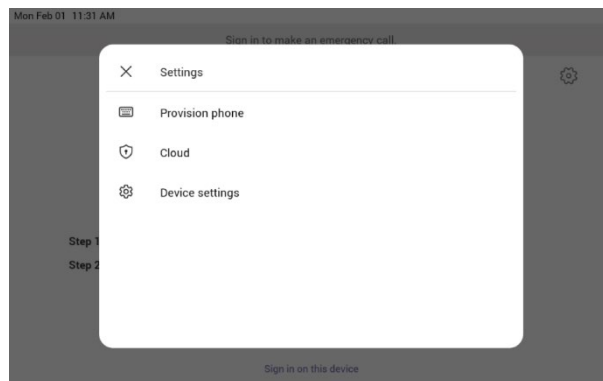


The technician is then expected to enter the device-specific Verification code that was provided in the Teams admin center on the phone's user interface. Once the device is provisioned successfully, the tenant name will be available on the sign in page.

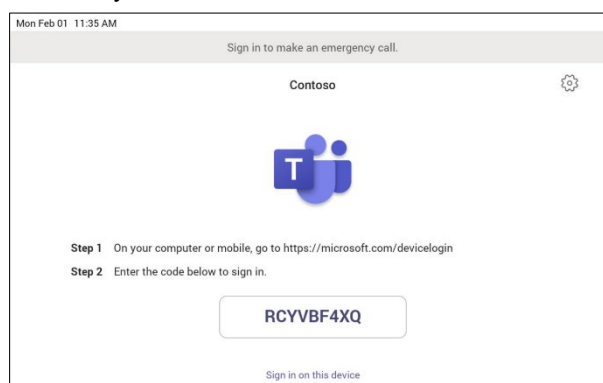



Step 4: Sign in remotely

The provisioned device appears in the Awaiting sign in tab. Initiate the remote sign-in process by selecting the individual device.


1. Select a device from the **Awaiting sign in** tab.
2. Follow the instructions in **Sign in a user**, and then select **Close**.

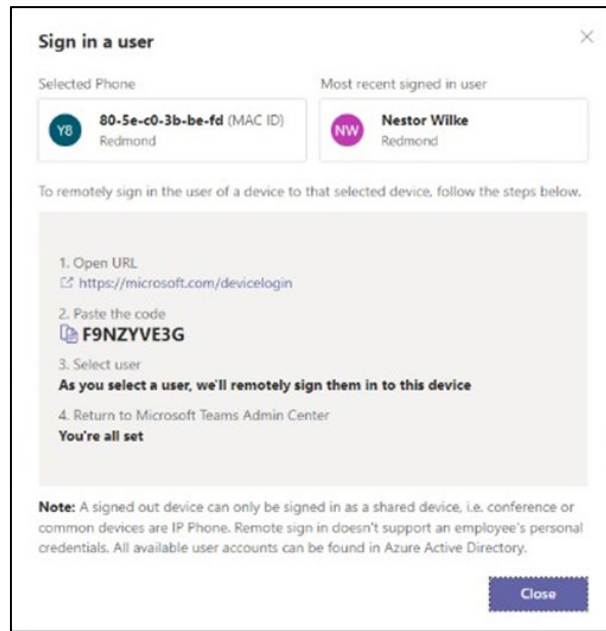

The tenant admin is expected to complete authentication on the device from any browser or smartphone.

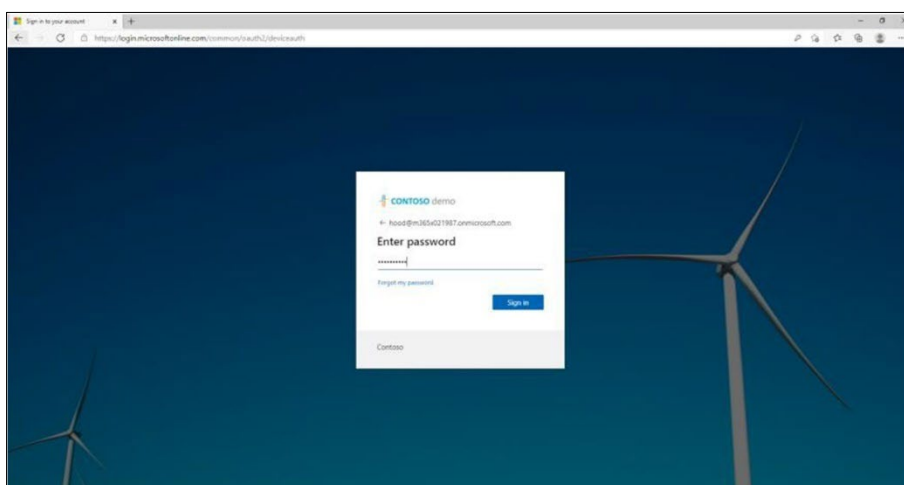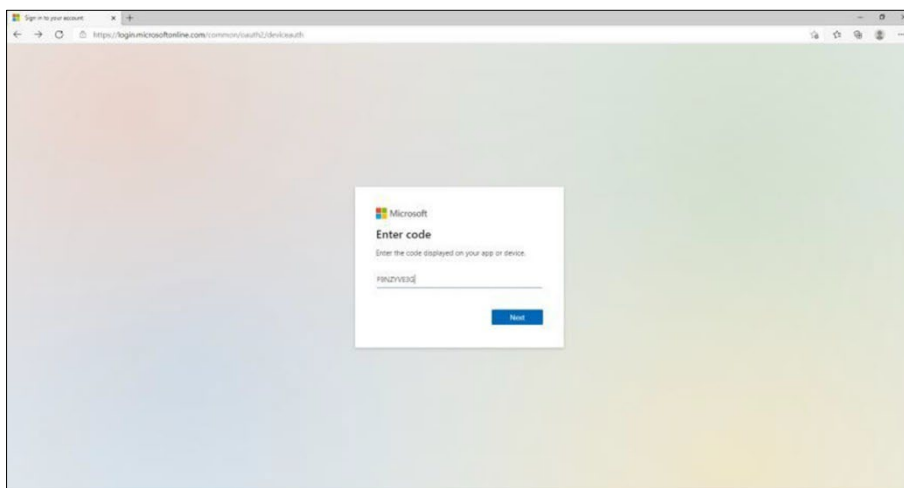

When the tenant admin is signing in from Teams Admin Center, the user interface on the device is blocked to prevent other actions on the phone.

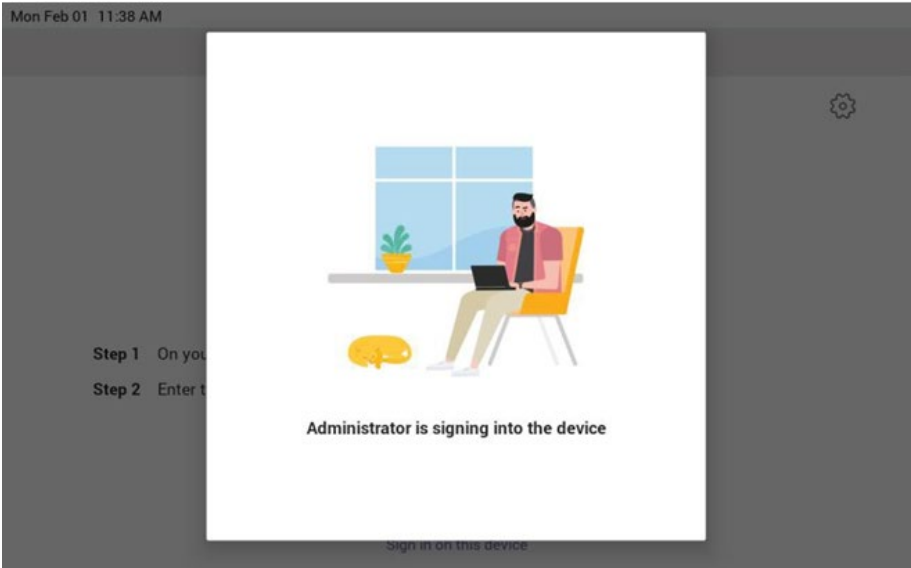

This page is intentionally left blank.


4 Using General RXV200 Functions

This section shows how to use general RXV200 functions.

➤ **To get started:**

1. After signing in, view the RXV200 home page.

Figure 4-1: Home Page

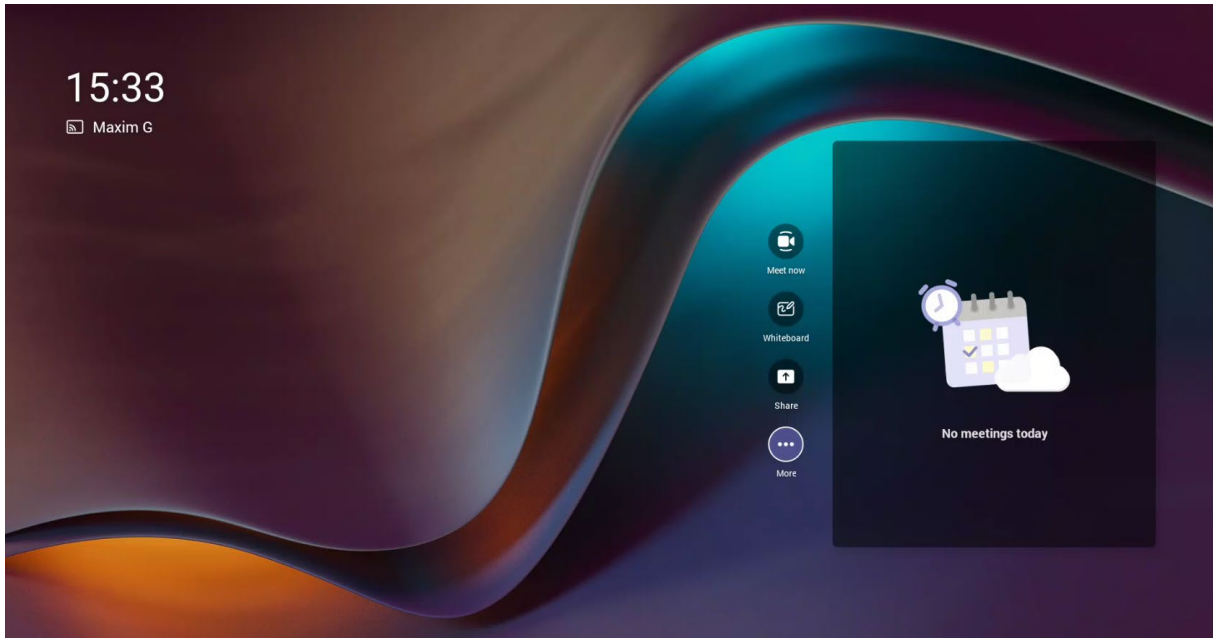


4.1 Modifying RXV200 Camera Settings

You can modify the RXV200 camera settings relating to the look and feel of the video user interface, to suit your preferences.

➤ **To access the RXV200 camera settings:**

- In RX-PAD, long-press the camera icon on the device.

Figure 4-2: RXV200 Camera Settings






Note:

- During a call, *all users* who are signed into the RXV200 – Admins *and* personal users - can change **Camera settings**, including the presets. All have the permissions required to do so. When the call ends, the RXV200 reverts to its preconfigured presets.
- Using a Teams shared account, only the Admin can access **Camera Settings** in idle and edit camera presets; the user can only move between the defined presets during a video call/meeting. The user can change **Camera Settings** during the meeting but the changes are not saved.
- Changing camera settings during a meeting can be done without turning off the video to remote parties.
- The option to access **Camera settings** from the RXV200's **Device Settings** still exists; administrator permissions will be required in this case.

- The **Camera settings** option allows saving different camera settings to be used in a video call so that users can switch easily between predefined camera settings (camera presets) per user requirements in the call.



Note: Users can toggle between the presets, a convenient way to move from one preset to another, to view each preset and to reconfigure a preset. Click the **Camera Views** option and in the **Select View** menu that opens, choose the required preset.

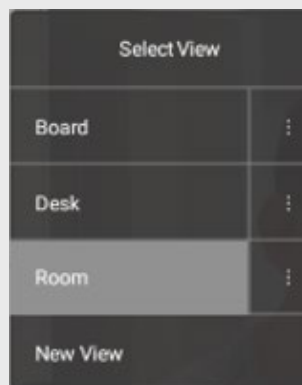


- For example, if a preset is configured to zoom in and focus on the whiteboard in a room, users in a video call/meeting can switch to it and later switch back to the full room preset or any other predefined preset. It's recommended to have a few presets configured for locations frequently zoomed in and focused on:
 - ◆ **Full room view** to capture all participants and action in a meeting room
 - ◆ **Presenter or single user / desk view** to focus on a single user in the room, usually the presenter
 - ◆ **Whiteboard view** if there's a whiteboard in the room
 - ◆ **Sunlight or dark modes** if direct sunlight enters the room at specific times of the day/year

Camera settings can be changed during a meeting without turning off the video to remote parties.


➤ **To add a camera preset when in idle mode:**

1. Long-press the camera button to access **Camera settings**.

Figure 4-3: Camera settings

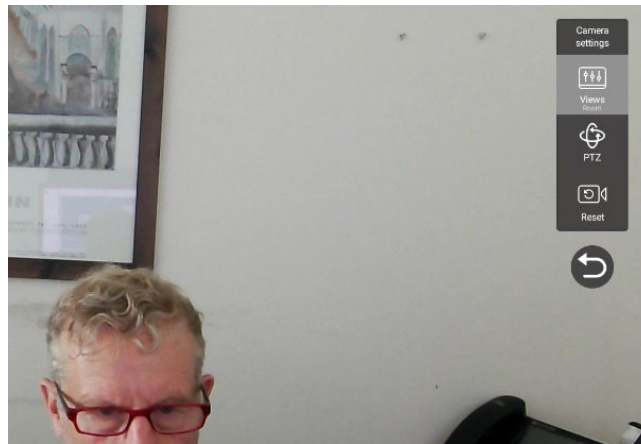

- 2. Navigate to and select **Views** to create a view; you can create up to three views.

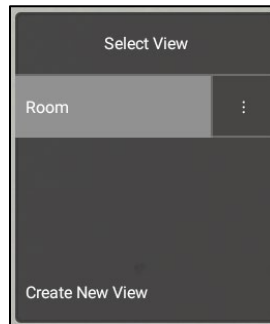

- 3. Navigate to and select **PTZ** to define pan, tilt, and zoom settings for each view.



- 4. Navigate to and select **Reset** for the camera settings to return to their defaults.

4.2 Starting a New Meeting

➤ **To start a new meeting:**


1. In the home screen, navigate to and select the **Meet Now** option.

Figure 4-4: New meeting – Invite someone




2. In the 'Invite someone' field, enter the name of a person to invite; after entering the first letters in the name, matching contacts from directory are displayed.

Figure 4-5: New meeting – Enter the name of a person

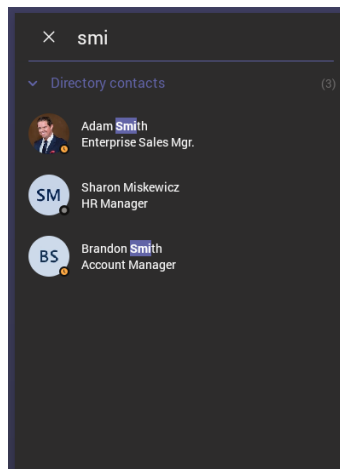


3. Select the name of the person to invite.

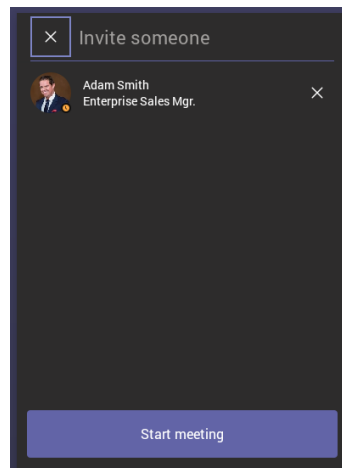Figure 4-6: New meeting – Select the name of a person



4. Invite someone else – or others – and then select **Start meeting**.



Note: The server allocates a meeting ID number and sends an invite message to all participant devices. All devices simultaneously indicate an incoming call (the 'Calling' screen is displayed). The server manages every aspect of the call.

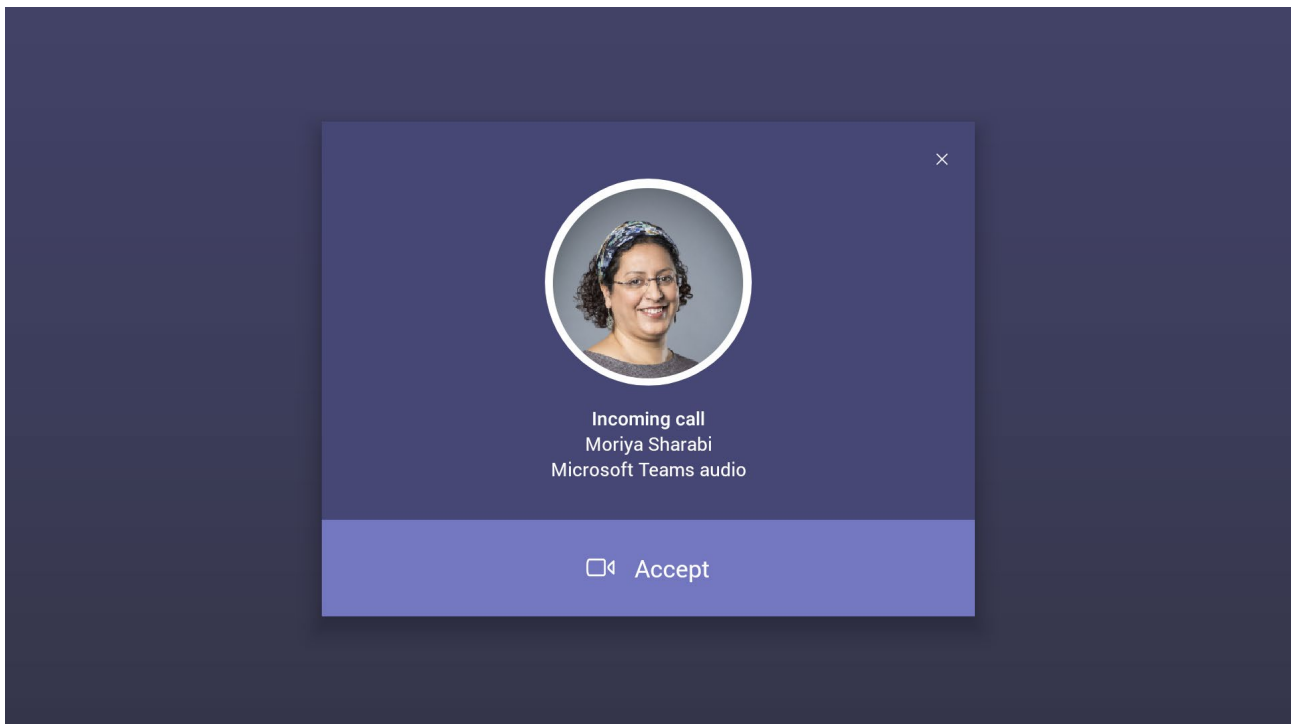

5. Select **Accept**. Note that according to the icon in the 'Incoming call' screen shown in the preceding figure, the caller has video capability.

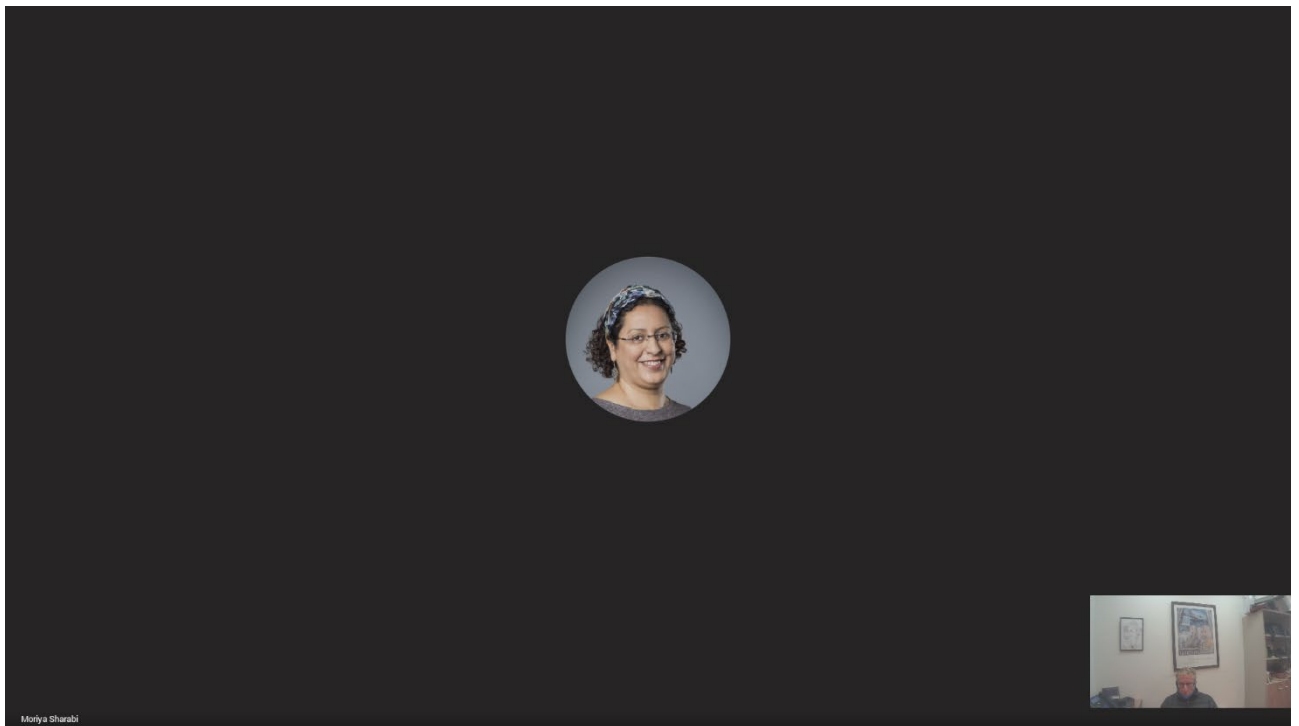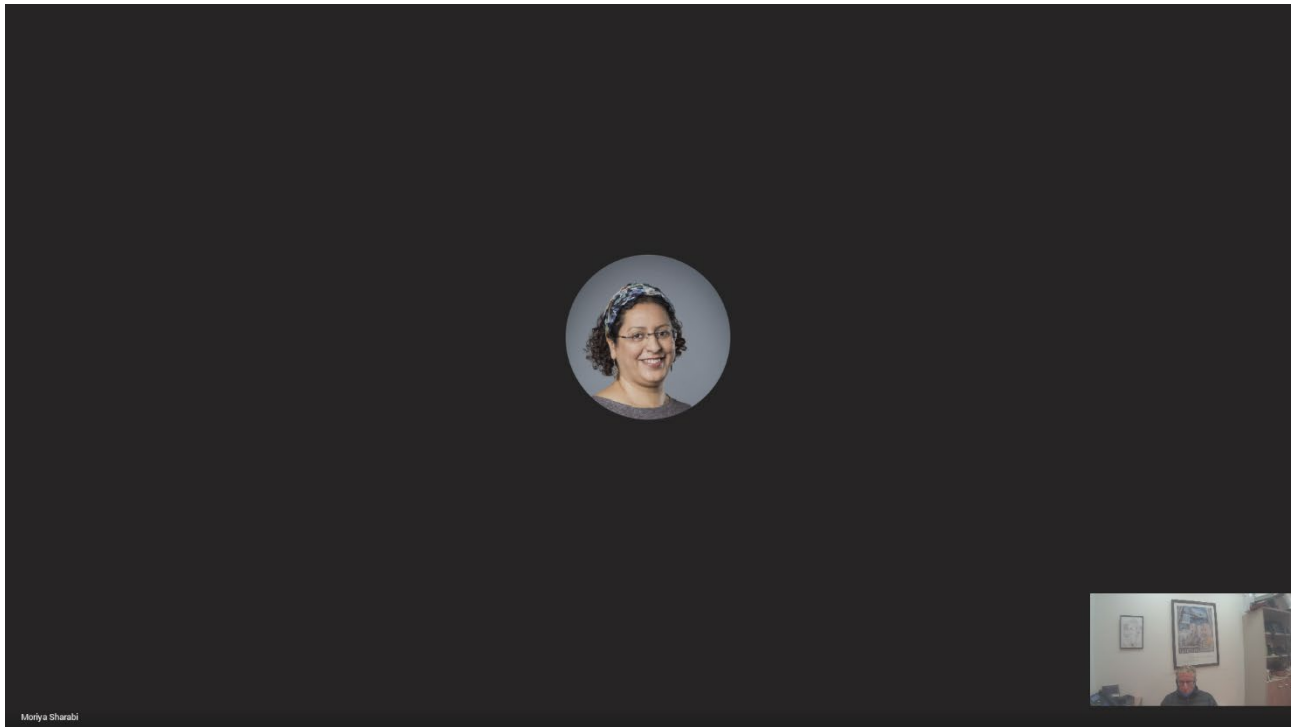


4.3 Dialing a Number

You can manually dial someone's phone number.

➤ **To dial a phone number:**

1. In the home screen, navigate to and select the **Dial pad** option.

Figure 4-7: Dial pad

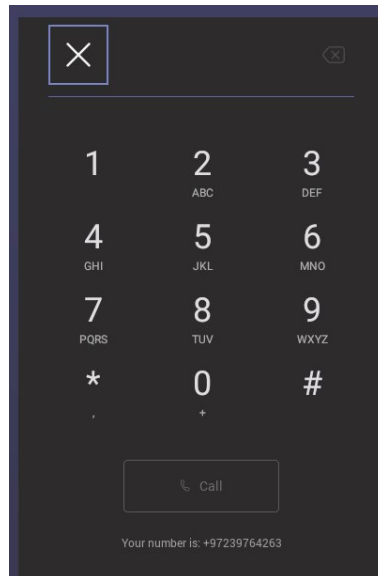


2. Enter the digits of the destination to call and select **Call**.

4.4 Enabling Proximity Join


'Proximity Join' allows you to discover and add a nearby, available Microsoft Teams Room, i.e., the RXV200, in this case, to any meeting. It's also possible to accept the incoming meeting on the console of the room.

The feature functions in combination with Bluetooth and 'Bluetooth Beacons', an integral feature in Microsoft Teams Rooms (MTRs). The MTR device is RXV200. If you bring a laptop or a Teams Mobile Client near the RXV200, it'll offer the RXV200 as the room audio device. The figure below shows how to select the room audio device.

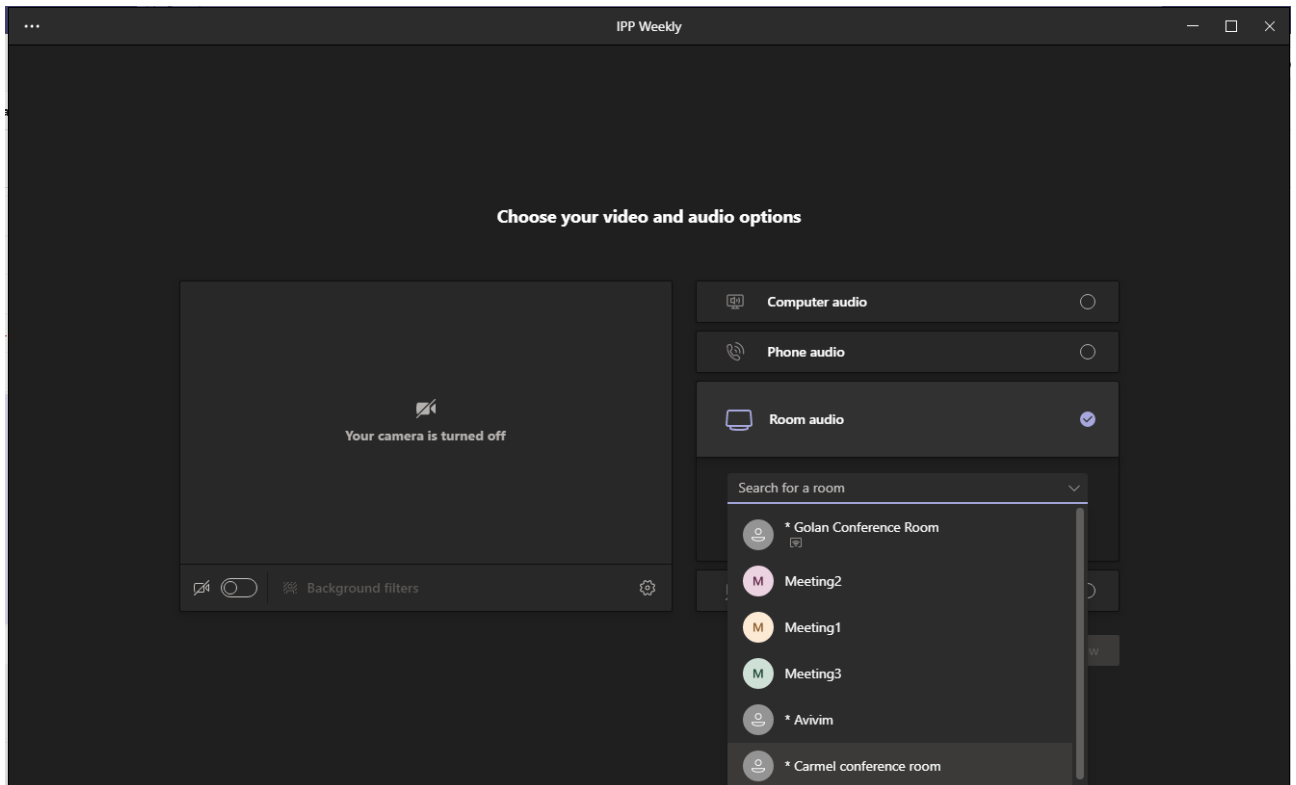

After you select the room audio device, the meeting is opened without any audio device on your PC client, and then the room meeting device (RXV200) gets a request to join the meeting.

- **To enable 'Proximity join':**
- In the Settings screen, navigate to and select **Proximity join**. If it's disabled, it'll become enabled and vice versa.

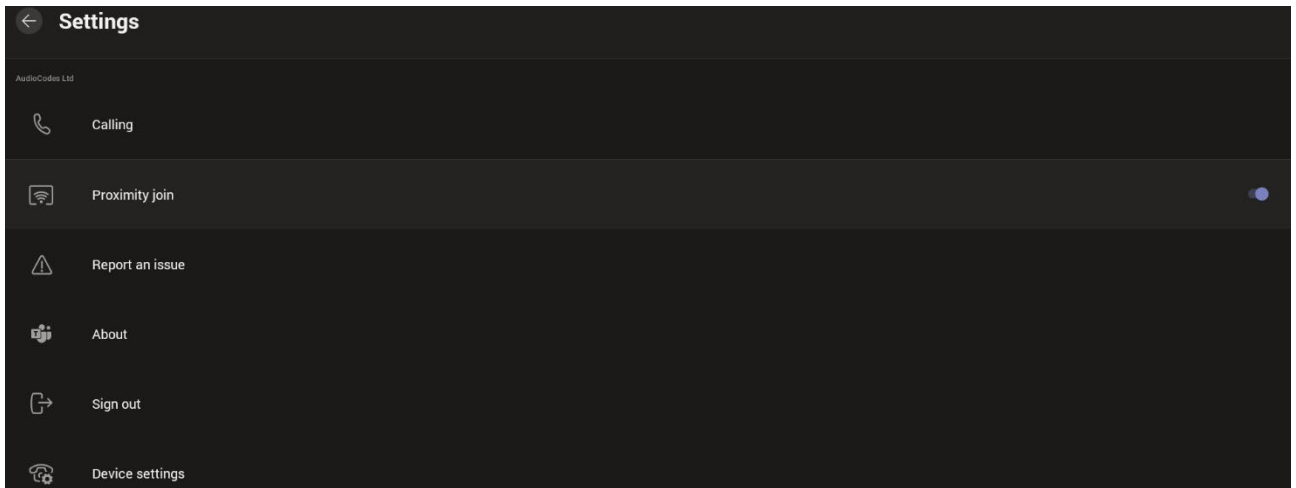


4.5 Sharing a Whiteboard


Teams meetings on the RXV200 allow participants to open a virtual whiteboard – a digital canvas - on which they can sketch, illustrate, collaborate, brainstorm, plan, and share perspectives with one another in real time. The focus switches away from the presenting participant to the whiteboard. For more information about this Microsoft feature, see [here](#).

➤ To share the Whiteboard:


1. From the Settings menu, select **Share Whiteboard**.

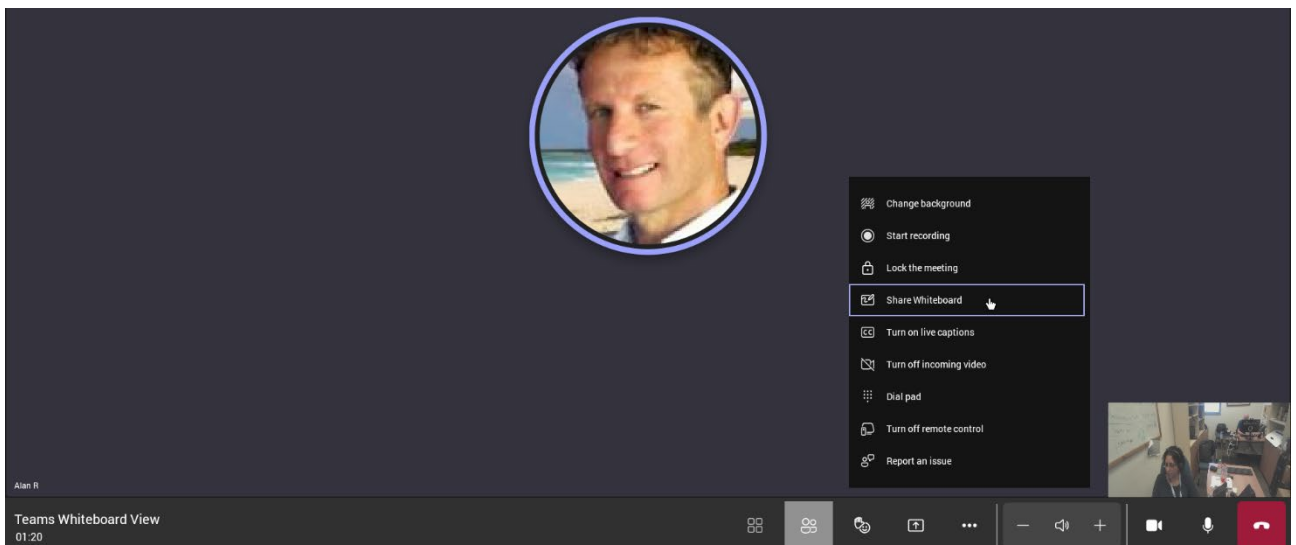


2. Alternatively, access the Whiteboard from **Share content**:

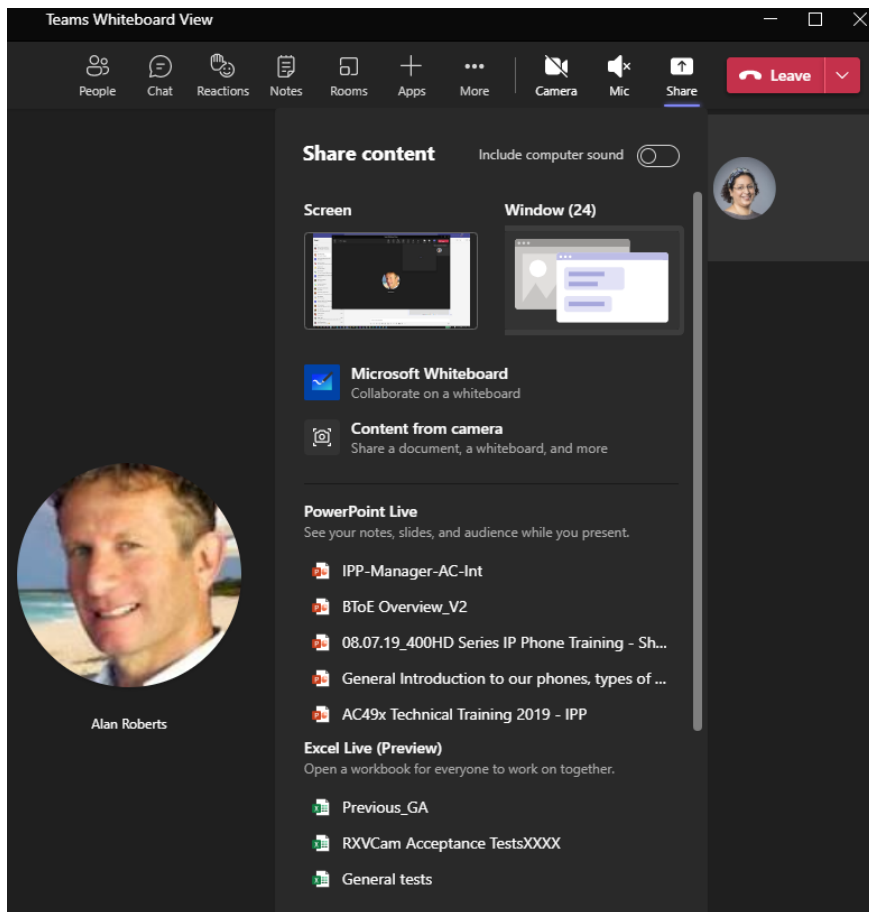


3. View the following Microsoft Whiteboard initializing indication:

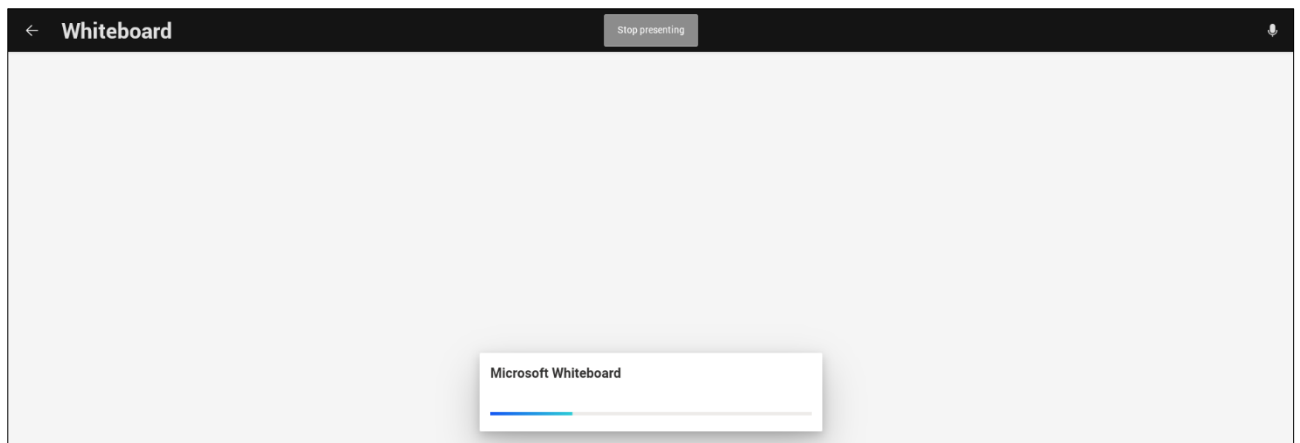

4. View the Whiteboard in the Teams desktop application or in Teams client:

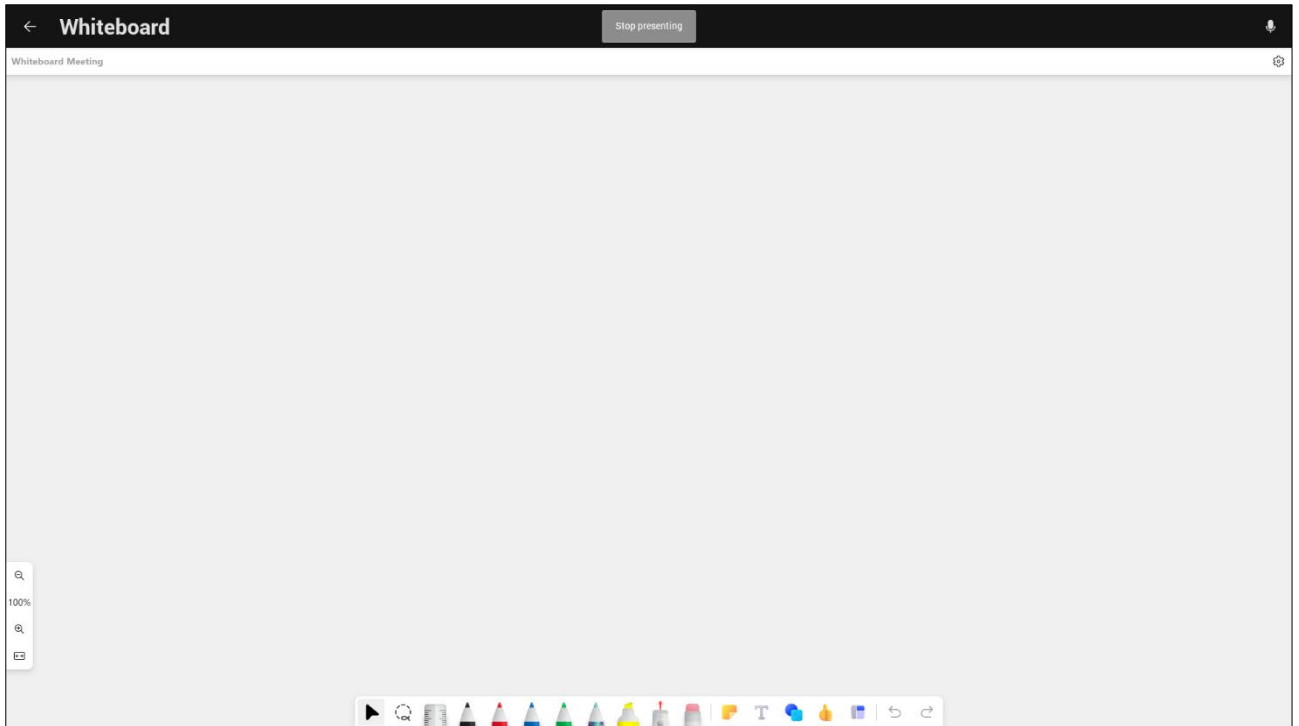


- 5. Edit the Whiteboard; every participant with privileges can edit it.

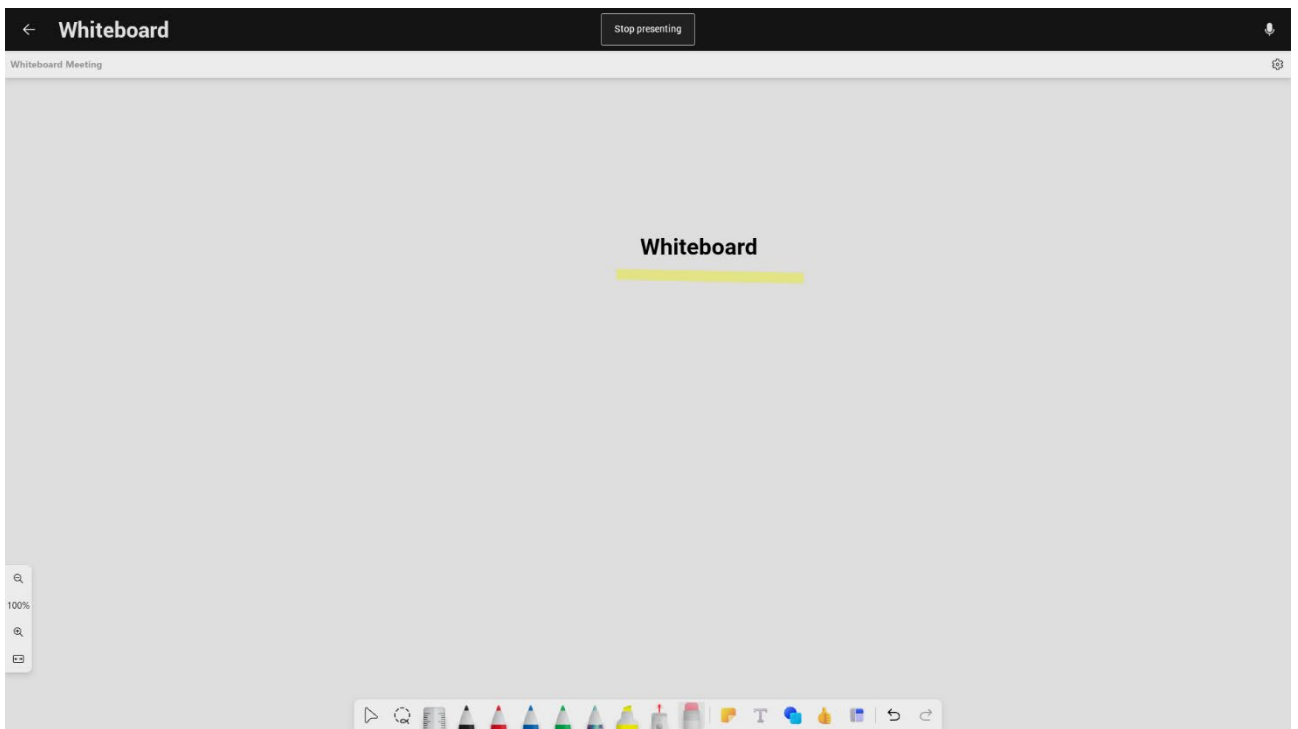

4.6 About Microsoft Teams

Information about the Microsoft Teams application can be viewed by navigating to and selecting the Settings screen's **About** option shown in the preceding figure.

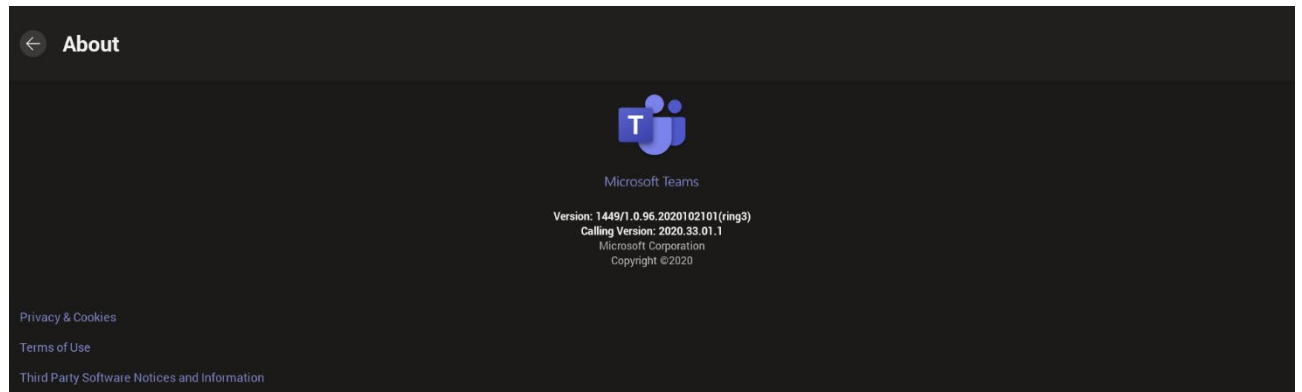


4.7 Signing out

You can sign out of the application as one user and optionally sign in again as another.

➤ To sign out:

- Navigate to and select **Sign out** in the Settings screen shown in the preceding figure.

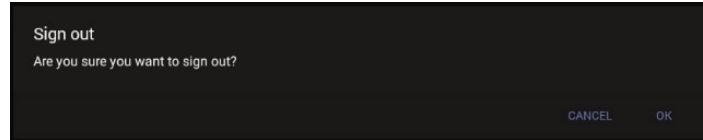

Optionally, remote sign-out can be performed from Microsoft Teams admin center (TAC). Network administrators can provision the RXV200 from the TAC, remotely sign in, and also sign out.

➤ To sign out of the RXV200 using Microsoft TAC:

- Navigate to the TAC screen shown in the figure below and from the ... menu located in the uppermost right corner of the screen, select **Actions** and then **Sign out**.

The screenshot shows the Microsoft Teams admin center interface. The main content area displays the configuration for a device named 'John' (e435hd). The device is shown as 'Healthy' with a '7-DAY QUALITY' gauge and '7-DAY ACTIVITY' showing 0 meetings and 27 calls. A 'Software health' table is visible below the device details.

Software type	Current version	Health status
Teams Admin Agent	1.0.0.202108193738product	Up to date
Firmware	TEAM6_114390	Up to date
Company Portal App	5.0.5211.0	Up to date
OEM Agent App	1.0.90	Up to date
Teams App	144871.094.2021081703	Up to date


This page is intentionally left blank.

5 Getting Familiar with RXV200 Settings


The section familiarizes you with the RXV200's settings. RXV200s are delivered configured with their default settings. Customers can customize them to suit enterprise requirements.

➤ **To access device settings:**


1. In the home screen, navigate to and select the **More** option.

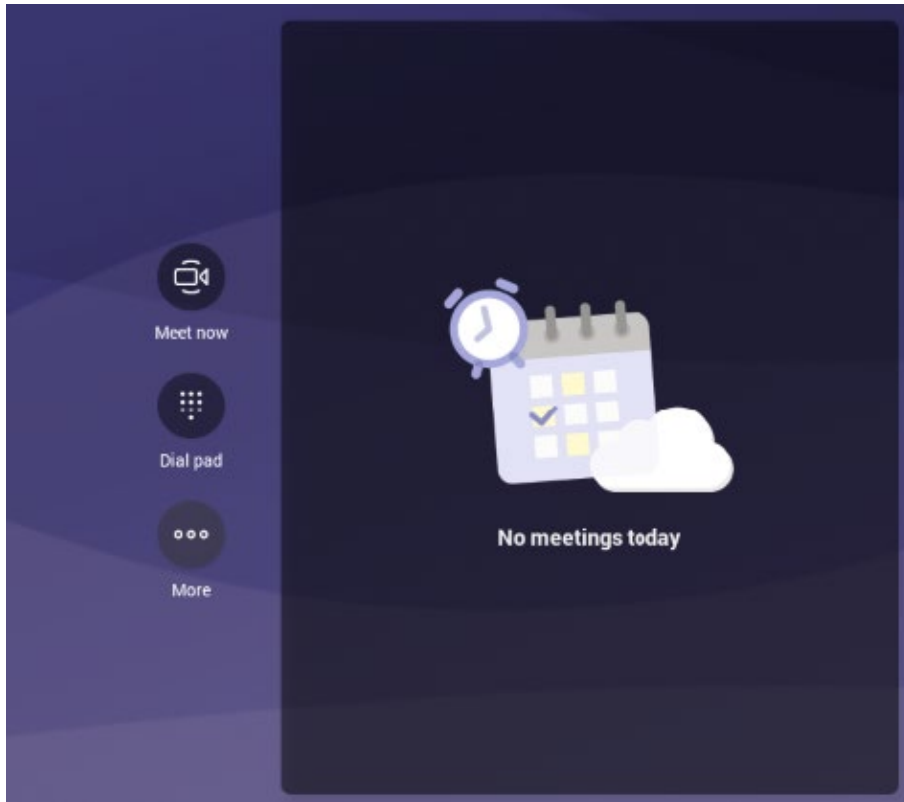


2. Navigate to and select **Settings**.

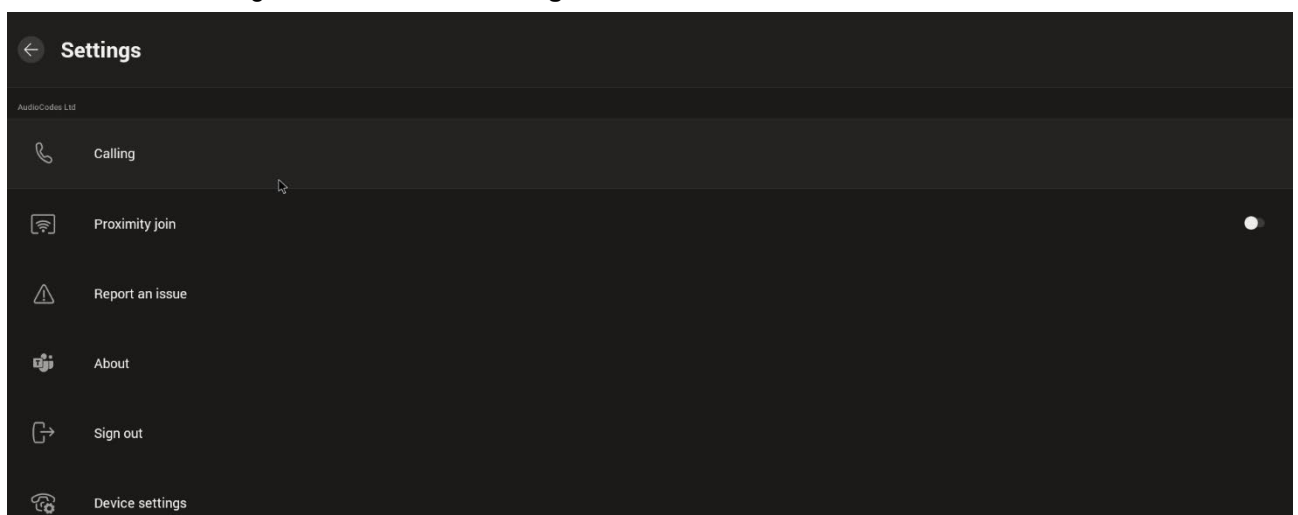

3. Navigate to and select **Device settings**.

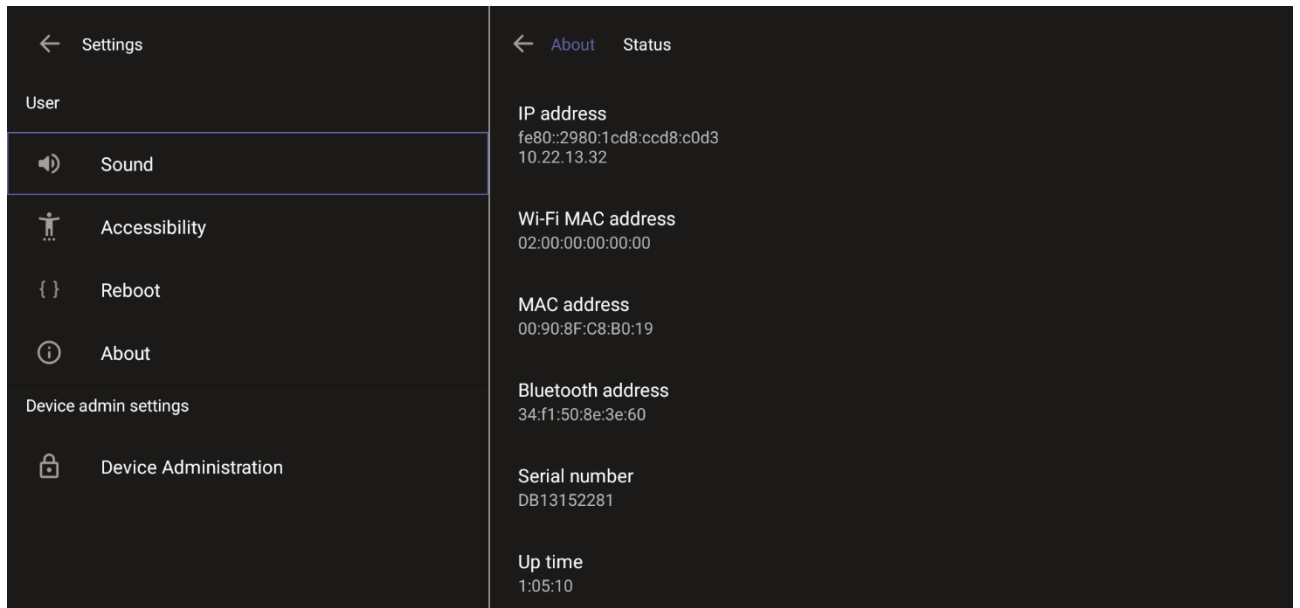

4. Navigate to and select Device Administration.

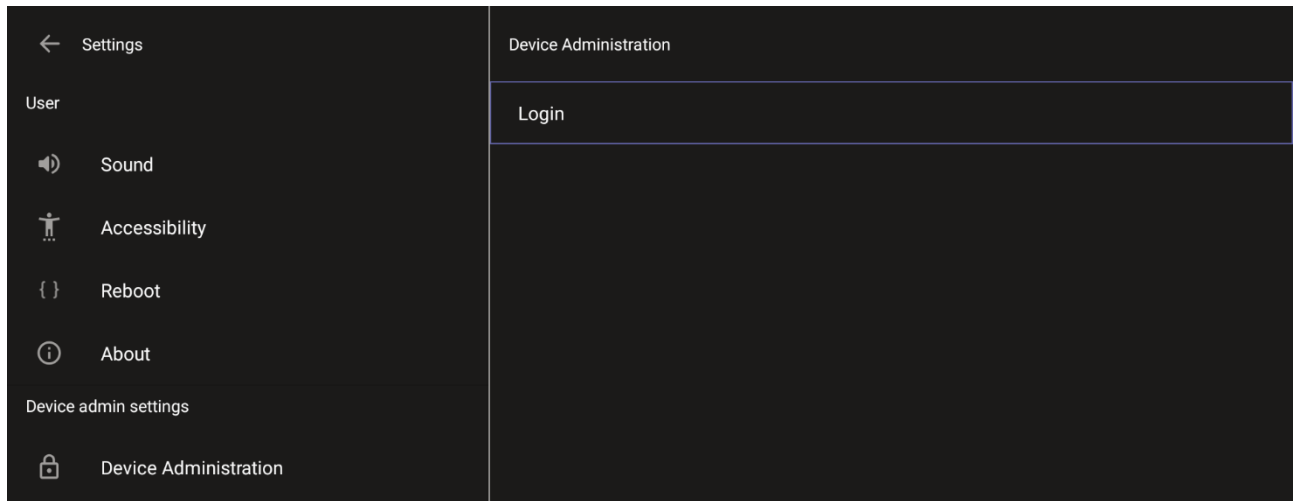


5. Log in as administrator.



Note: Logging in as Administrator is required for debugging options. It's password protected. Default: **1234**. After logging in as Admin, you can log out | change password.

6. Select Login.

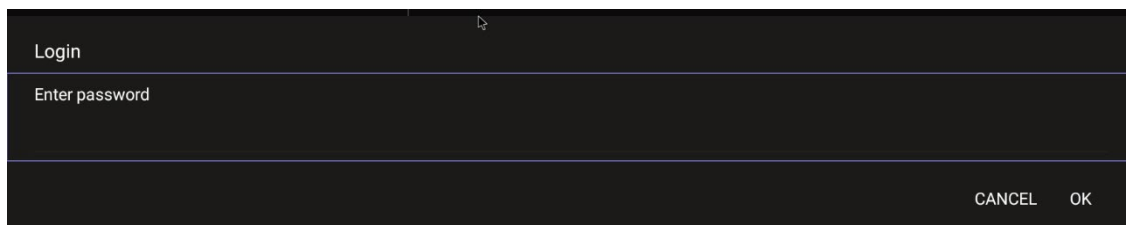

7. Enter the password (1234) in the 'Enter password' field; use the virtual keyboard to enter the password.



Note: The virtual keyboard pops up for all 'Settings' fields to allow inputting characters and / or numbers. Two virtual keyboard types can be displayed: Numeric or QWERTY.

8. Select **OK**; you're prompted to change password.



Note:

- The default password must be changed before access to the device via SSH is allowed.
- The default password can be changed per device from the GUI, or via bulk configuration of multiple devices using Microsoft's TAC or AudioCodes' Device Manager.


9. Enter a password; you're prompted to verify the password you entered. Criteria required for a strong password are provided (for strengthened security) in order to Log in as Administrator:
 - The password length must be greater than or equal to 8.
 - The password must contain one or more uppercase characters.
 - The password must contain one or more lowercase characters.
 - The password must contain one or more numeric values.
 - The password must contain one or more special characters.



Note: These virtual keyboards are also displayed when the admin needs to enter an IP address to debug, or when they need to enter their PIN lock for the security setting.

After logging in, the Settings screen now also displays the settings under the section 'Device admin settings'.

10. Click **OK**; the Settings screen now also displays 'Device admin settings', in addition to the 'User' settings.

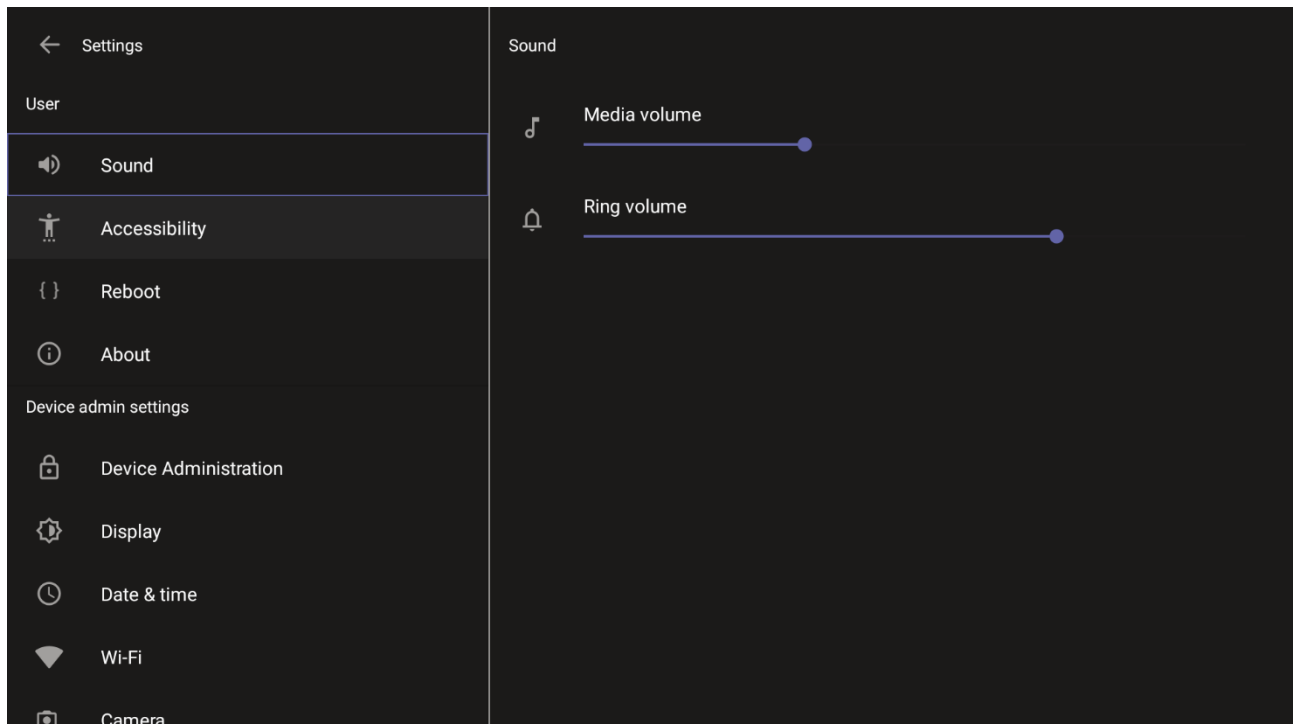

5.1 Device Admin Settings


After logging in as Device Administration as shown in the previous section, you can configure Device Administration settings: Display, Date & Time, Wi-Fi, Camera.

5.1.1 Configuring Display


Modify these settings to suit your preferences related to the look and feel of the user interface.

➤ **To configure Display settings:**


1. Under 'Device admin settings', navigate to and select **Display**.

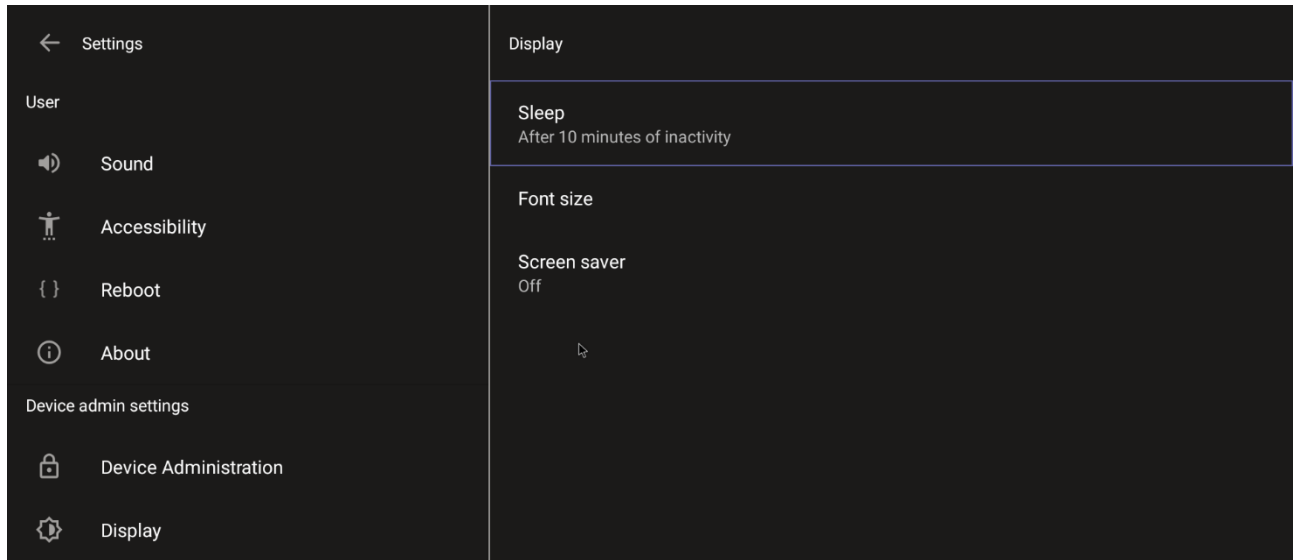


2. Under 'Display', navigate to and select **Sleep**.

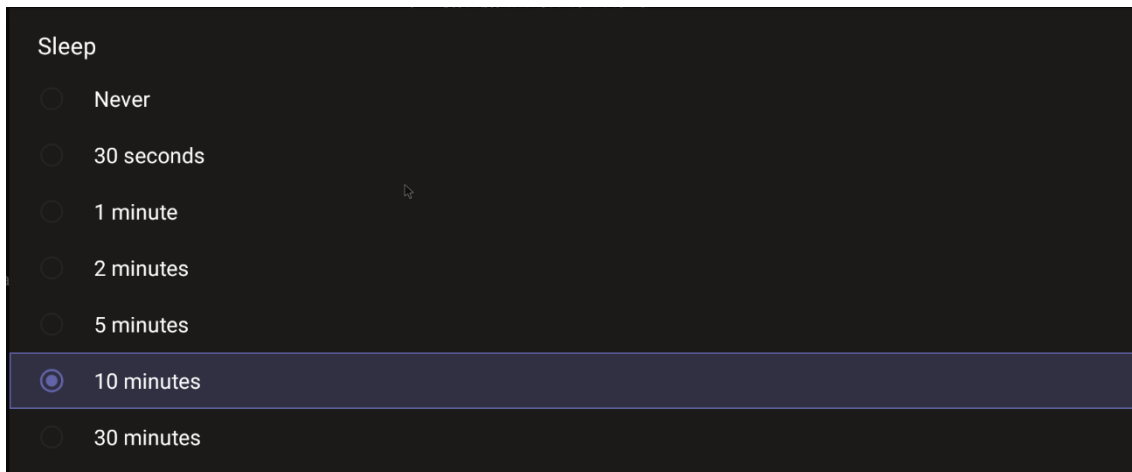

3. Navigate to and select the time to lapse before the interface 'goes to sleep'. Default: 10 minutes.
4. Navigate to and select **Font size**.

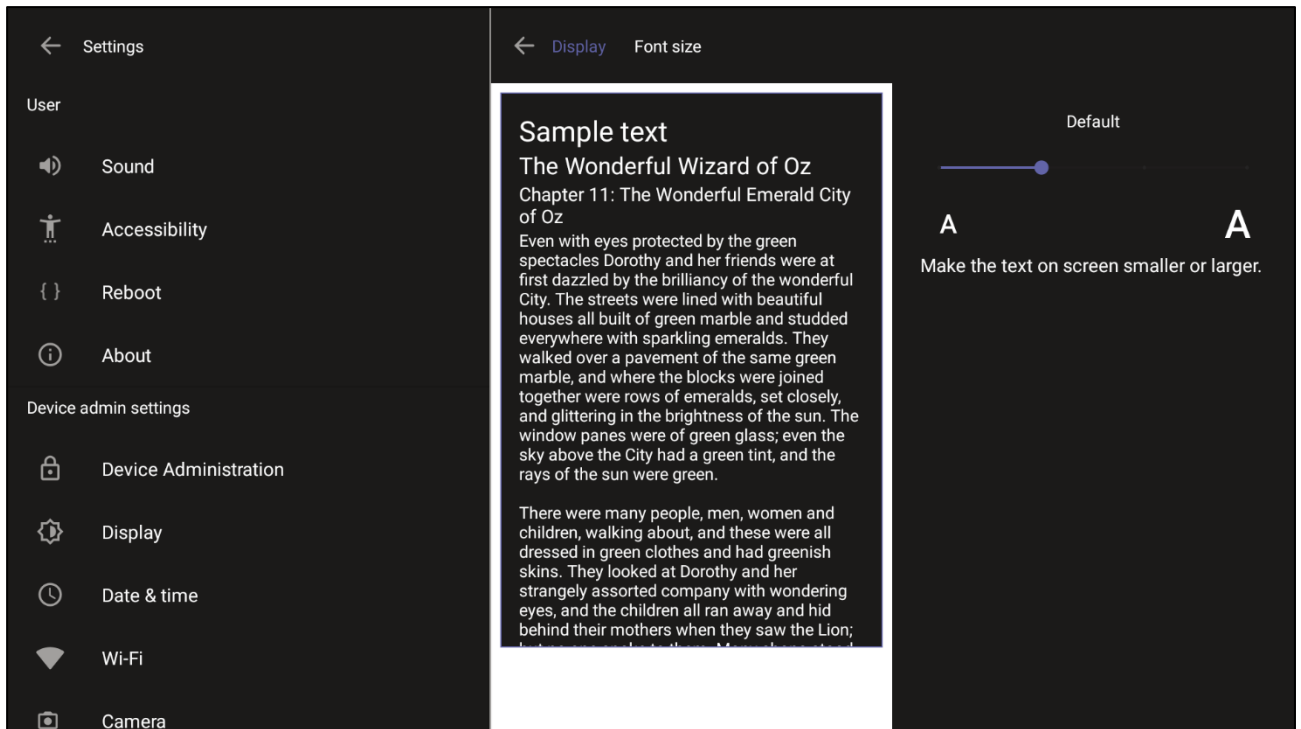

5. Navigate to and select **Screen saver**.

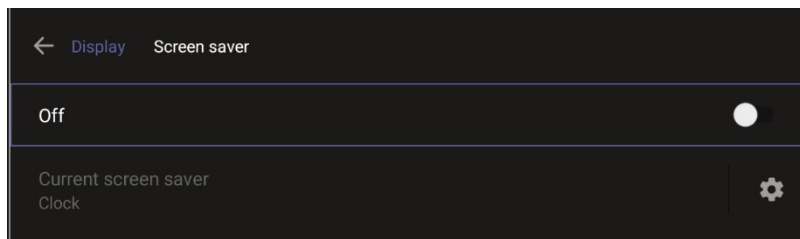


6. Navigate to and select **Off** to switch it on and then choose the screen saver.

5.1.2 Configuring Date & Time

Date and time are automatically retrieved from the deployed Network Time Protocol (NTP) server.

➤ **To configure Date & Time:**

1. Under 'Device admin settings', navigate to and select **Date & Time**.

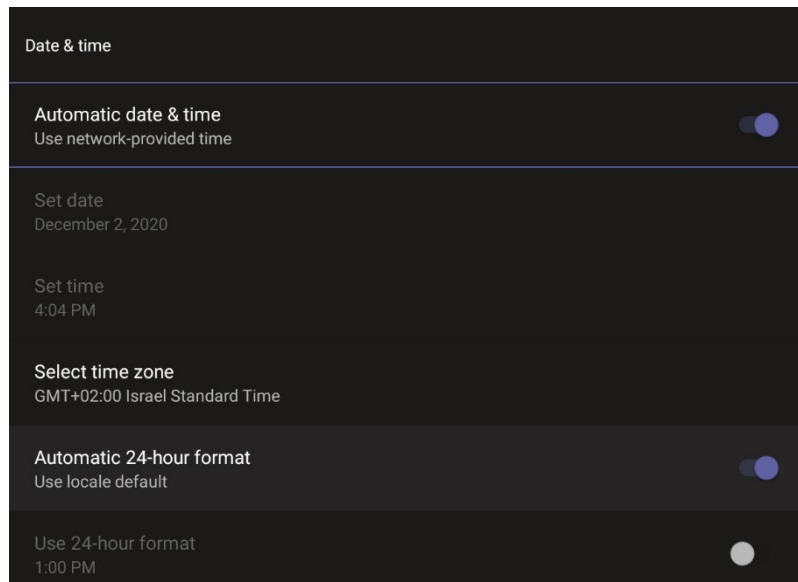

2. Navigate to and select **Use 24-hour format** [Allows you to select the Time format].



Note: The device automatically detects time zone via geographical location (**Automatic Time Zone Detection**).

5.1.3 Configuring Wi-Fi

The RXV200 can connect to an Access Point via Wi-Fi.

Network administrators can configure Wi-Fi parameters for the RXV200. The parameters are concealed from the user's view. Users can enable | disable Wi-Fi in the device's user interface.



Note: Wi-Fi cannot be enabled | disabled using SSH command.

The Wi-Fi connection is transparent to users; which frequency is used, 2.4 GHz or 5 GHz, is made for users by the device; users cannot disable one or the other.


5.1.3.1 Connecting to an Available Wi-Fi Network

➤ To connect to an available Wi-Fi network:



Note: Make sure to first disconnect your Ethernet cable. If it's connected, the device will not be able to connect to a Wi-Fi network.

1. Under 'Settings', navigate to **Wi-Fi** and enable **Use Wi-Fi**.

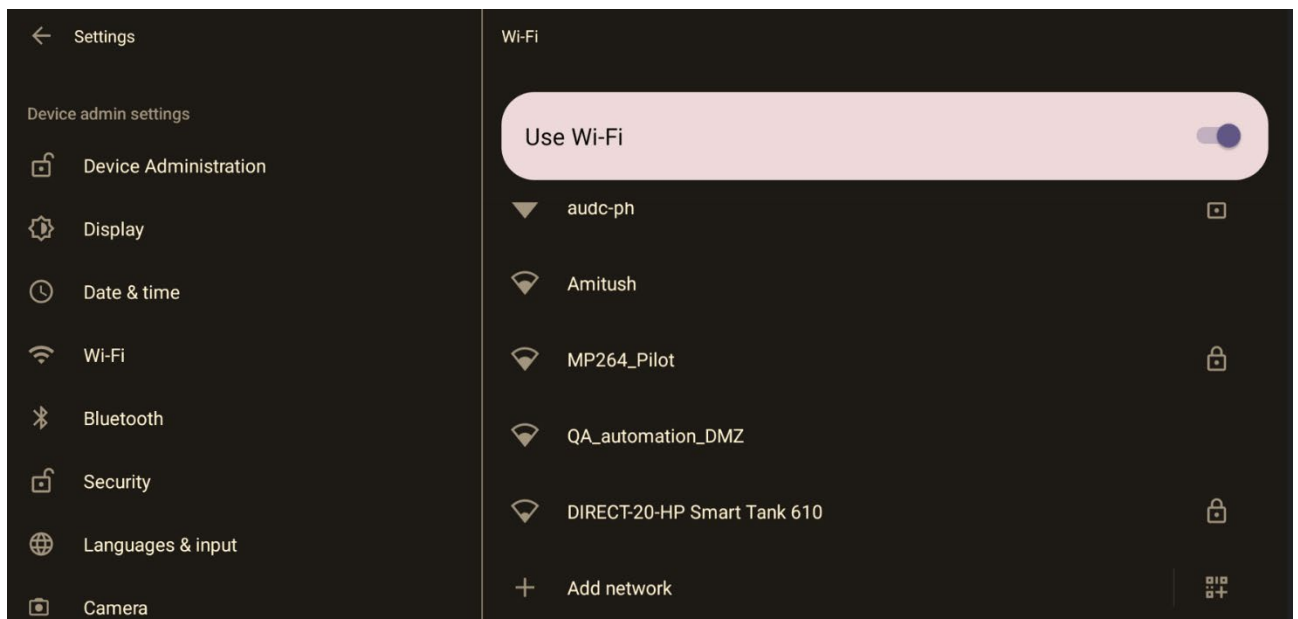

2. View a list of available connections.
3. Select the Wi-Fi network you want and enter the password.
4. View the network you selected 'Connected'.


5.1.3.2 Manually Connecting to a Wi-Fi Network

➤ To manually connect to a Wi-Fi network:




Note: Make sure to first disconnect your Ethernet cable. If it's connected, the device will not be able to connect to a Wi-Fi network.


1. Under **Wi-Fi**, select **Add network** and then enter the SSID of the network to add manually.

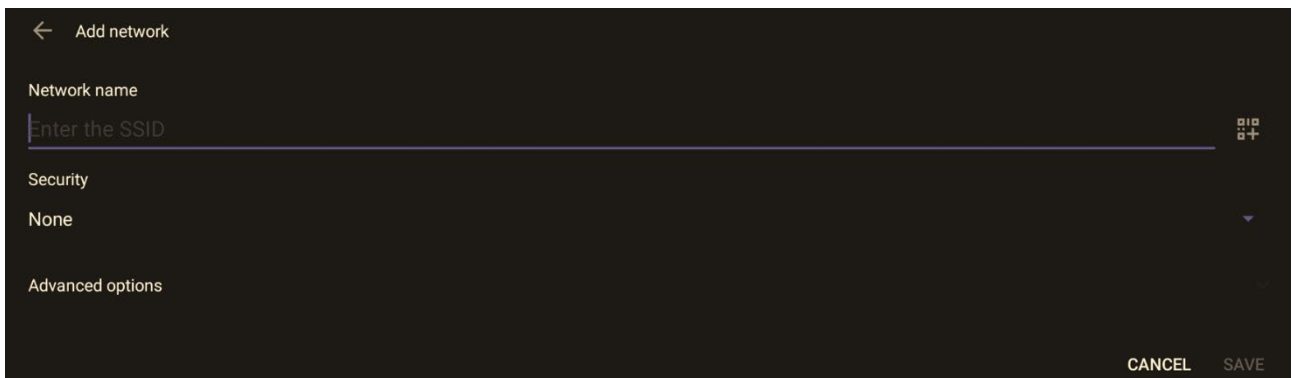

2. From the 'Security' drop-down, select a security key strength (encryption method).

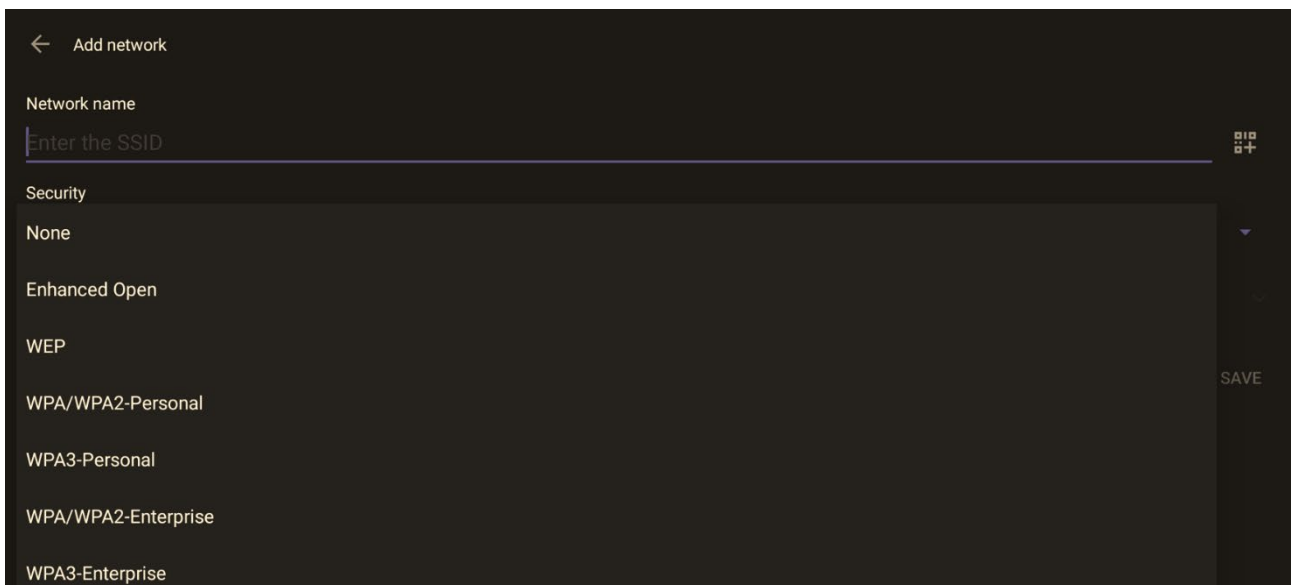

- Optionally meter the selected network. Leave the setting at its default value of **Detect automatically** if you don't want to meter the network. Select a **Metered** option to meter it.

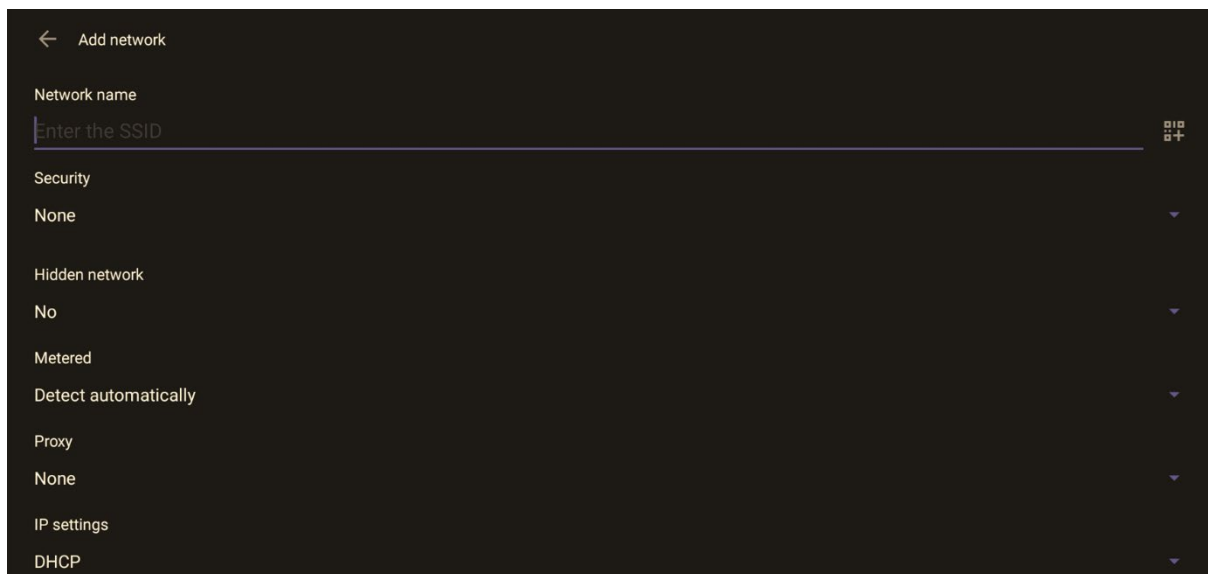

Note:

- 'Proxy' and 'DHCP' will automatically be configured by the network.
- Enabling the setting **Turn on Wi-Fi automatically** allows the device to automatically connect in the future to the highest signal-quality network remembered by the device.
- As an alternative to manually configuring Wi-Fi settings via the device's user interface, you can configure the Wi-Fi settings described in [Table 5-1](#), using the Configuration File.

Table 5-1: Configuration File Wi-Fi Parameters

Parameter	Description
network/wireless/adadvanced_options/dns1	Defines the IP of the wireless DNS1.
network/wireless/adadvanced_options/dns2	Defines the IP of the wireless DNS2.
network/wireless/adadvanced_options/gateway	Defines the IP address of the wireless gateway
network/wireless/adadvanced_options/hidden_network	Defines the name of the wireless hidden network.
network/wireless/adadvanced_options/ip_addr	Defines the IP address of the static Wi-Fi network if you're operating with a static Wi-Fi network.
network/wireless/adadvanced_options/ip_settings	Used to define DHCP.
network/wireless/adadvanced_options/network_prefix_length	Defines the network prefix length to be used.
network/wireless/adadvanced_options/proxy	Defines the proxy wireless server source.
network/wireless/adadvanced_options/proxy/auto_config/pac_url	Defines the URL of the PAC file.


Parameter	Description
network/wireless/adadvanced_options/proxy/manual/exclusion_list	Defines the list of IP addresses that will be blocked.
network/wireless/adadvanced_options/proxy/manual/proxy_hostname	Defines the name of the proxy host.
network/wireless/adadvanced_options/proxy/manual/proxy_port	Defines the proxy port.
network/wireless/anon_identity	Defines the anonymous wireless users who won't be seen.
network/wireless/ca_cert	Defines which CA certificate to use.
network/wireless/client_cert	Defines which client certificate to use.
network/wireless/domain	Defines the domain name.
network/wireless/eap_method	Defines the EAP method.
network/wireless/identity	Defines the identity of the user.
network/wireless/password	Defines the password of the network.
network/wireless/phase2_method NONE,MSCHAPV2,GTC,PAP,MSCHAP	Defines the encryption method. Phase 2 applies only to the 802.1x EAP method.
network/wireless/security	Defines the security method (encryption protocol).

5.1.4 Configuring Camera Settings


Settings controlling the look and feel of the video UI can be set to suit individual preferences.

➤ **To configure Camera settings:**

1. Under 'Device admin settings', navigate to and select **Camera**.

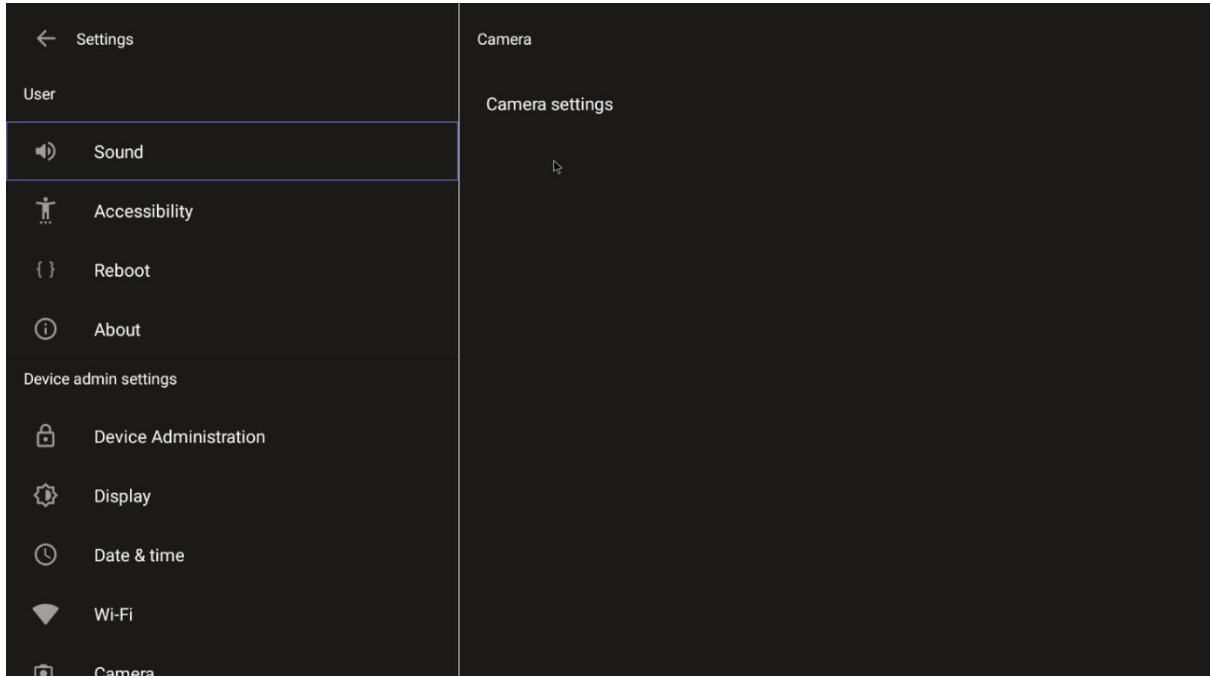

2. Navigate to and select **Camera settings**; the video stream is played and the following is displayed on the right side of the screen:

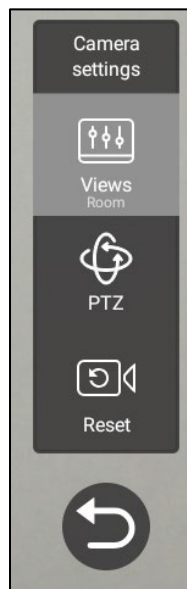


3. Create and edit presets using PTZ control. For more information, see [here](#).

5.1.4.1 Configuring Camera Frequency

The **Camera frequency** (under **Device settings**) must be set per the power supply as follows:

- 110V – 60Hz
- 220V – 50Hz

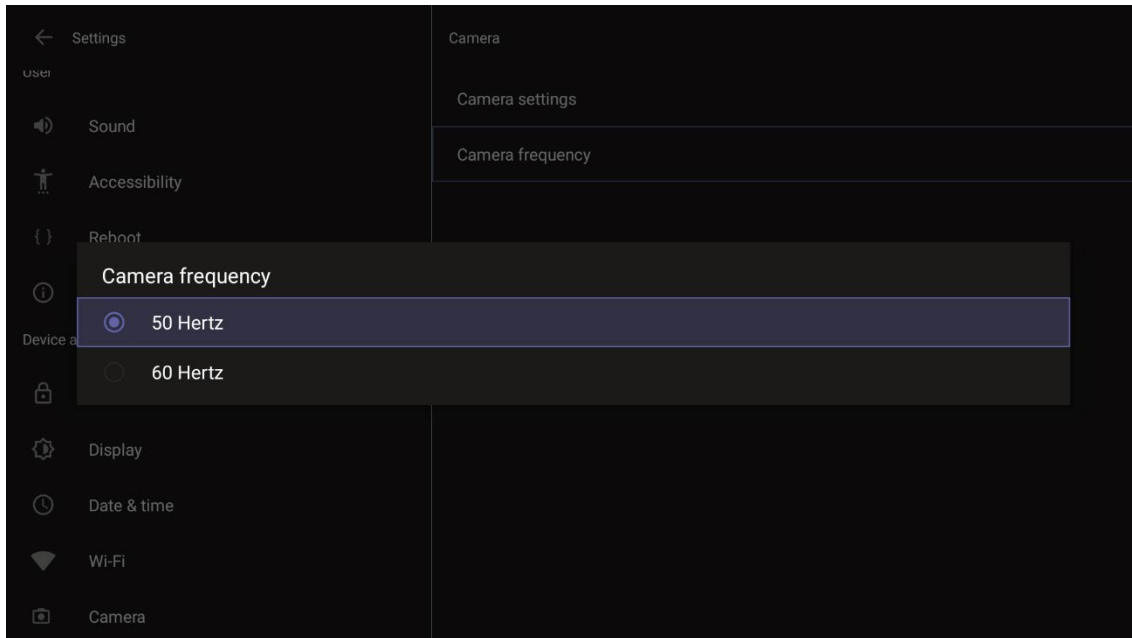


5.1.5 Configuring UI Language & Input


This setting allows users to customize inputting to suit personal requirements.

➤ **To set language and input:**

1. Under 'Device admin settings', navigate to and select **Languages & input**.

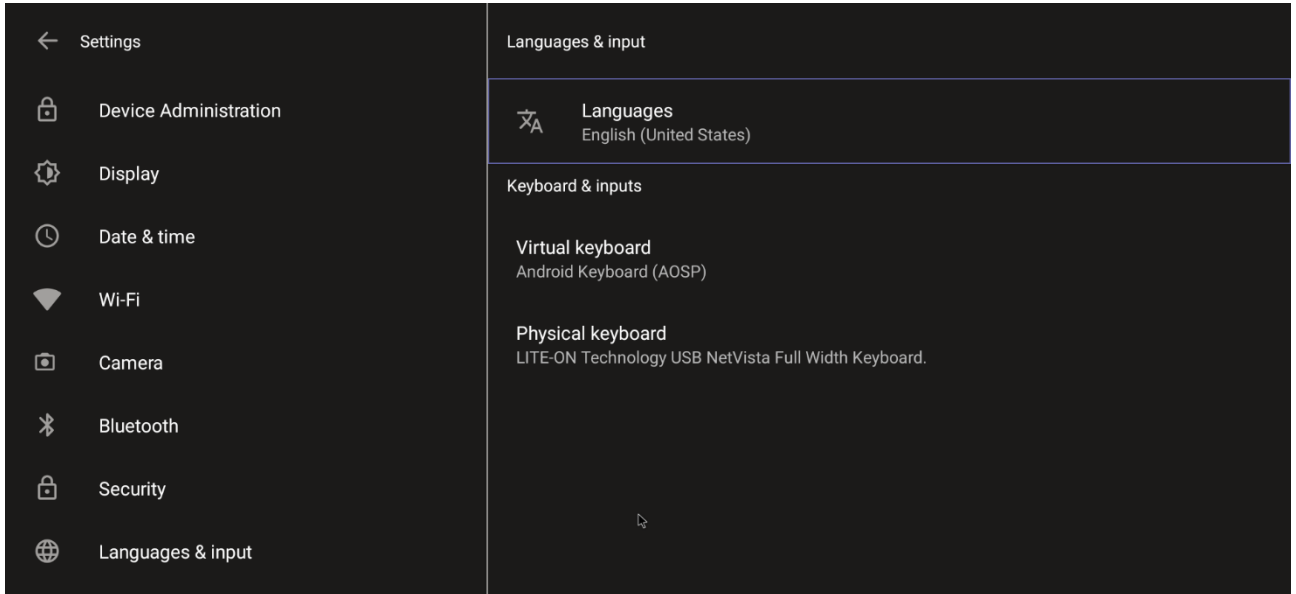

2. Navigate to and select **Physical keyboard**.

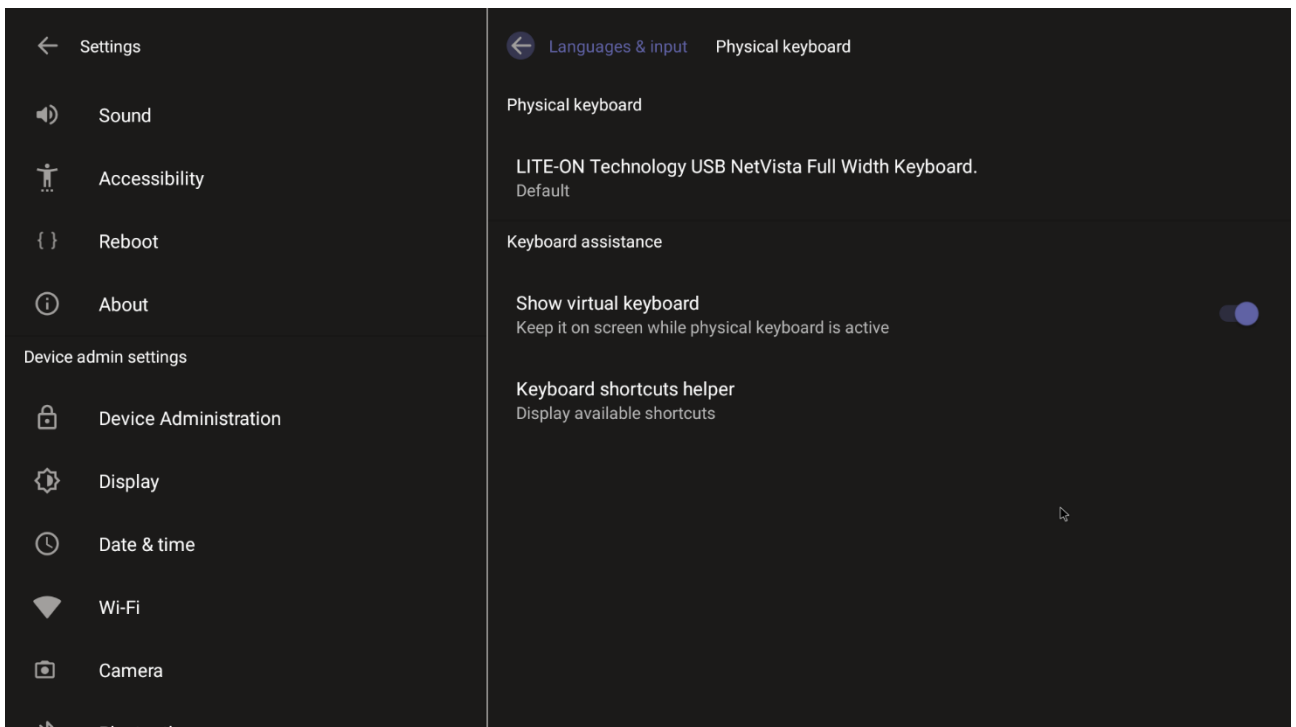


3. Navigate to and select **Show virtual keyboard**.

5.1.6 Modifying IP Network Settings

This setting enables the Admin user to determine IP network information and to modify IP network settings.


➤ **To modify network settings:**

1. Under 'Device admin settings', navigate to and select **Modify network**.

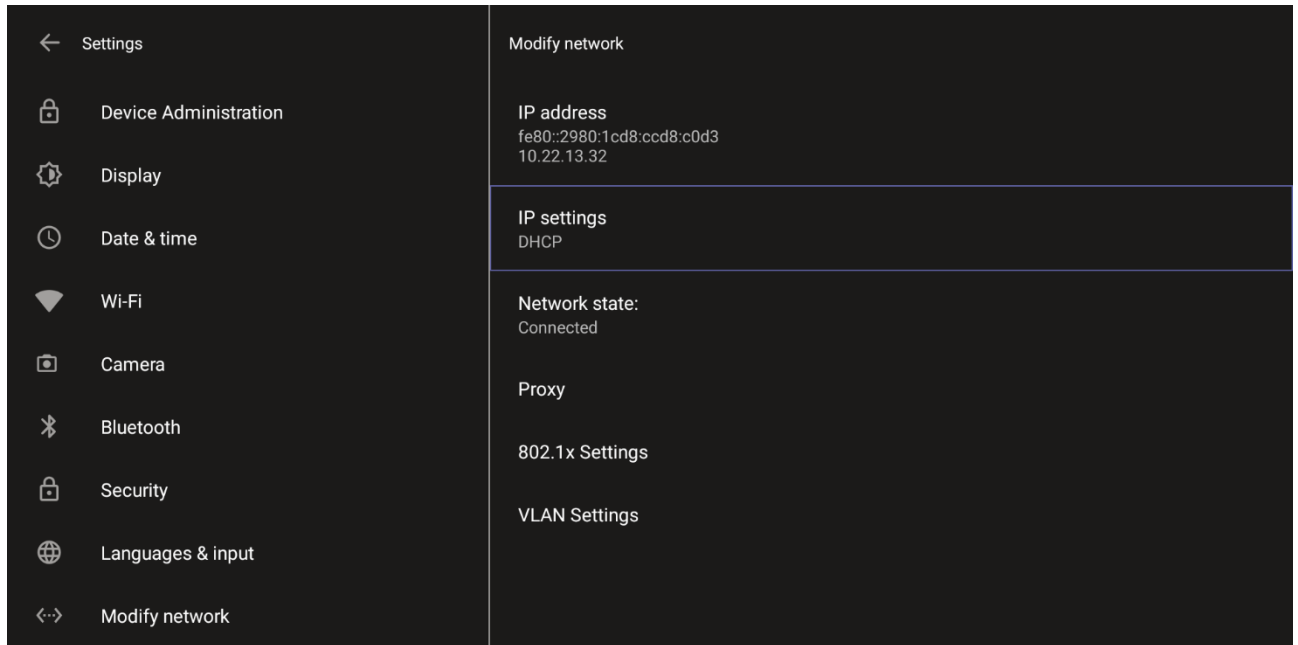


2. Navigate to and select:


- IP Address [Read Only]
- IP Settings [DHCP or Static IP]

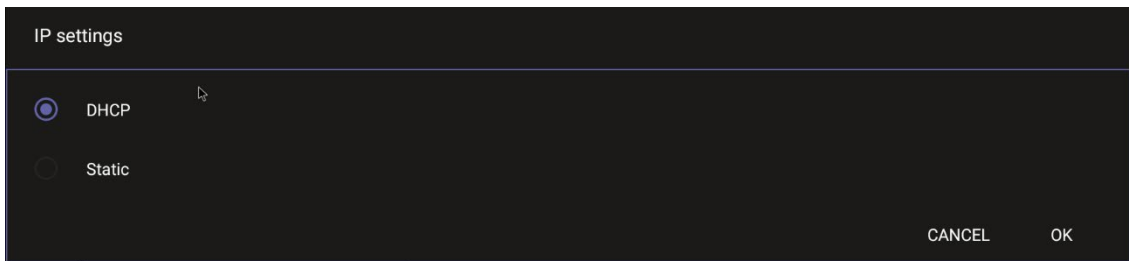

- Network state [Read Only]
- Proxy

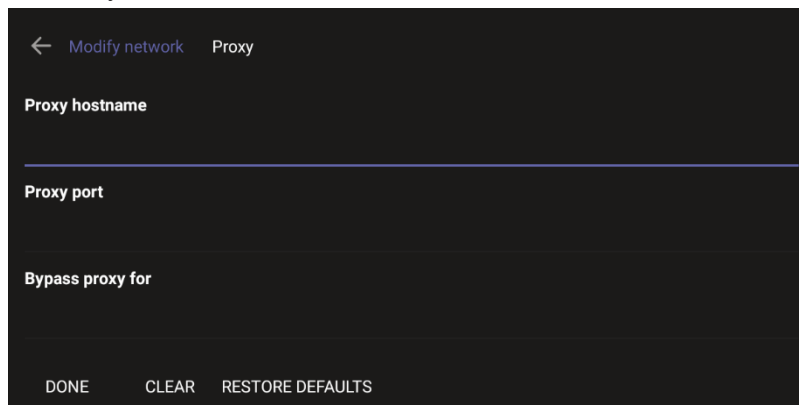

- ◆ Manually (from the screen shown in the preceding figure). Allows you to configure the RXV200 with an HTTP proxy server. Configure the proxy hostname and proxy port and then navigate to and select **Done**.
- ◆ **DHCP Option 252** (recommended). Option 252 provides a DHCP client with a URL to use to configure its proxy settings:

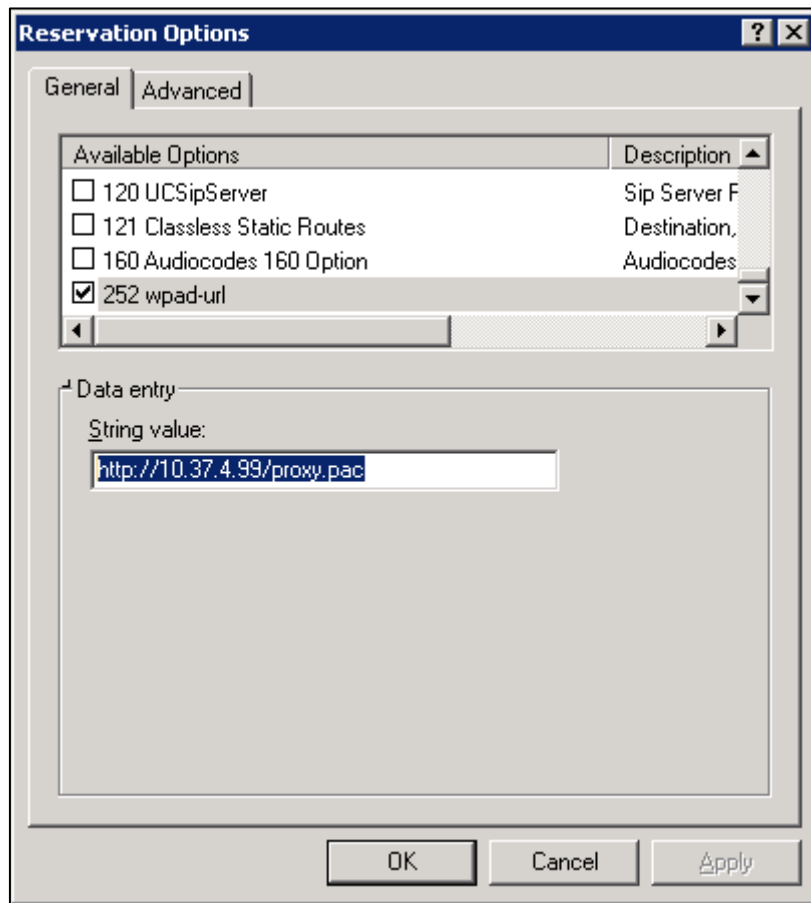


The proxy setting is provided in a Proxy Auto-Configuration (PAC) file that contains a set of rules coded in JavaScript which allows a web browser to determine whether to send web traffic directly to the Internet or to be sent via a proxy server. PAC files control how the phone handles HTTP, HTTPS, and FTP traffic. Example of a basic PAC file:

```
function FindProxyForURL(url, host)
{
return "PROXY 10.13.2.40:3128";
}
```

- 802.1x Settings [Allows enabling 802.1x]

802.1X Authentication is the IEEE Standard for Port-based Network Access Control (PNAC). See <https://1.ieee802.org/security/802-1x/> for more information.

- VLAN Settings
 - ◆ Allows you to configure 'VLAN Discovery mode' to Manual configuration, Automatic configuration (CDP), Automatic configuration (LLDP) or Automatic configuration (CDP+LLDP)

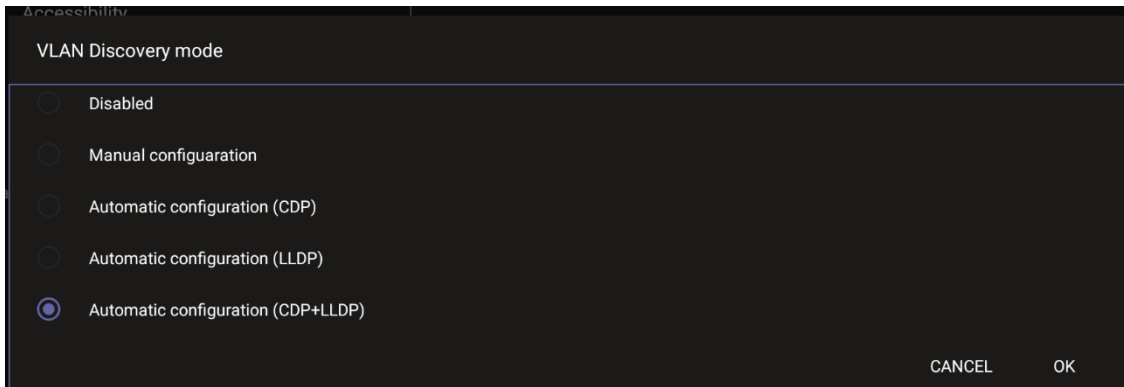


Cisco Discovery Protocol (CDP) is a Cisco proprietary Data Link Layer protocol
 Link Layer Discovery Protocol (LLDP) is a standard, layer two discovery protocol



Note: The VLAN configuration is by default **data VLAN** rather than voice VLAN, in compliance with the requirement specified [here](#) for the device not to advertise itself as a voice device. The default CDP/LLDP configuration is **data VLAN**.

- ◆ Allows you to configure 'VLAN Interval'.

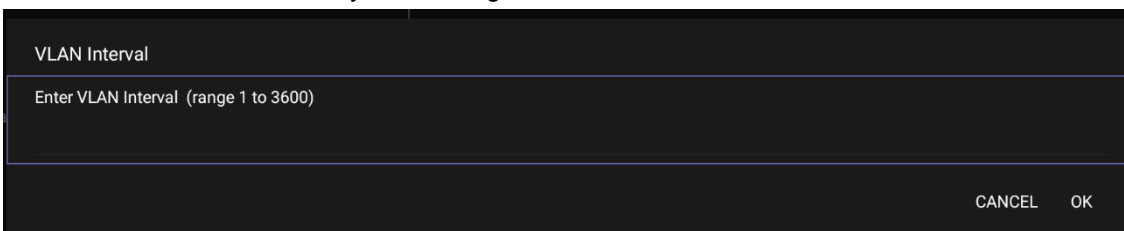

'VLAN interval' refers to CDP/LLDP advertisements' periodic interval. Default: 30 seconds. You can increase or decrease the intervals between the CDP/LLDP packets that are sent, based on network traffic and topology.



Note:


- In versions before 1.19, if network VLAN mode '/network/lan/vlan/mode' was set to LLDP, the device retrieved the VLAN and LLDP switch information (for location purposes) from LLDP.
- From version 1.19, LLDP switch information (for location purposes) is retrieved when parameter network/lan/lldp/enabled=1 (even when VLAN is retrieved from **CDP** or VLAN is disabled or VLAN is **Manual**).

5.1.7 Configuring Call Settings


This setting enables the user to configure call-associated functionalities to suit personal preferences.

➤ **To configure call settings:**

1. From the home page, navigate to and select **More** and then navigate to and select **Settings**.

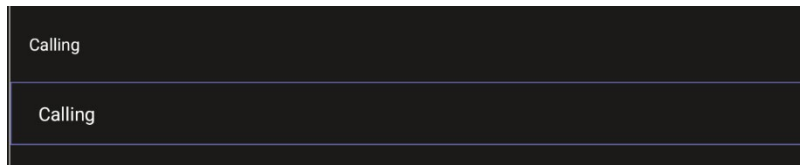

2. Navigate to and select **Calling**.

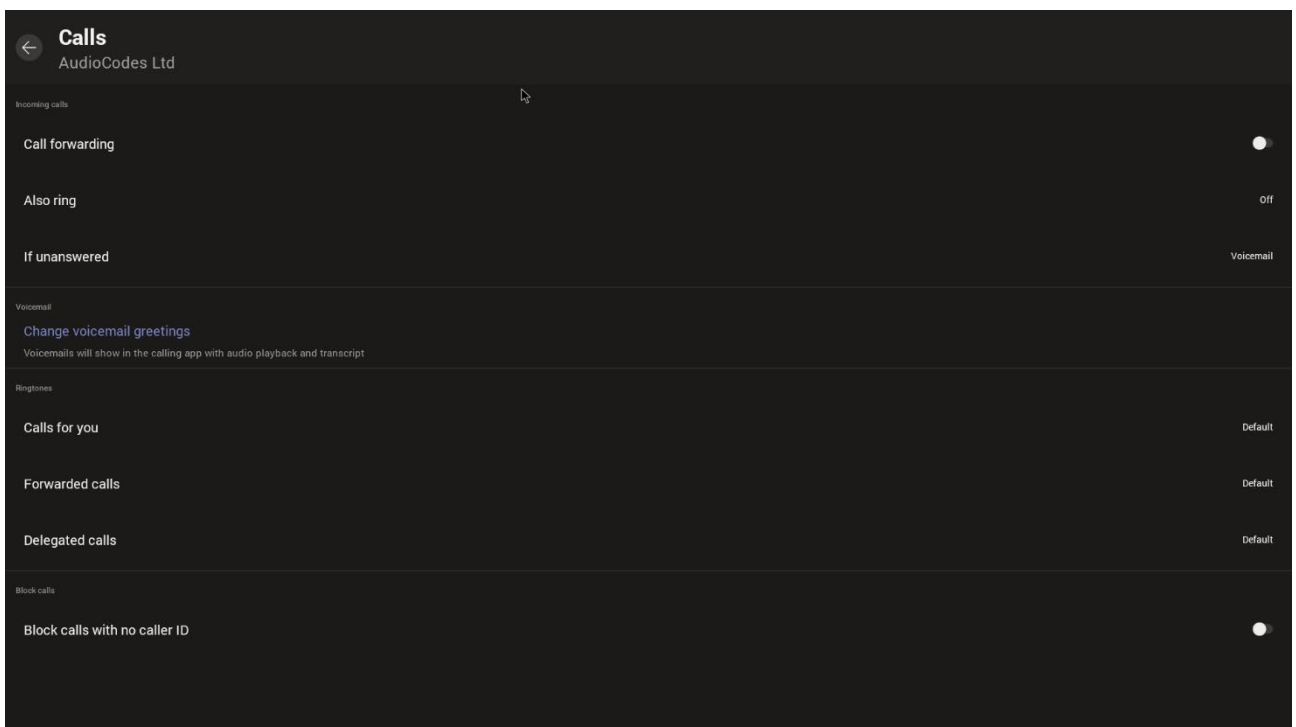

- In the Calls screen, navigate to and select:
 - ◆ **Call forwarding** to enable automatically redirecting incoming calls to another destination.
 - ◆ **Also ring** to configure other phones to ring on incoming calls; only displayed if **Call forwarding** is disabled.
 - ◆ **If unanswered** to configure the destination to which unanswered calls will be sent; only displayed if **Call forwarding** is disabled. Select either Off, Voicemail, Contact or number.
 - ◆ **Calls for you** to configure the ringtone played on your phone when calls come in.
 - ◆ **Forwarded calls**
 - ◆ **Delegated calls** to configure the ringtone played to delegates.
 - ◆ **Block calls with no caller ID** to block calls that do not have a Caller ID.

This page is intentionally left blank.


5.2 User Settings

In the 'Settings' screen you can optionally configure the following User settings: Sound, Accessibility, Reboot and About (read-only).

5.2.1 Setting the Volume

You can customize phone volume for a friendlier user experience.


- **To configure sound settings:**
 - Under 'User', navigate to and select **Sound**.

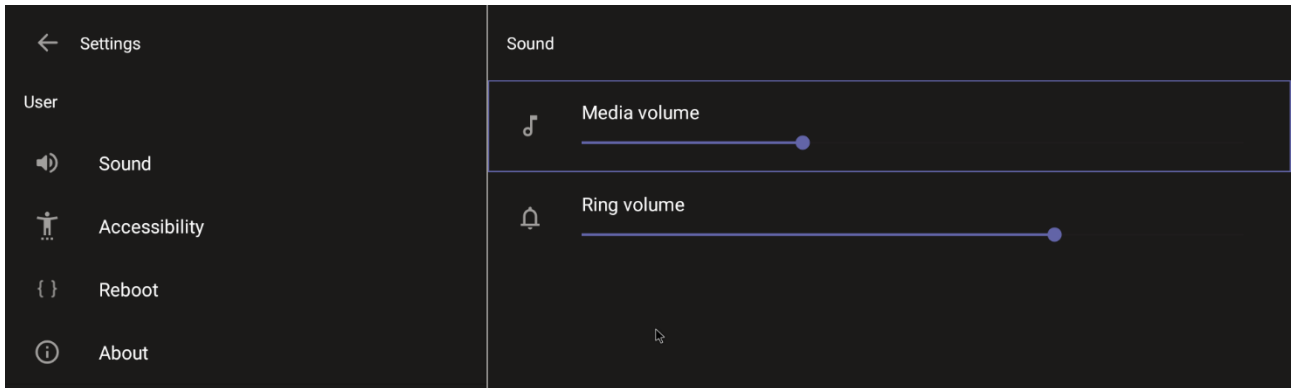

5.2.2 Configuring Accessibility Settings

This option allows users to customize the screen to be reader-friendlier.

- **To configure the Accessibility setting:**
 - 3. Under 'User', navigate to and select **Accessibility**.

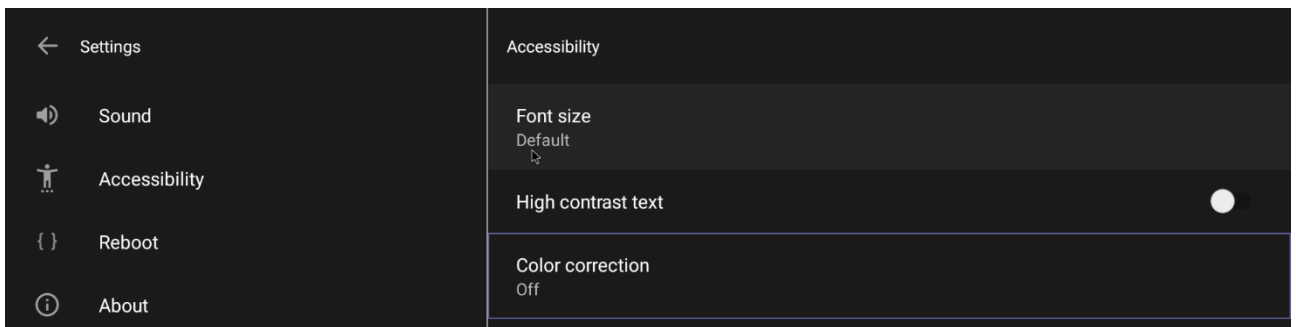

- 4. Adjust the settings to suit personal requirements.

5.2.3 Setting Live Captions

Live Captions can be set in regular one-on-one calls as well as in Teams meetings.

5.2.4 Enabling Display of Meeting Name using Exchange Online PowerShell

See [here](#) for information about how to access the exchange instance (the tenant). Admin must set the two parameters indicated in the figure below to 'False':

```
PS C:\Users\wayne> Get-CalendarProcessing -Identity Maxim_MTR | FL


AutomateProcessing           : AutoAccept
AllowConflicts              : False
AllowDistributionGroup      : True
AllowMultipleResources      : True
BookingType                 : Standard
BookingWindowInDays        : 180
MaximumDurationInMinutes    : 1440
MinimumDurationInMinutes    : 0
AllowRecurringMeetings     : True
EnforceAdjacencyAsOverlap   : False
EnforceCapacity             : False
EnforceSchedulingHorizon    : True
ScheduleOnlyDuringWorkHours : False
ConflictPercentageAllowed   : 0
MaximumConflictInstances    : 0
ForwardRequestsToDelegates  : True
DeleteAttachments          : True
DeleteComments              : False
RemovePrivateProperty       : False
DeleteSubject               : False
AddOrganizerToSubject       : False
DeleteNonCalendarItems     : True
TentativePendingApproval   : True
EnableResponseDetails      : True
OrganizerInfo               : True
ResourceDelegates           : {}
RequestOutOfPolicy          : {}
AllRequestOutOfPolicy       : False
BookInPolicy                : {}
AllBookInPolicy             : True
RequestInPolicy              : {}
AllRequestInPolicy          : False
AddAdditionalResponse       : True
AdditionalResponse          : This is a Microsoft Teams Meeting room!
RemoveOldMeetingMessages    : True
AddNewRequestsTentatively   : True
ProcessExternalMeetingMessages : True
RemoveForwardedMeetingNotifications : False
AutoRSVPConfiguration      : Microsoft.Exchange.Data.Storage.AutoRSVPConfiguration
RemoveCanceledMeetings     : False
EnableAutoRelease           : False
PostReservationMaxClaimTimeInMinutes : 10
MailboxOwnerId              : Maxim_MTR
Identity                    : Maxim_MTR
IsValid                     : True
ObjectState                  : Changed
```

'Identity' is the name of the account to which admin wants to apply these two settings:

- Set-CalendarProcessing -Identity "Maxim_MTR" -DeleteSubject \$false
- Set-CalendarProcessing -Identity "Maxim_MTR" -AddOrganizerToSubject \$false

5.2.5 Hiding Names and Meeting Titles

You can hide information such as names and meeting titles for individual devices via the Meetings page (**More > Settings > Meetings**):

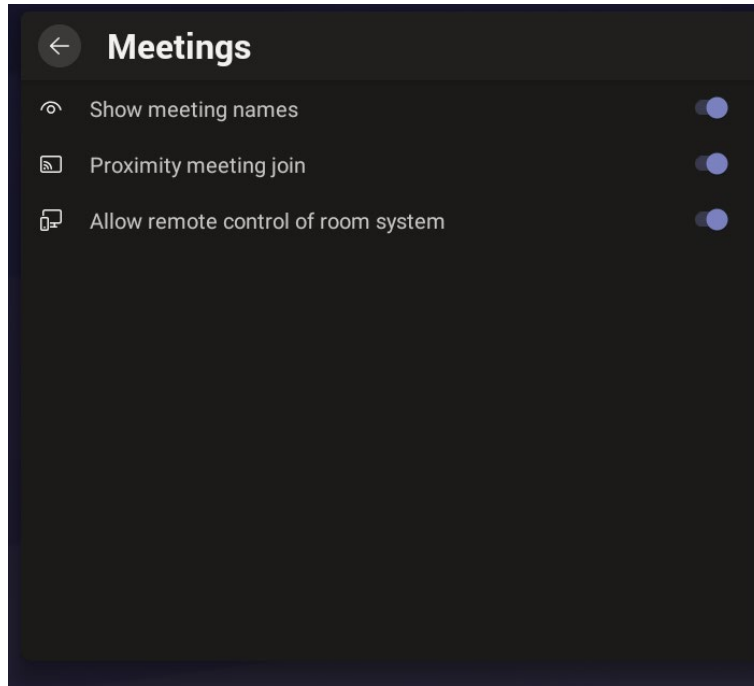


5.2.6 Rebooting RXV200

Rebooting allows you to exit from and reconnect without needing to sign in again.

➤ **To reboot:**

- Under 'User', navigate to and select **Reboot**.

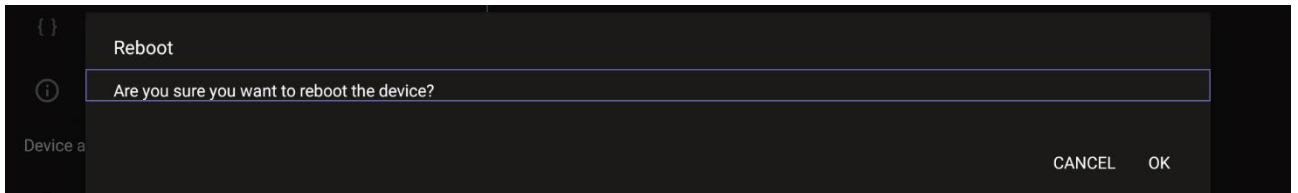


5.2.7 Viewing About RXV200


The 'About' screen gives you quick access to information about the RXV200 deployment.

➤ **To access the About screen:**

5. Navigate to and select **About device**.

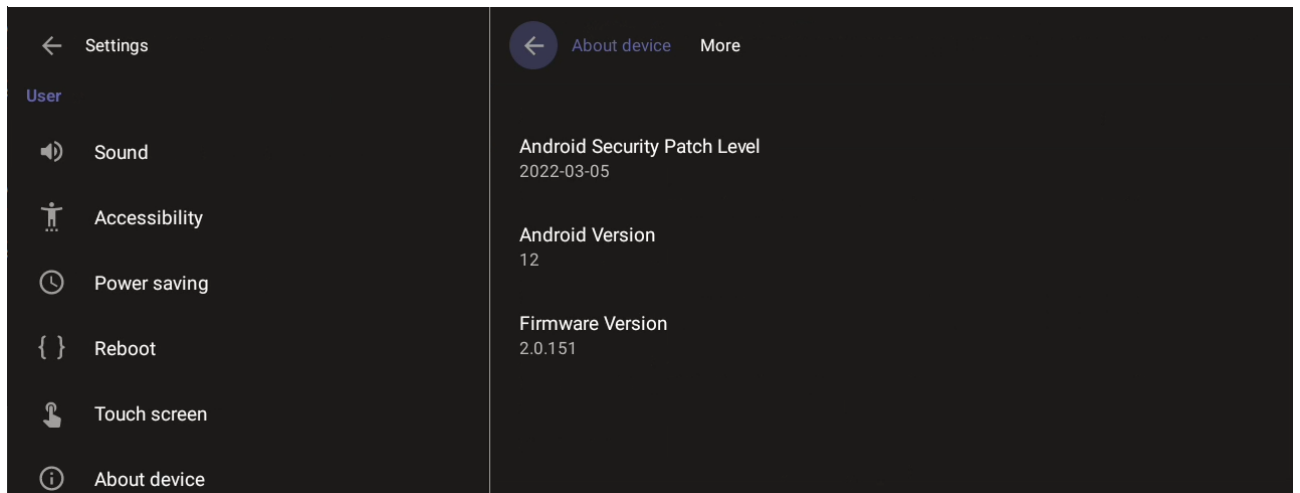

6. Navigate to and select **Status**.

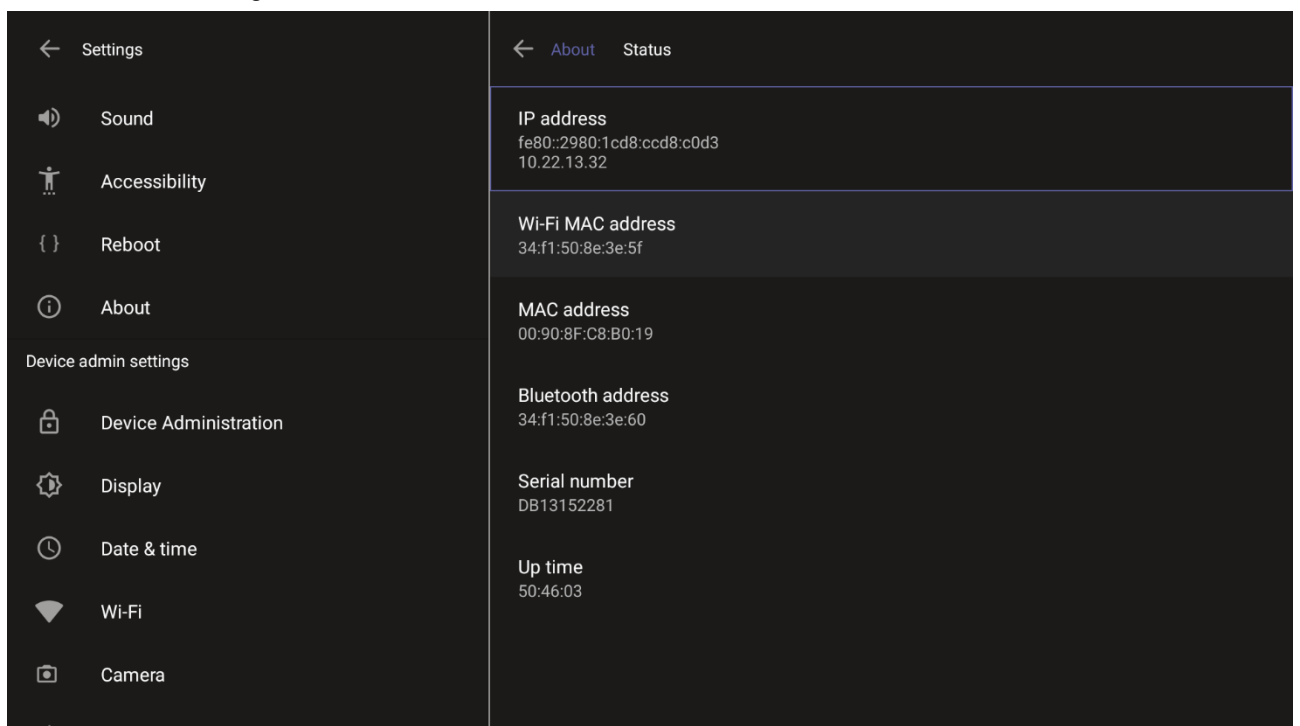


7. View the RXV200's firmware information.

6 Debugging

Admin users can perform debugging for troubleshooting purposes.

➤ **To perform debugging:**

1. In the Settings screen under 'Device administration', select **Debugging**.

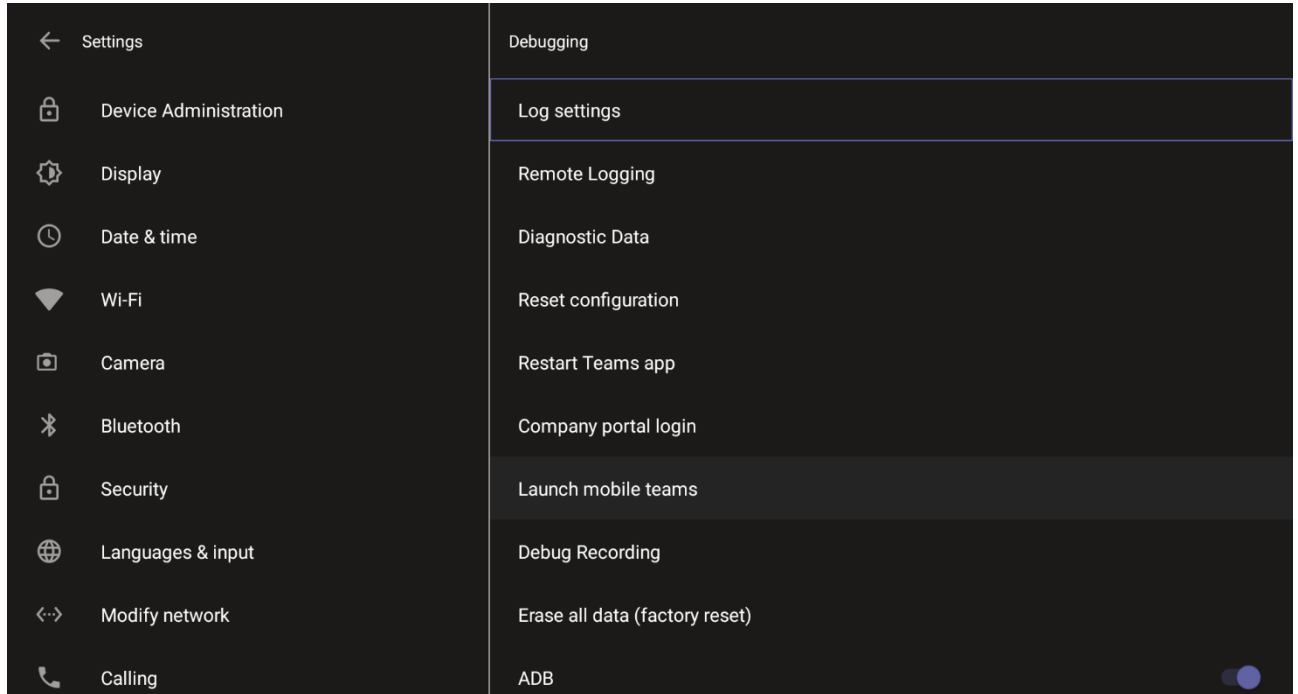

2. Use the following debugging features available to Admin users:


- Log settings (see [Log Settings](#))
- Remote Logging (see under [Remote Logging](#))
- Diagnostic Data (see under [Diagnostic Data](#))
- Reset configuration (see under [Reset configuration](#))
- Restart Teams app (see under [Restart Teams app](#))
- Company portal login (see under [Company Portal Login](#))
- Launch mobile teams (see under [Launch Mobile Teams](#))
- Debug Recording (see under [Debug Recording](#))
- Erase all data (see under [Erase all data \(factory reset\)](#))
- Screen Capture (see under [Screen Capture](#))

6.1.1.1 Log Settings | Collecting Logs


Device diagnostics (Logcat) can be collected using the Microsoft Admin Portal. For support purposes, general logs can be collected also using the Microsoft Admin Portal. The logs can help debug Teams application issues and also for issues related to the device.

➤ **To configure log settings:**

1. In the Debugging screen, select **Log settings**.

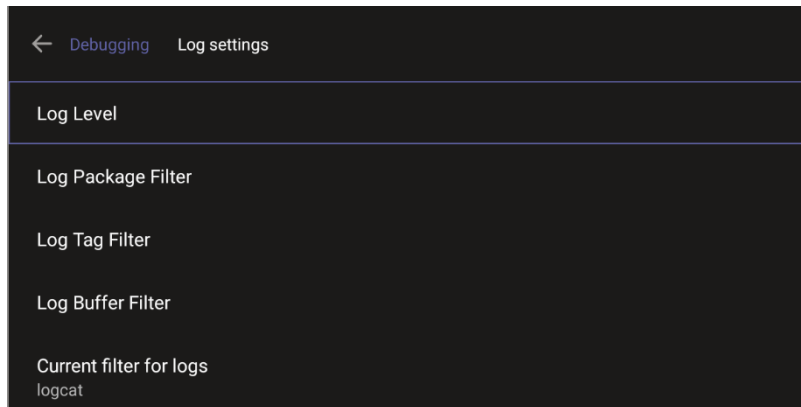


2. Navigate to and select **Log Level** and then select either
 - Verbose, Debug, Info, Warning, Error, Assert -or-None
3. Navigate to and select **Log Package Filter** and enter the filter.
4. Navigate to and select **Log Tag Filter** and enter the filter.
5. Navigate to and select **Log Buffer Filter**.

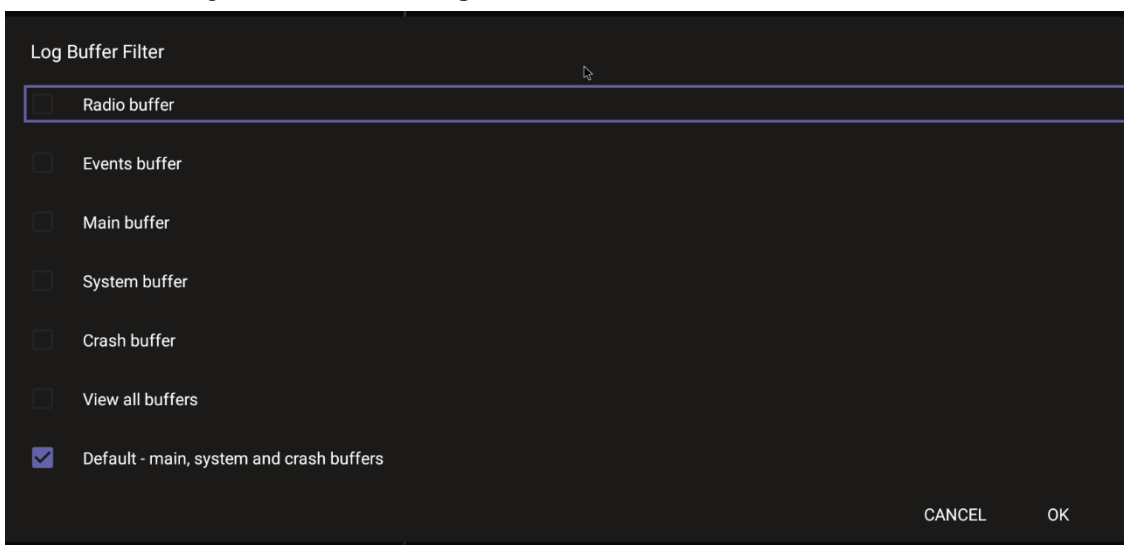

6. Navigate to and select **Current filter for logs**.

➤ **To collect logs:**

7. Reproduce the issue
8. Access Microsoft Admin Portal and under the **Devices** tab click the **Diagnostics** icon.

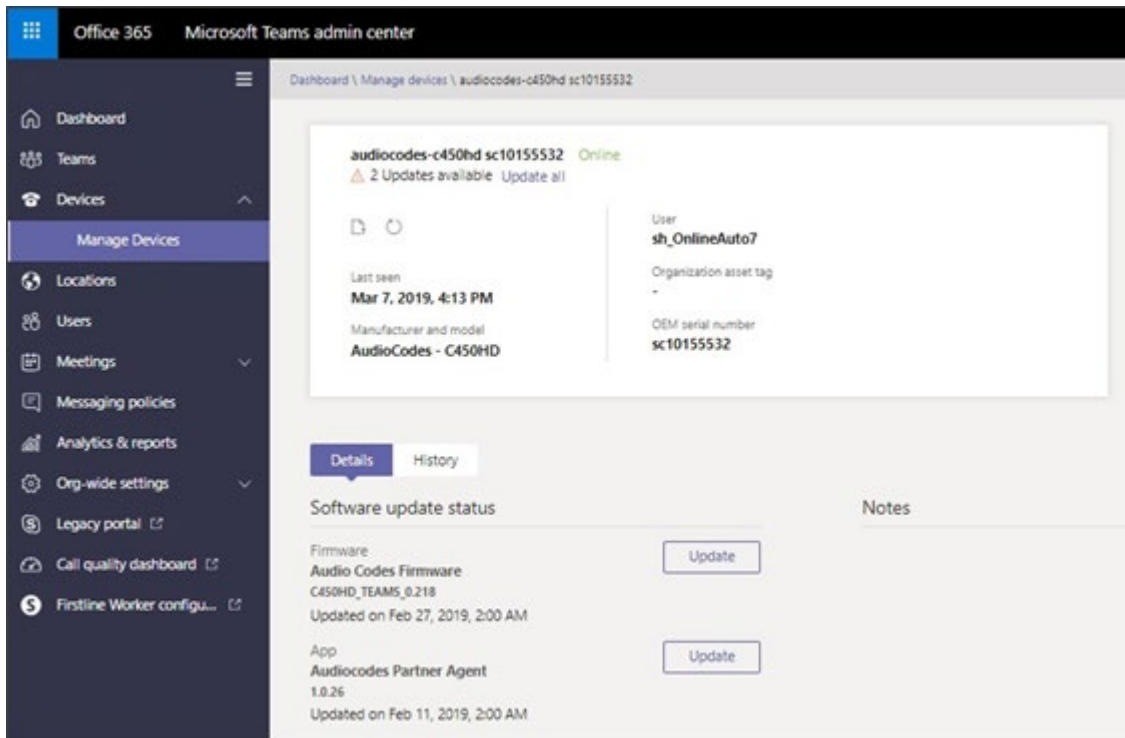


The screenshot displays the Microsoft Teams admin center interface. The left-hand navigation pane includes options such as Dashboard, Teams, Devices, Manage Devices (selected), Locations, Users, Meetings, Messaging policies, Analytics & reports, Org-wide settings, Legacy portal, Call quality dashboard, and Firstline Worker configuration. The main content area shows the details for a device with ID 'audiocodes-c450hd sc10155532', which is currently 'Online'. It indicates that 2 updates are available and provides an 'Update all' button. The device's last seen status is 'Mar 7, 2019, 4:13 PM'. The manufacturer and model are listed as 'AudioCodes - C450HD'. The user associated with the device is 'sh_OnlineAuto7'. Below this information, there are two sections for software updates: 'Firmware' (Audio Codes Firmware C450HD_TEAMS_0.218, updated on Feb 27, 2019, 2:00 AM) and 'App' (Audiocodes Partner Agent 1.0.26, updated on Feb 11, 2019, 2:00 AM). Each section has an 'Update' button. A 'Notes' section is also visible on the right side of the update status area.




Note: The preceding figure is for illustrative purposes. It shows an AudioCodes phone. The same screen is displayed for the RXV200.


9. Click the **Diagnostics** icon.

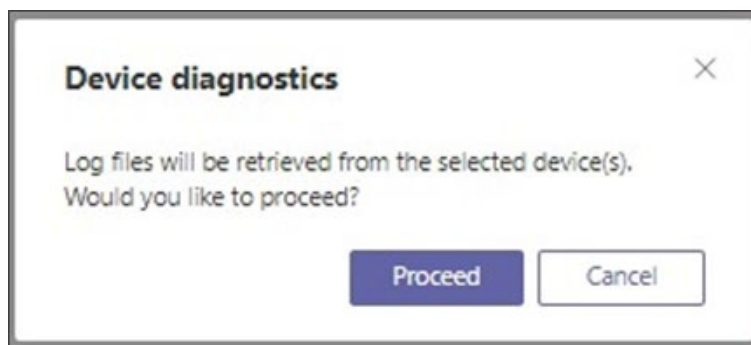

10. Click **Proceed**; the logs are uploaded to the server.

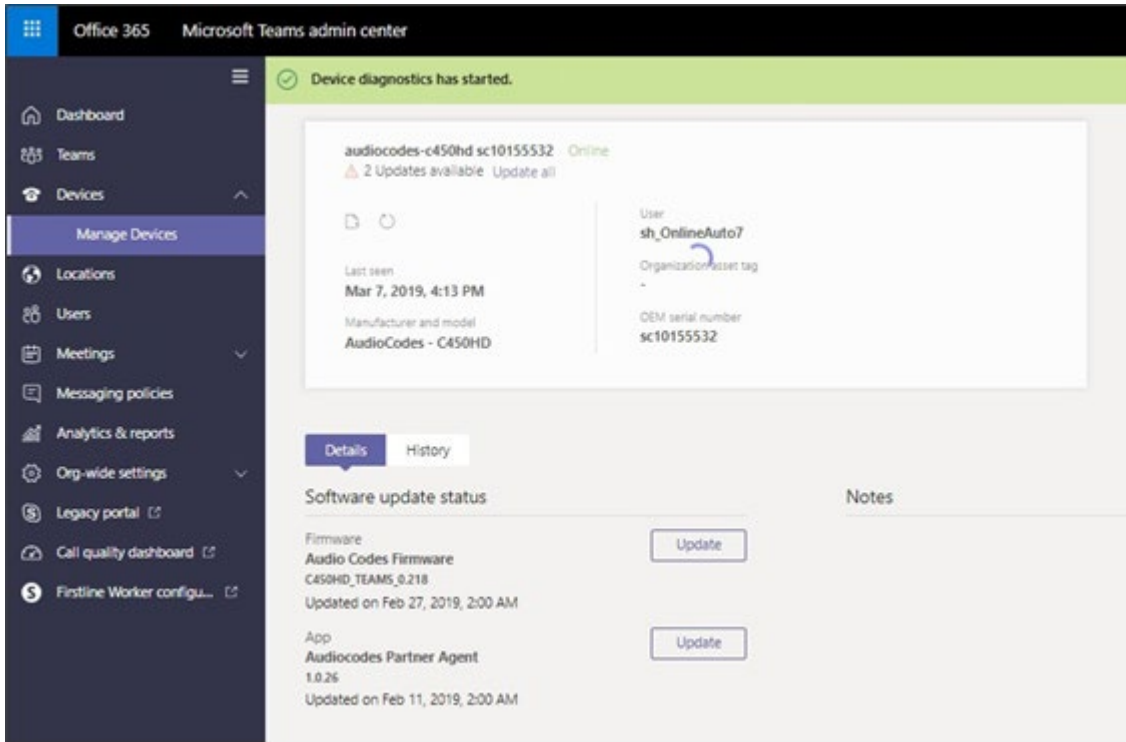

11. Click the **History** tab.

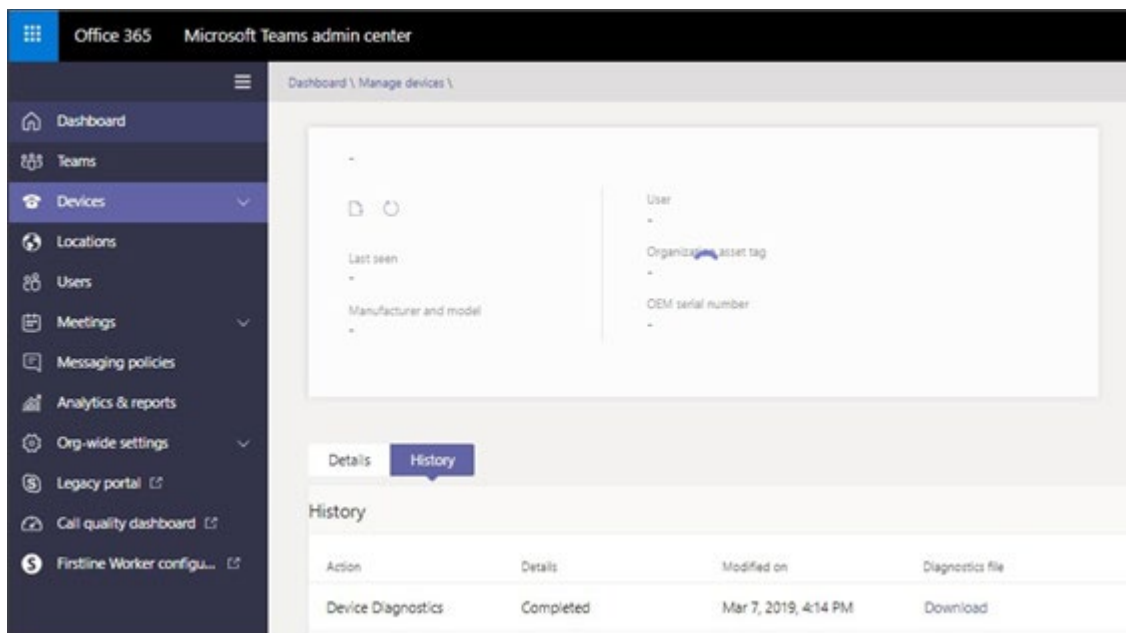

12. Click **Download** to download the logs.


6.1.1.2 Remote Logging

Remote Logging via Syslog provides the same log level as Device Diagnostics (performed via the Microsoft Admin Portal) with some additional information that may be relevant to device issues (not Teams application issues).

Diagnostics via the Microsoft Admin Portal are saved to the device sdcard and collected after the event. Remote Logging via Syslog is different. The logs are collected in real time.

➤ **To enable Remote Logging via Syslog:**

1. Navigate to and select **Remote logging**.

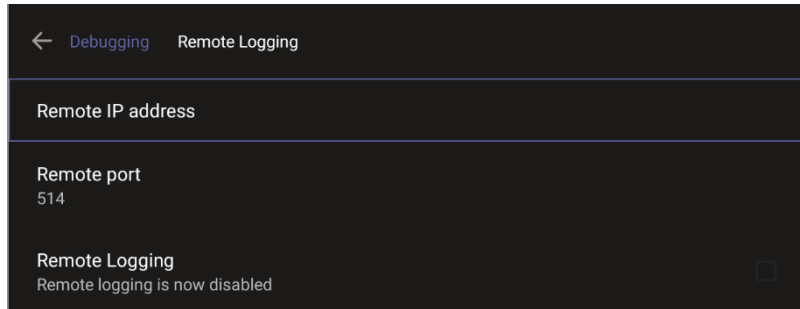

2. Configure the 'Remote IP address' and 'Remote port' and enable 'Remote Logging'; the device starts sending logs to the Syslog server.



Note: Network administrators can also enable Syslog using Secure Shell (SSH) protocol.

➤ **To enable Syslog using SSH protocol, type the following command at the shell prompt:**

```
setprop persist.ac.rl_address <syslog_server_ip>:<port>.
```

➤ **To disable Syslog using SSH, type the following command at the shell prompt:**


```
setprop persist.ac.rl_address ""
```

6.1.1.3 Diagnostic Data

Admin users who need to get logs from the device can dump the logs to the phone's Secure Digital (SD) Card and then later collect them using Secure Copy Protocol (SCP) based on Secure Shell (SSH) protocol. Whenever an issue occurs, the Admin can dump the logs into the SD Card.

➤ **To use the tool:**

1. Navigate to and select **Diagnostic Data**.

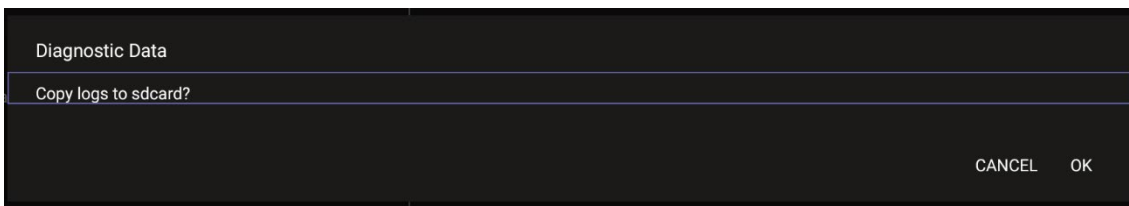

2. Navigate to and select **OK** to confirm 'Copy logs to sdcard'; the RXV200 creates all necessary logs and copies them to the its SD Card / Logs folder.
3. Get the logs using SCP notation as follows:

```
scp -r admin@host_IP:/sdcard/logs/ .
```

Following are the relevant logs (version and ID may be different to those shown here):


- dmesg.log
- dumpstate-TEAMS_1.3.16-undated.txt
- dumpstate_log-undated-2569.txt
- logcat.log

6.1.1.4 Reset configuration

Admin users can opt to 'clean up' their configuration history and return the RXV200 to an Out of Box Experience (OOBE). If the Teams app isn't running well, this might help.

➤ **To reset the configuration:**

1. Navigate to and select **Reset configuration**.

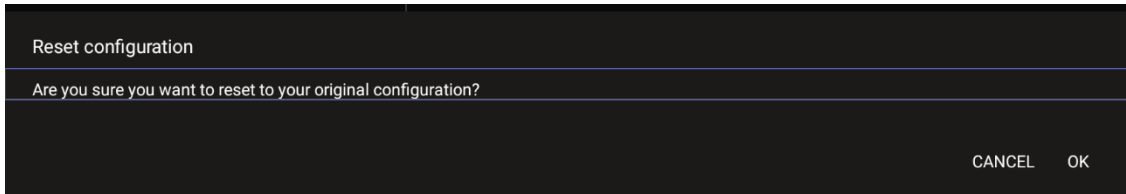

2. Navigate to and select **OK**; all data is erased and default factory settings are restored but sign-in is retained.

See also [here](#).


6.1.1.5 Restart Teams app

If the Teams application freezes or malfunctions, a good way to resolve this is to restart the app.

➤ **To restart the Teams app:**

- Navigate to and select **Restart Teams app**; only the Teams app is restarted.

6.1.1.6 Company Portal Login

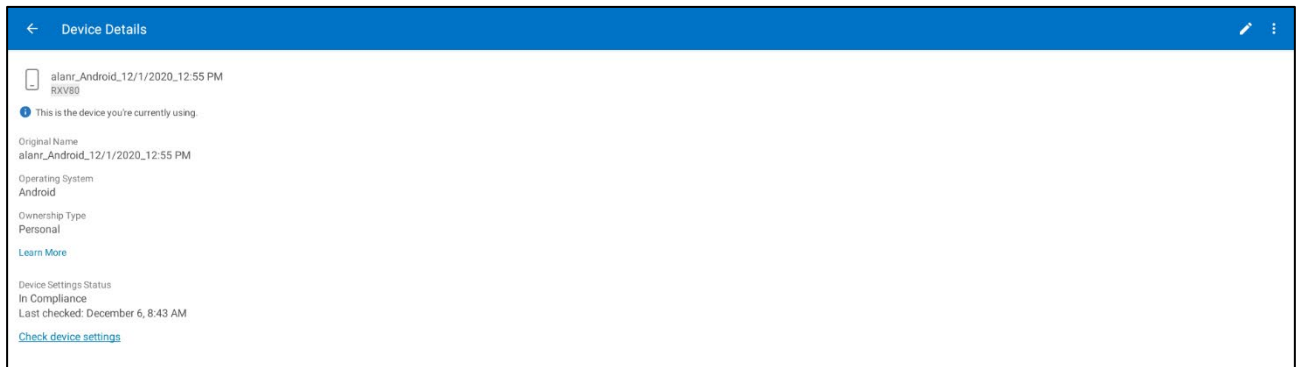


6.1.1.7 Getting Company Portal Logs

Company Portal logs can be helpful to network administrators when there are issues with signing in to Teams from the phone.

➤ **To get Company Portal logs:**

1. Reproduce the issue (logs are saved to the device so you first need to reproduce the issue and then get the logs).
2. Log in to the RXV200 as Administrator and then go back.
3. Navigate to and select the **Debugging** option.
4. Navigate to and select **Company Portal login**.
5. In the Device Details screen that opens, navigate to and select **Settings**:

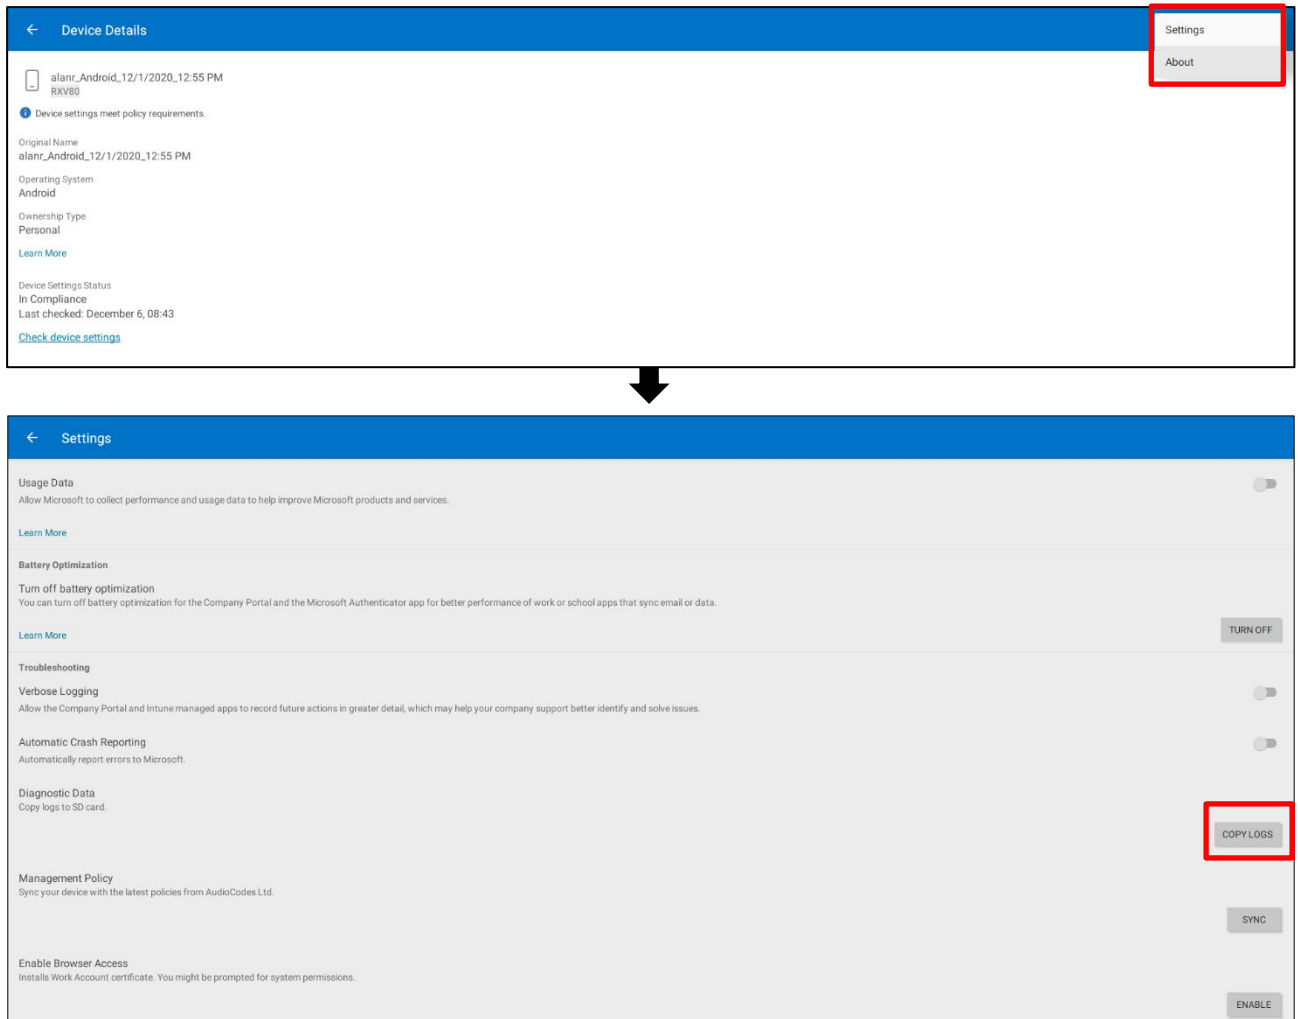

6. Navigate to and select **Copy Logs**.

Company portal logs are copied to:

```
sdcard/Android/data/com.microsoft.windowsintune.companyportal/files/
```

7. To pull the logs, use ssh:

```
scp -r admin@hosp_ip:/sdcard/android/data/com.microsoft.windowsintune.companyportal/files/
```

Files are quite heavy so you may need to pull them one by one.

6.1.1.8 Launch Mobile Teams

'App not found'. N/A in this release.

6.1.1.9 Debug Recording


This feature enables Admin users to perform media/DSP debugging.



Note: DSP recording can be activated on the fly without requiring the network administrator to reset the phone.

➤ **To reset the configuration:**

1. Navigate to and select **Debug Recording**.

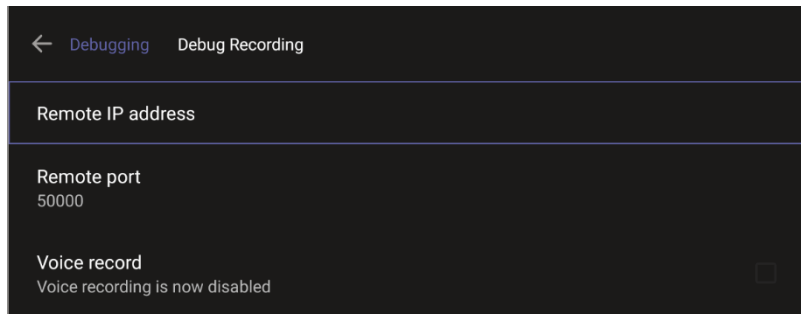


2. Navigate to and select **Voice record** to enable the feature.
3. Navigate to and select **Remote IP address** to input the IP address of the device whose traffic you want to record.
4. Navigate to and select **Remote port** and input it (Default: 5000).
5. Start Wireshark on your PC to capture audio traffic.

6.1.1.10 Erase all data (factory reset)

This option is the equivalent of restore to defaults, including logout and device reboot.

➤ **To erase all data (factory reset):**

1. Navigate to and select Erase all data (factory reset).

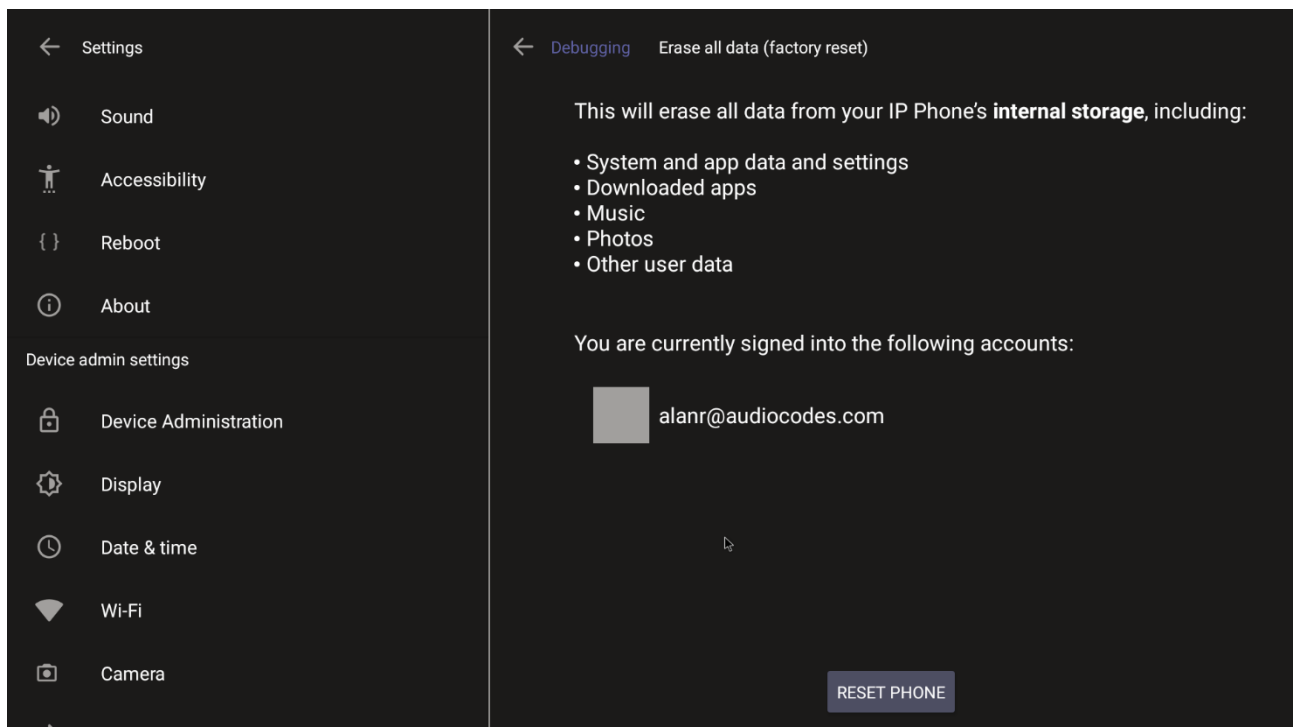

2. Navigate to and select **RESET PHONE**.

6.1.1.11 Screen Capture

By default, this setting is enabled. If disabled, the phone won't allow its screens to be captured.

6.2 Performing Recovery Operations using Power Button

Network administrators can perform recovery operations using the power button on the front panel of the RXV200.



Note: Besides this recovery option, Android devices also feature an independent, automatic problem detection and recovery attempt capability that can culminate in recovery mode or in switching image slots.

The following figure shows the power button.



➤ To perform recovery operations:

1. Disconnect the power cord from the RXV200 while long-pressing the power button for as long as is required for the action (see [Table 6-1](#) below for the available actions - see the **Action** column - and durations – see the **Long-press for** column).
2. Reconnect the power cord and continue pressing the power button for however long is necessary.

Table 6-1: Recovery Operation Options using the RXV200's Power Button


Stage	Action	Button Press Pattern Press time (wait for release)	Led (after release Led will blink 3 times in current color)
On Uboot	Nothing	<= 4 second	
	ENTER_RECOVERY	4 ~ 6 second	Red
	SWITCH_AB_SLOT	6~8 second	Green
	ENTER_LOADER	8~10 second	Blue
	RESTORE_DEFAULT	>= 10 second	Yellow

3. Short-press the power button to move down the menu options, and long-press to select an option.

6.3 Restoring RXV200 Firmware via USB Disk

For recovery purposes, firmware can be applied to the RXV200 from a USB disk.

- **To apply the firmware from the USB disk:**
- 4. Enter recovery mode by pressing for 2-4 seconds the power button as shown in [Table 6-1](#) above (Action: ENTER_RECOVERY); the device's LED lights up red.
- 5. Short-press the power button to move down the menu options, and long-press to select an option.
- 6. Insert the USB disk with the target firmware.

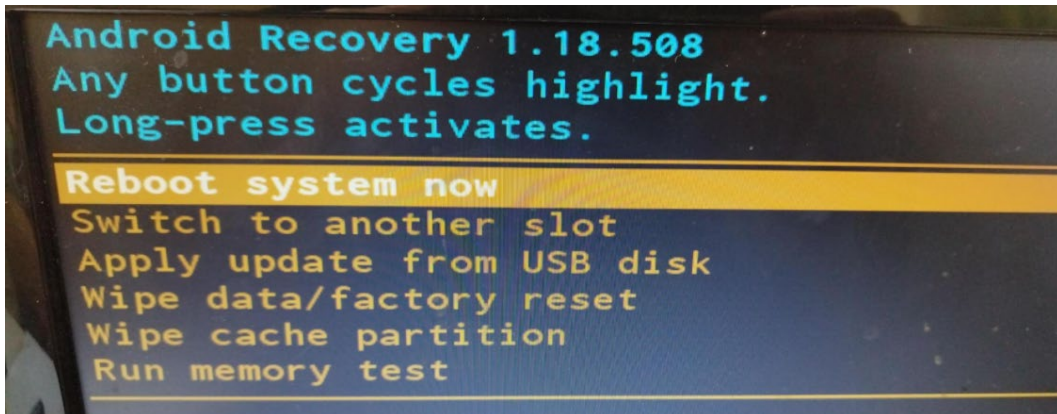

- 7. Select the **Apply update from USB disk** option and then choose the correct firmware image from the disk.

International Headquarters

1 Hayarden Street,
Airport City
Lod 7019900, Israel
Tel: +972-3-976-4000
Fax: +972-3-976-4040

AudioCodes Inc.

80 Kingsbridge Rd.,
Piscataway, NJ 08854, USA
Tel: +1-732-469-0880
Fax: +1-732-469-2298

Contact us: <https://www.audiocodes.com/corporate/offices-worldwide>

Website: <https://www.audiocodes.com/>

©2023 AudioCodes Ltd. All rights reserved. AudioCodes, AC, HD VoIP, HD VoIP Sounds Better, IPmedia, Mediant, MediaPack, What's Inside Matters, OSN, SmartTAP, User Management Pack, VMAS, VolPerfect, VolPerfectHD, Your Gateway To VoIP, 3GX, VocaNom, AudioCodes One Voice, AudioCodes Meeting Insights, and AudioCodes Room Experience are trademarks or registered trademarks of AudioCodes Limited. All other products or trademarks are property of their respective owners. Product specifications are subject to change without notice.

Document #: LTRT-09972