



Scan for full manual

MTX3 Modular Matrix Card Installation Quick Start Guide

This guide helps you install the MTX3 Modular Matrix Card.

Step 1: Check what's in the box

- ✓ MTX3 Modular Matrix Card

Step 2: Get to know your Modular Matrix Card

The attached card mounts in one of the slots on the rear of the chassis. Matrix cards are installed horizontally or vertically (chassis-dependent) in any card slot.




Input and output cards may be mounted in any slot.

Step 3: Install a matrix card

To install a matrix card to the MTX3 Modular Matrix Card (as shown in the example below):

1. Power off the machine and all devices connected to it.
2. Using a Phillips screwdriver, loosen the screws at the top and bottom (or sideways) of a blank plate.
3. Remove the blank plate from the slot and store it for possible future use.
4. Remove the new card from its shipping box and anti-ESD bag.
5. Holding the card by the lower handle, align the card with the plastic guide rails (vertical or horizontal).
6. Slide the card into the chassis until the front of the card contacts the connector inside the chassis.
7. Press the card firmly into the slot until the connector plate is flush with the rear panel of the chassis and the connector is fully seated.
8. Using a Phillips screwdriver, tighten the retaining screws at the top and bottom of the card to secure it to the chassis.
9. Power on the machine and **follow the procedure in the user manual to configure the new card.**
10. Power on the peripheral devices.

-  For optimum range and performance use the recommended Kramer cables available at www.kramerav.com. Using third-party cables may cause damage!

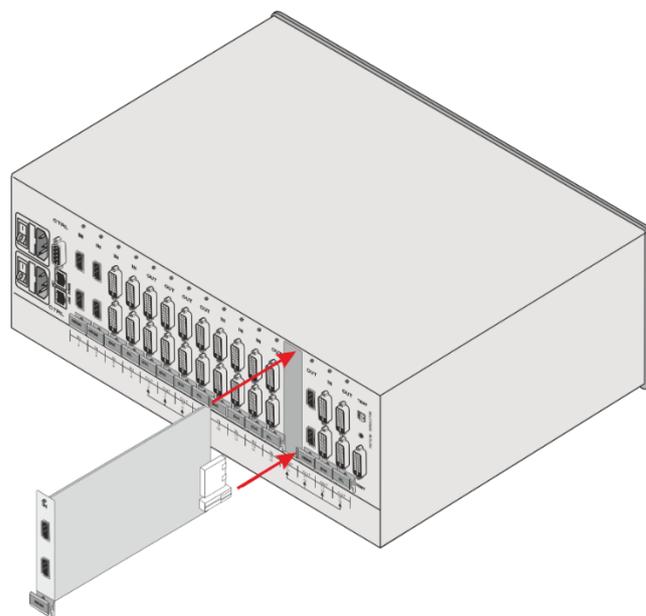

Safety Instructions



- Caution:** There are no operator serviceable parts inside the unit.
- Warning:** Use only the power cord that is supplied with the unit.
- Warning:** Do not open the unit. High voltages can cause electrical shock! Servicing by qualified personnel only.
- Warning:** Disconnect the power and unplug the unit from the wall before installing.